

Instruction book



SOLIFER

2006

Your Solifer

We would like to congratulate you on *your new Solifer!*
Before starting to use the caravan you should read through this instruction manual. The manual contains the information, tips and advice you need in order to look after and make best use of your *Solifer*.

Just like cars, caravans require regular servicing. You must therefore ask your dealer or workshop approved by **SoliferPolar AB** to carry out the annual basic and maintenance services.

We hope that you will get a great deal of pleasure and use from your *Solifer* for many years.

Good luck!

SOLIFER

SoliferPolar AB, SE-917 82 Dorotea, Sweden. Tel. +46 (0)942-520 00

SoliferPolar AB reserves the right to make alterations to parts in the design. Minor deviations from the information contained in the instruction manual can therefore occur in exceptional cases.

This instruction manual may not be duplicated or copied in whole or in part without **SoliferPolar AB's** permission. Legal action can be brought for breaches of copyright.

COPYRIGHT (c) SoliferPolar AB 2005

Contents

Tips and advice	4	LPG leak test.....	46
General	5	Checking leak indicator	47
Caravan information	5	Checking LPG system	47
Dimensions and weight	6	New/newly filled LPG bottles	47
Before driving	11	Replacing LPG bottle	47
Loading the caravan	11	Cooker	48
Pitching	13	Lighting the cooker	48
When driving.....	13	Oven	49
Pitching for an extended period	14	LPG oven.....	49
Chassis	15	Microwave oven.....	49
Stabiliser legs	15	Heating system	50
Tyres	15	LPG boiler	50
In the event of a puncture.....	15	Electric heater.....	50
Lubrication.....	16	Winter connection function (Mountain connection).....	52
Brakes	16	External start (Remote connection).....	52
Body	18	Underfloor heating	52
Door	18	Fan in washroom.....	52
Windows.....	18	Filling with fluid	53
Washing.....	19	Bleeding the heating system.....	53
Ventilation system.....	19	Fault-tracing.....	54
LPG compartment	21	Refrigerator	56
Cargo compartment	21	Ventilation	56
Fixtures and fittings	22	Covers	56
Cleaning	23	Facts and figures.....	56
Converting the seating area into a bed	23	Using the refrigerator.....	57
Blacking out.....	25	Defrosting	58
Electrical system	27	Cleaning	58
Electrical system 230 V.....	27	Service.....	58
Electrical system 12 V.....	28	Fault-tracing.....	58
Wiring diagram 12 V	30	Water system	59
Battery	31	Filling with fresh water	59
Battery charger	32	Emptying the fresh water	60
Tent service output	32	Cleaning the water tank	60
Kitchen fan.....	32	Drainage system	61
Lighting	33	Emptying the drainage system	61
Changing bulbs	34	Cleaning the drainage tank	62
Installing radio.....	36	Blockage in the drain	62
Caravan Control	37	Cassette toilet	63
Connecting cable TV.....	37	Preparations prior to use.....	64
Control panel, boiler	38	Flushing	65
Control panel function	38	Emptying the waste tank	65
LPG system	45	Winter storage	66
What is LPG	45	Actions in the event of problems.....	66
LPG compartment	45	Cleaning and maintenance.....	66
Suspected LPG leak.....	45	Dealers & service workshops	67
Actions in the event of fire	45		
LPG bottles	45		
Leak indicator	46		
Shut-off valve.....	46		

Tips and advice

As the owner and user of the caravan, there are many things you need to think about. Below is a short compilation of the most common questions people may have before using the caravan.

Loading the caravan

- To achieve the optimum driving properties, it is important to distribute the load evenly in the caravan. Read more about this in the section *“Loading the caravan”* on page 11.

Pitching for an extended period

- If you are not going to use the caravan for an extended period, there are a number of steps you must take before putting the caravan away. Read more about this in the section *“Pitching for an extended period”* on page 14.

Condensation/misting in the caravan

- Condensation can occur if you bring wet clothes, dogs, etc., into the caravan under certain weather conditions. Ventilation and heating are an effective way of combating condensation on the inside of the windows. Read more about this in the section *“Windows, ventilation”* on page 18.

Washing the caravan

- Never use degreasing agent when washing/cleaning the caravan, as this can damage the seals around windows, roof hatches, etc., with a risk of leaks as a consequence. Read more about washing in the section *“Washing”* on page 19.

Ventilation system

- Fresh air intakes and vents may not be blocked under any circumstances.
- Do not perform any modifications or actions in the ventilation system.
- When you have pitched the caravan, make sure that the fresh air intakes are completely free of snow and anything else that could obstruct circulation. When the caravan is used, dirt and dust collect in the ventilation openings. These must therefore be cleaned at least once a year in order for the ventilation to function properly.
Read more about the ventilation system in the section *“Ventilation system”* on page 19.

Snow on the roof

- In order for the ventilation in the caravan to work, it is important for the vents and roof hatches to be free of snow and ice.
- It is important for the roof to be regularly cleared of snow to ensure that the weight on the roof is not excessive, causing the roof to bend inwards. Ice can also form on the roof when the caravan is heated up, which can also result in excessive weight on the roof.
- Snow can be removed from the roof with a spade or broom. When using a spade, take care to ensure that you do not damage the roof. It is best not to clear the snow all the way down to the roof panel.

- Never try to knock ice away with a spade or broom. This can cause dents in the panels.
- In unfavourable weather conditions in the winter, there is a risk of snow penetrating through the roof hatch's ventilation. You must therefore remember to protect the caravan's fixtures and fittings and its upholstery, particularly when the caravan is due to be pitched for an extended period.

Handling the compartment lid holder

- The LPG compartment is equipped with a holder for the compartment lid. It is important to use this holder in the right way. Read more about this holder in the section *“LPG compartment”* on page 21.

Connecting cable TV

- In caravans with tent service it is possible to connect the caravan to cable TV via the TV aerial input in the tent service output. See the section *“Connecting cable TV”* on page 37.

LPG system

- You are not allowed to drive into petrol stations with the LPG lit. All LPG apparatus must be switched off *before* you pull into the petrol station.
- Test the LPG system with the leak indicator every time it is to be used and whenever you change the bottle. Any faults must be rectified by an expert. Read more about the LPG system in the section *“LPG system”* on page 45.

Winter connection function (Mountain connection)

- If you want to leave the caravan for a while, and want somebody else to start up the heating by connecting the caravan to 230 V, the built-in “winter connection function” can be used. Read more about this in the section *“Winter connection function”* on page 52.

Cleaning water and drainage tank

- After the water and drainage system has been used for a period of time, it may be time to clean the water and drainage tank.
Read more about this in the sections *“Cleaning the water tank”* on page 60, and *“Cleaning the drainage tank”* on page 62.

Before servicing the caravan.

- To facilitate servicing and moisture testing, remove all cushions and personal items from the caravan.

General

Caravan information

Solifer model:
Model year:
Chassis number:
Registration number:
Key number:

In all correspondence with the dealer, it is important to specify the following details:

- Model
- Model year
- Chassis number
- Registration number

This information can be found on the registration or warranty certificate.

Owner:

Name

Address

Telephone

If you sell your Solifer caravan to a new owner, this manual must accompany the caravan.



There are certain things that you have to consider when driving with and using the caravan. Read through this instruction manual before starting to use the caravan. It is particularly important to read these warning boxes, which contain warnings and instructions that have to be taken into consideration when using the caravan. The yellow warning labels outside and inside the caravan also have to be taken into consideration when using the caravan.



Remember that any additional equipment that is installed reduces the maximum load inside the caravan. All installation of additional equipment on the exterior of the caravan must be carried out by an authorised

Important

As from 1995 models, the rules have been tightened up as regards e.g. the certification of LPG and ventilation systems. The documents that are supplied with the caravan must also correspond with the type-inspected vehicle.


The following documents must be supplied with the caravan:

- Correct instruction manual.
- Test pressurisation certificate.
- Drawing indicating ventilation openings.
- Declaration of conformity with SÄIFS 2001:2 (Manufacturer's declaration)

NOTE! The above documents **must** also be available at subsequent vehicle inspection tests, as the caravan will otherwise not be approved.


Dimensions and weight

Solifer Artic 480 MHP

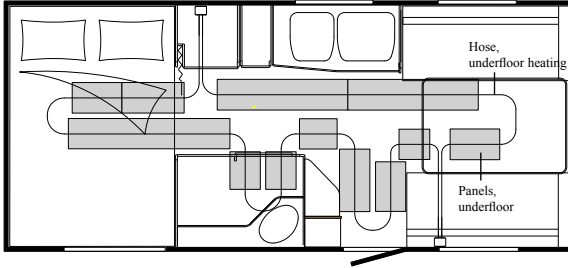


Length	555 cm
Length with drawbar	672 cm
Internal length	488 cm
Width	227 cm
Internal width	211 cm
Height	265 cm
Internal height	195 cm
Living space	10.30 m ²
Service weight (incl. 40 litres water)	1115 kg
Total weight	1150/1250/1300/1350 kg
A-dimension, tent	900 cm

Solifer T1 520

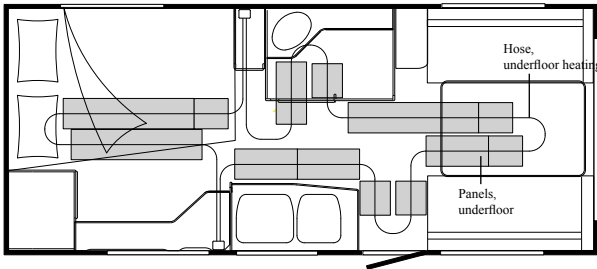


Length	583 cm
Length with drawbar	689 cm
Internal length	516 cm
Width	227 cm
Internal width	211 cm
Height	265 cm
Internal height	195 cm
Living space	10.89 m ²
Service weight (incl. 40 litres water)	1115 kg
Total weight	1200/1250/1300/1350 kg
A-dimension, tent	930 cm

Solifer Artic 520 MH

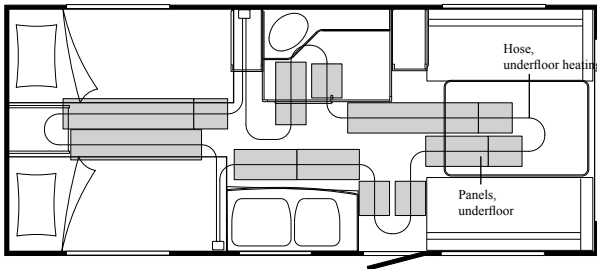


Length	583 cm
Length with drawbar	689 cm
Internal length	516 cm
Width	227 cm
Internal width	211 cm
Height	265 cm
Internal height	195 cm
Living space	10.89 m ²
Service weight (incl. 40 litres water)	1115 kg
Total weight	1200/1250/1300/1350 kg
A-dimension, tent	930 cm

Solifer Artic 520 TBR

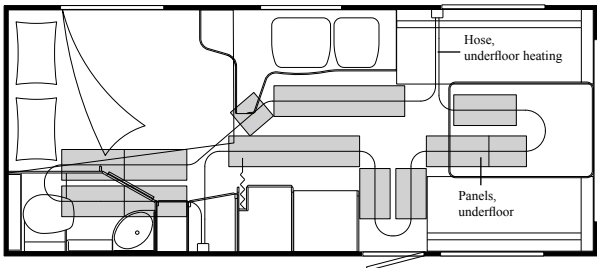


Length	583 cm
Length with drawbar	689 cm
Internal length	516 cm
Width	227 cm
Internal width	211 cm
Height	265 cm
Internal height	195 cm
Living space	10.89 m ²
Service weight (incl. 40 litres water)	1115 kg
Total weight	1200/1250/1300/1350 kg
A-dimension, tent	930 cm

Solifer Artic 560 MH

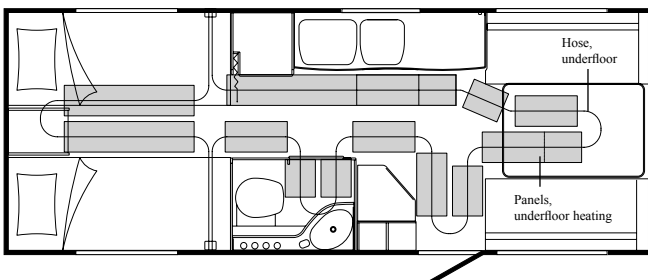


Length	639 cm
Length with drawbar	744 cm
Internal length	572 cm
Width	227 cm
Internal width	211 cm
Height	265 cm
Internal height	195 cm
Living space	12.07 m ²
Service weight (incl. 40 litres water)	1240 kg
Total weight	1300/1400/1450/1500 kg
A-dimension, tent	995 cm

Solifer Artic 560 MHC

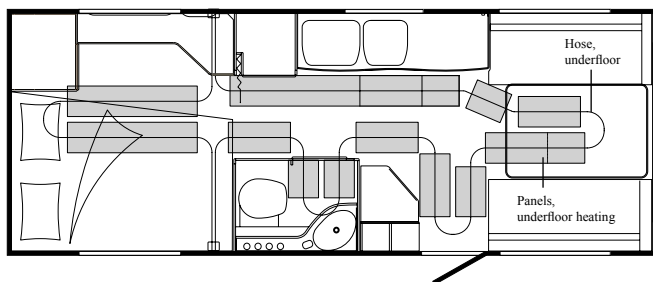


Length	639 cm
Length with drawbar	744 cm
Internal length	572 cm
Width	227 cm
Internal width	211 cm
Height	265 cm
Internal height	195 cm
Living space	12.07 m ²
Service weight (incl. 40 litres water)	1240 kg
Total weight	1300/1400/1450/1500 kg
A-dimension, tent	995 cm

Solifer Artic 560 NS

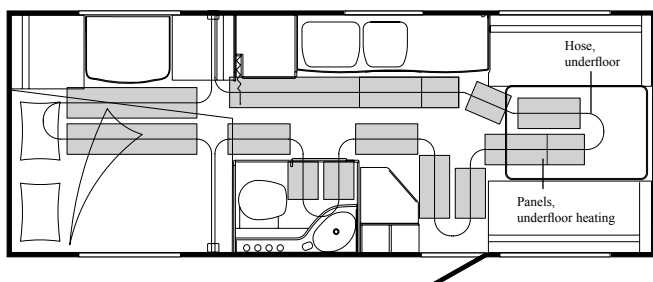


Length	639 cm
Length with drawbar	744 cm
Internal length	572 cm
Width	227 cm
Internal width	211 cm
Height	265 cm
Internal height	195 cm
Living space	12.07 m ²
Service weight (incl. 40 litres water)	1240 kg
Total weight	1300/1400/1450/1500 kg
A-dimension, tent	995 cm

Solifer Finlandia 560 MH

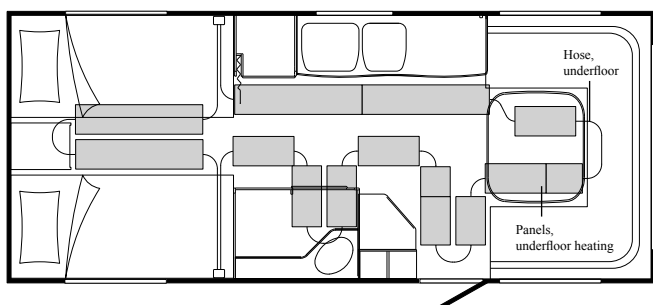


Length	639 cm
Length with drawbar	744 cm
Internal length	572 cm
Width	252 cm
Internal width	236 cm
Height	265 cm
Internal height	195 cm
Living space	13.50 m ²
Service weight (incl. 40 litres water)	1290 kg
Total weight	1420/1450/1500 kg
A-dimension, tent	995 cm

Solifer Finlandia 560 LK

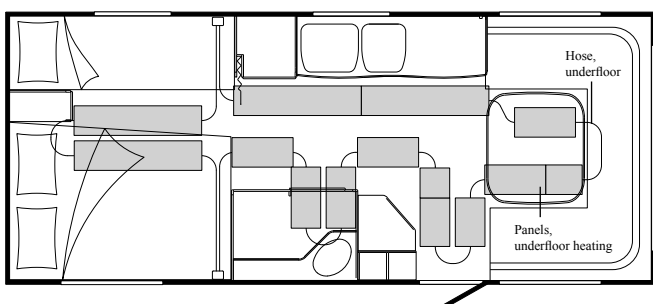


Length	639 cm
Length with drawbar	744 cm
Internal length	572 cm
Width	252 cm
Internal width	236 cm
Height	265 cm
Internal height	195 cm
Living space	13.50 m ²
Service weight (incl. 40 litres water)	1290 kg
Total weight	1420/1450/1500 kg
A-dimension, tent	995 cm

Solifer Finlandia 560 MHC

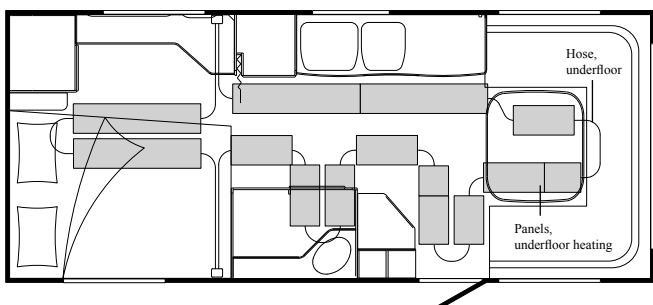


Length	639 cm
Length with drawbar	744 cm
Internal length	572 cm
Width	252 cm
Internal width	236 cm
Height	265 cm
Internal height	195 cm
Living space	13.50 m ²
Service weight (incl. 40 litres water)	1290 kg
Total weight	1420/1450/1500 kg
A-dimension, tent	995 cm

Solifer Finlandia 560 NS

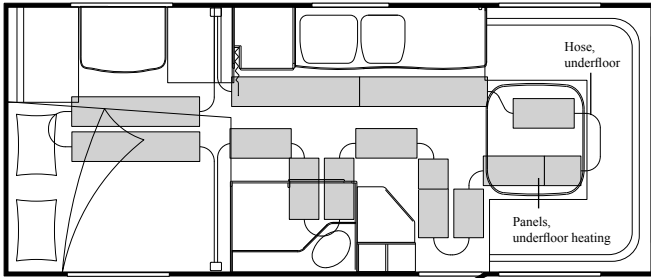


Length	639 cm
Length with drawbar	744 cm
Internal length	572 cm
Width	252 cm
Internal width	236 cm
Height	265 cm
Internal height	195 cm
Living space	13.50 m ²
Service weight (incl. 40 litres water)	1290 kg
Total weight	1420/1450/1500 kg
A-dimension, tent	995 cm

Solifer Finlandia 560 TBR

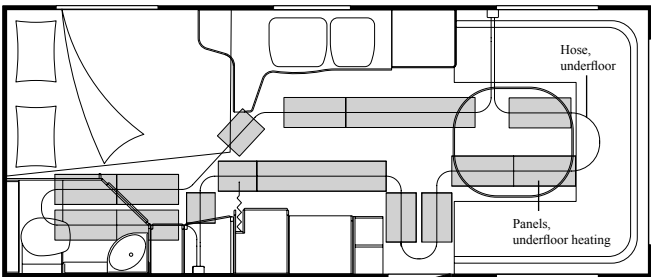


Length	639 cm
Length with drawbar	744 cm
Internal length	572 cm
Width	252 cm
Internal width	236 cm
Height	265 cm
Internal height	195 cm
Living space	13.50 m ²
Service weight (incl. 40 litres water)	1290 kg
Total weight	1420/1450/1500 kg
A-dimension, tent	995 cm

Solifer Finlandia 600 MH

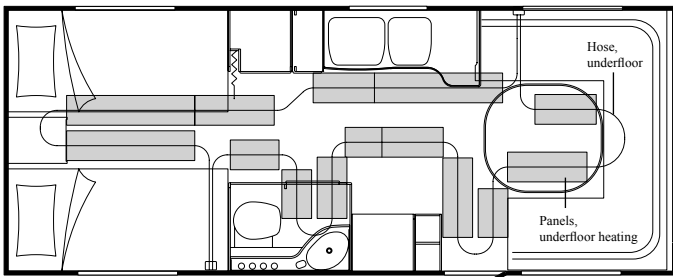


Length	667 cm
Length with drawbar	785 cm
Internal length	600 cm
Width	252 cm
Internal width	236 cm
Height	265 cm
Internal height	195 cm
Living space	14.16 m ²
Service weight (incl. 40 litres water)	1330 kg
Total weight	1400/1500/1550/1600 kg
A-dimension, tent	1020 cm

Solifer Finlandia 600 LK

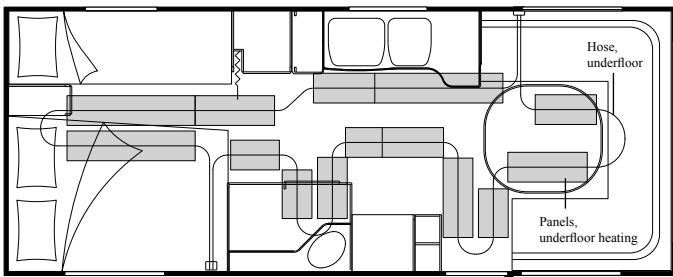


Length	667 cm
Length with drawbar	785 cm
Internal length	600 cm
Width	252 cm
Internal width	236 cm
Height	265 cm
Internal height	195 cm
Living space	14.16 m ²
Service weight (incl. 40 litres water)	1330 kg
Total weight	1400/1500/1550/1600 kg
A-dimension, tent	1020 cm

Solifer Finlandia 600 MHC

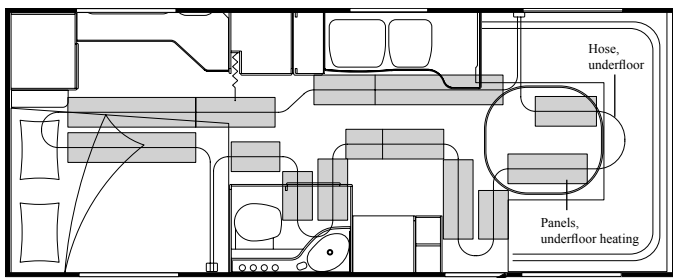


Length	667 cm
Length with drawbar	785 cm
Internal length	600 cm
Width	252 cm
Internal width	236 cm
Height	265 cm
Internal height	195 cm
Living space	14.16 m ²
Service weight (incl. 40 litres water)	1330 kg
Total weight	1400/1500/1550/1600 kg
A-dimension, tent	1020 cm

Solifer Finlandia 600 NS

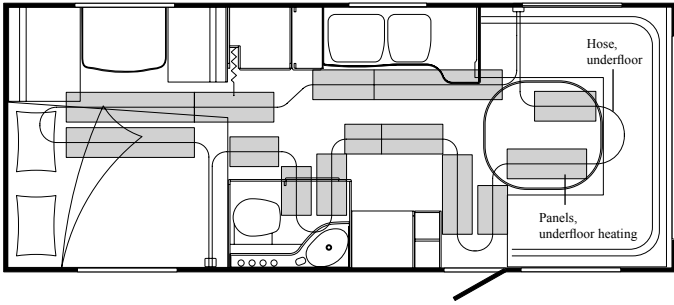


Length	667 cm
Length with drawbar	785 cm
Internal length	600 cm
Width	252 cm
Internal width	236 cm
Height	265 cm
Internal height	195 cm
Living space	14.16 m ²
Service weight (incl. 40 litres water)	1330 kg
Total weight	1400/1500/1550/1600 kg
A-dimension, tent	1020 cm

Solifer Finlandia 600 TBR

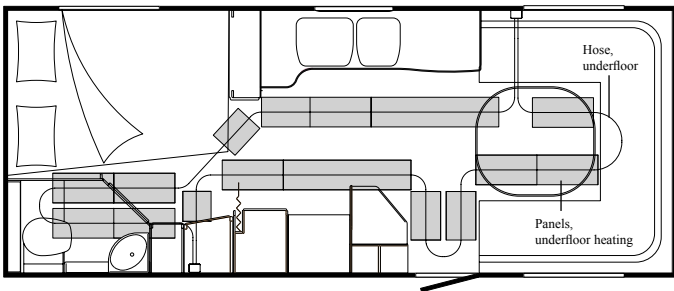


Length	667 cm
Length with drawbar	785 cm
Internal length	600 cm
Width	252 cm
Internal width	236 cm
Height	265 cm
Internal height	195 cm
Living space	14.16 m ²
Service weight (incl. 40 litres water)	1330 kg
Total weight	1400/1500/1550/1600 kg
A-dimension, tent	1020 cm

Solifer Finlandia 630 MH

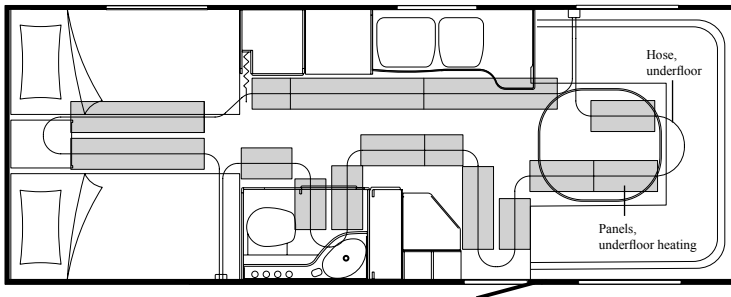


Length	695 cm
Length with drawbar	810 cm
Internal length	628 cm
Width	252 cm
Internal width	236 cm
Height	265 cm
Internal height	195 cm
Living space	14.78 m ²
Service weight (incl. 40 litres water)	1475 kg
Total weight	1650/1750/1800 kg
A-dimension, tent	1055 cm

Solifer Finlandia 630 LK

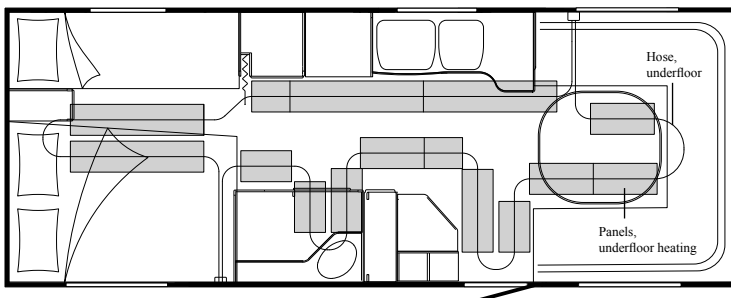


Length	695 cm
Length with drawbar	810 cm
Internal length	628 cm
Width	252 cm
Internal width	236 cm
Height	265 cm
Internal height	195 cm
Living space	14.78 m ²
Service weight (incl. 40 litres water)	1475 kg
Total weight	1650/1750/1800 kg
A-dimension, tent	1055 cm

Solifer Finlandia 630 MHC

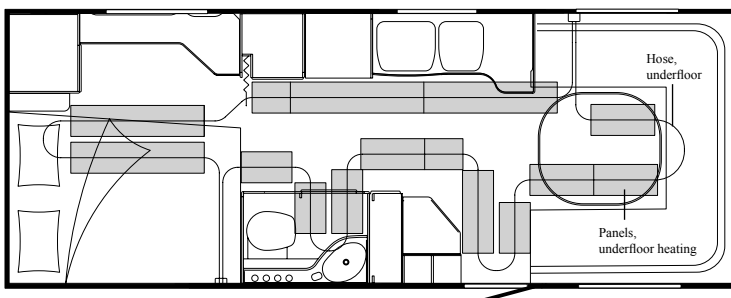


Length	695 cm
Length with drawbar	810 cm
Internal length	628 cm
Width	252 cm
Internal width	236 cm
Height	265 cm
Internal height	195 cm
Living space	14.78 m ²
Service weight (incl. 40 litres water)	1475 kg
Total weight	1650/1750/1800 kg
A-dimension, tent	1055 cm

Solifer Finlandia 630 NS

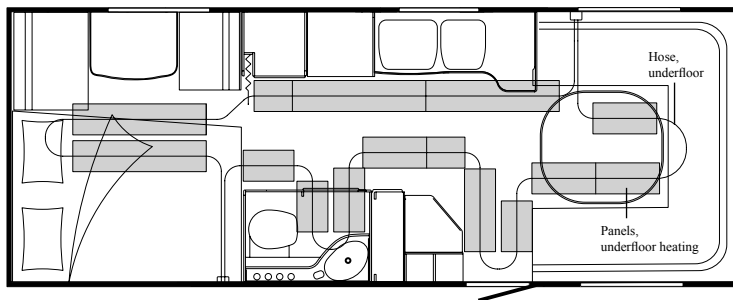

Length	695 cm
Length with drawbar	810 cm
Internal length	628 cm
Width	252 cm
Internal width	236 cm
Height	265 cm
Internal height	195 cm
Living space	14.78 m²
Service weight (incl. 40 litres water)	1475 kg
Total weight	1650/1750/1800 kg
A-dimension, tent	1055 cm

Solifer Finlandia 630 TBX

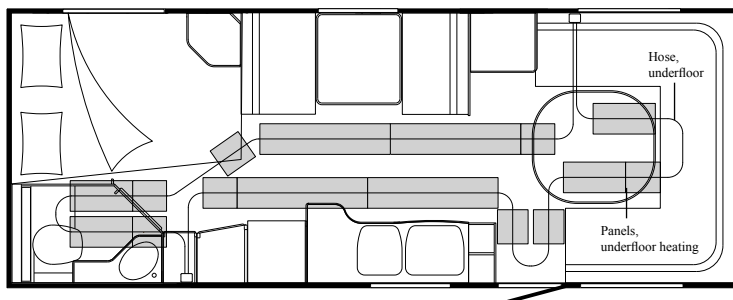

Length	695 cm
Length with drawbar	810 cm
Internal length	628 cm
Width	252 cm
Internal width	236 cm
Height	265 cm
Internal height	195 cm
Living space	14.78 m²
Service weight (incl. 40 litres water)	1475 kg
Total weight	1650/1750/1800 kg
A-dimension, tent	1055 cm


Loading the caravan


When loading the caravan, take into consideration the total weight and service weight of the caravan. The weight of the load plus the service weight (the weight of the empty caravan including 40 litres of water) may not exceed the total weight. The total and service weights are specified on the registration certificate.


- Position the heavier cargo in the middle of the caravan, above the wheel axle. Too much cargo in front of the axles generates an abnormal load on the car. Too much cargo behind the axles makes the caravan tail-heavy.
- Distribute the cargo evenly in the caravan. Load more or less equally on the right and left, and more or less equally front and rear.
- Do not overload the LPG compartment, as this can generate excessive tow hitch pressure. The tow hitch pressure is the pressure resting on the car's tow hitch.

If the tow hitch pressure is too low, the caravan will become unstable, resulting in impaired driving characteristics. If the tow hitch pressure is too high, the steering of the car can become uncertain. The tow hitch pressure decreases at higher speeds.

The recommended tow hitch pressure is 75-95 kg, unless otherwise indicated in the car's instructions.

 Do not overload the caravan. Before loading the caravan, check its total and service weight. These weights are specified on the registration certificate.

 Check that the tow hitch pressure is correct. Initially follow the car's recommendations regarding the tow hitch pressure.


 When you load the LPG compartment, remember that if you are driving in rain, water can penetrate into the compartment. This does not harm the caravan, but it can be unsuitable for the cargo.

Before driving

Perform the following inside the caravan


- Switch off all LPG apparatus. The heating boiler may be switched on when travelling, but must be switched off before driving into a petrol station.
- Put away all loose items from tables, kitchenette and shelves.
- Secure the refrigerator door using the transit safety catch.

- Secure the folding door and the upper bed cupboard using the transit safety catch.
- Close cupboard doors and drawers.
- Close the windows and roof hatches.
- Check that the ventilation shutter in the toilet is closed.
- Take down and lock the TV aerial in place.
- Turn off all lamps.
- Put the pillar table and the wall table in the bed position. (see "*Converting the seating area into a bed*" on page 23).
- If the caravan has an LPG oven, make sure that the oven's door catch is engaged.

 You are not allowed to drive into petrol stations with the LPG apparatus lit.

Perform the following outside the caravan


- Bring in all outdoor items, tent pins, chairs, etc.
- Empty the waste water sack and place it in the LPG compartment.
- Unplug the 230 V electrical cable from the pitch's mains output, as well as the connector in the caravan's input, and place it in the LPG compartment.
- Check that all external hatches and lids are locked.
- Clean around the caravan.
- Unhook the footstep and place it in the LPG compartment.
- Lock the outer door.
- In cold weather conditions or in snow, install the covers over the refrigerator ventilation, see page 56.
- Wind up the stabiliser legs.
- If you are going to drive in the winter and your car has studded tyres, your caravan must also be fitted with studded tyres.

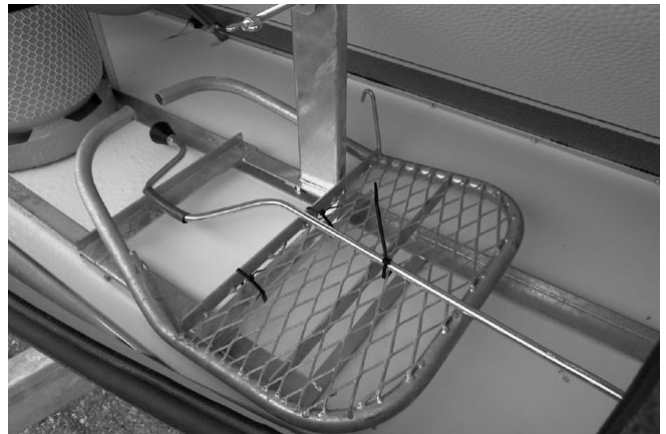

NOTE! Don't forget to take in the footstep.

Coupling to the car


1. Wind up all the stabiliser legs on the caravan.

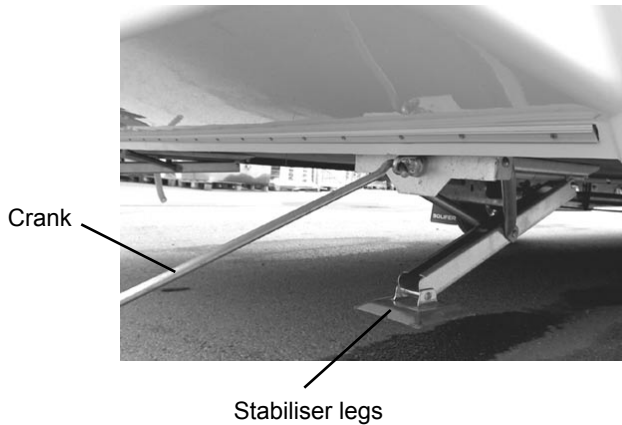


2. Reverse the car towards the ball joint on the drawbar and lift the handle on the ball joint. The ball joint is then locked in the open position.
3. Disengage the parking brake. Take care if the caravan is on a slope.

△ To avoid impact or crushing injuries to your hands when winding the support wheel up or down, the handbrake lever should be moved as far back as possible. For the same reason, the support wheel's crank should be positioned as shown in the picture to ensure it is not in the way when applying or disengaging the handbrake.


4. Grip the handle on the ball joint and lift the drawbar by winding down the support wheel. Then lower the ball joint over the car's towing ball by winding up the support wheel. When the towing ball is pressing against the ball joint, push the locking handle down. When it is in the correct position, it will lock automatically. Fig. 1 shows the handle in the correct position.

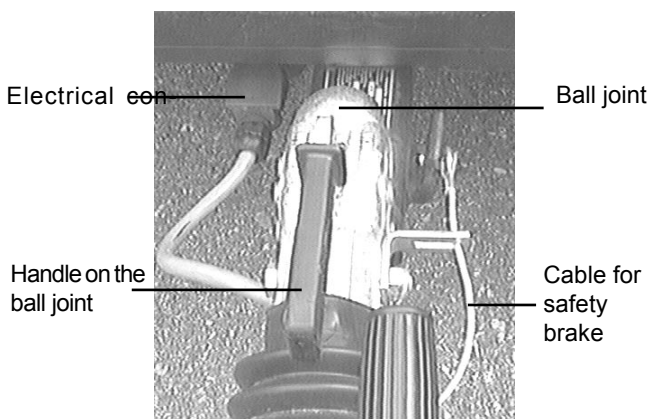

5. Check that the ball has entered the hitch, as shown in fig. 1. The ball must not appear as shown in fig. 2.

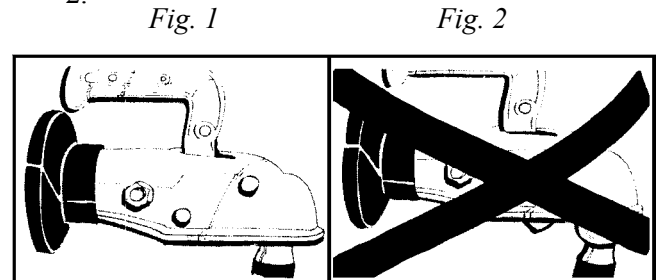

6. Connect the cable for the safety brake on the car's tow hitch. There is a hole for the coupling hook on the metal plate next to the tow hitch.
7. Connect the electrical connector to the car. The electrical connector from the caravan to the car is stored in a loop in the drawbar and can therefore be extended if necessary.
8. Make sure that the cable does not drag on the ground.
9. Wind up the support wheel and raise the support wheel leg as far as possible. Lock the support wheel leg securely in the raised position with the locking knob.
10. Check that the air pressure in the tyres is correct. See page 15.
11. Check that the air pressure in the towing car's rear tyres is 30 kPa (0.3 kp/cm²) higher than normal.

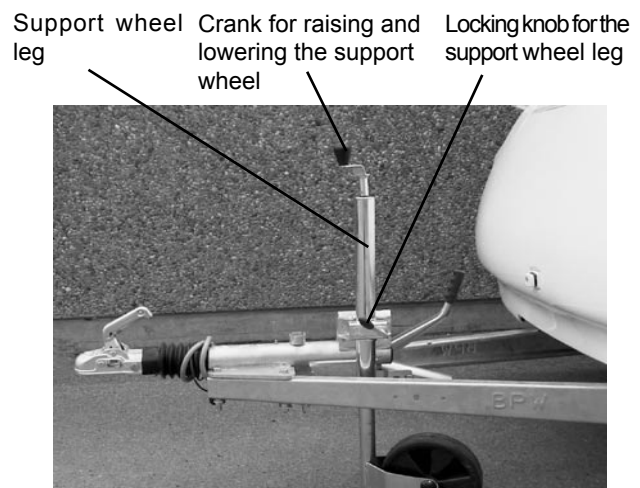

12. Check that all the road lights on the caravan are working.
13. Check that the car's door mirrors are correctly adjusted.

△ Don't forget to wind up the support wheel and lock it securely in place. Make sure that the support wheel is not pressing against the brake rod.

△ Check that the caravan and the car are coupled together properly.

Safety coupling WS 3000

Some caravans are equipped with a safety coupling. The coupling is equipped with friction linings, which means that the caravan is more stable with less risk of lateral movements when travelling. The linings are easy to replace. To protect the caravan against theft, an anti-theft lock that fits the coupling can be purchased.

It is important that the towing ball on the car is free of grease, clean and not painted. Grease on the ball reduces the friction and consequently impairs function. Dirt and paint cling to the linings and can result in noise.

The coupling's handle has 3 different positions (see picture below).

Position 1 = Coupling open


Position 2 = Coupling closed, stabiliser disconnected


Position 3 = Coupling closed, stabiliser activated



Coupling to the car

1. Perform points 1-3 on the previous page.
2. Grip the handle on the ball joint and lift the drawbar by winding down the support wheel (the drawbar may not be lifted using the handle). Then lower the ball joint over the car's towing ball by winding up the support wheel. When the towing ball is pressing against the ball joint, push the locking handle down. When it is in the correct position, it will lock automatically. Position 2 (see picture above) shows the handle in the correct position. To activate the stabiliser function, press the handle down to position 3.
3. Continue with points 5-13 on the previous page.

 The ball joint's handle must not be used for lifting etc. This can cause damage to internal parts.

 The ball must be free of grease, dirt and paint in order for the coupling to work properly.

When driving

Consider the following when driving:


- Max. speed 80 km/h.
- It is prohibited to remain in the caravan when driving.
- Start, drive and brake smoothly, avoiding jerky movements. This safeguards both the caravan and the car, and reduces fuel consumption.
- Keep to the side and reduce your speed when you are being overtaken.
- Keep checking behind you. If a long line of traffic has gathered behind you, pull in to the nearest parking area and allow the faster traffic to get past.
- Remember that you are driving a heavy combination - this means longer braking distances and longer acceleration distances.
- Pull out properly when you are overtaking somebody else.
- Be prepared for air-waves when you meet large vehicles - parry in time.
- Take it easy!

Exhaust fumes

The car's exhaust fumes can enter the caravan through the ventilation openings. These openings may not be closed. Diesel exhaust fumes and soot in particular can be difficult to clear out of the caravan.

If you have a diesel car, you can try to angle the exhaust pipe so that fumes do not enter the caravan.

You can also try installing a plate or a spoiler in front of the ventilation openings on the caravan.

 Fresh air intakes and vents must not be blocked under any circumstances.

Pitching

1. Use the car to position the caravan in the pitch.
2. Apply the parking brake if the caravan is on a slope. Remember to check that the support wheel's crank is not in the way of the handbrake lever (see picture on page 12), before applying the handbrake.
3. Lower the support wheel leg and lock it in position, and wind down the support wheel.
4. First lift up the handle on the ball joint, then move it forwards to release the catch locking the ball joint. Then raise the ball joint straight up from the towing ball by winding down the support wheel.
5. Disconnect the safety cable.
6. Disconnect the 12 V electrical connector from the car, and lay the cable on the drawbar with the connector pointing down to prevent water or snow entering the connector.
7. Drive the car away.
8. Adjust the caravan into a horizontal position (lengthways) using the support wheel's crank.
9. Wind down all the stabiliser legs. Make sure that the caravan is horizontal.

△ When you have pitched the caravan, make sure that the fresh air intakes are completely free of snow and anything else that could obstruct circulation.

10. Take out the footstep and secure the hooks in the holders under the outer door.




Holder, footstep

11. If you have access to a 230 V mains current output, connect the cable to the output and the caravan's input. Input, 230 V with tent service



12. Check that the ventilation openings are not blocked with dirt, snow, etc.
13. Set up the drain. In caravans without a drainage tank, connect the waste water sack to the outer cone (see picture below) and set the valve in the open position. In caravans with a drainage tank, the valve must be in the closed position unless the waste water sack is connected to the outer cone. When emptying, connect the waste water sack to the outer cone and set the valve in the open position. Read more about "**Emptying the drainage system**" on page 61.

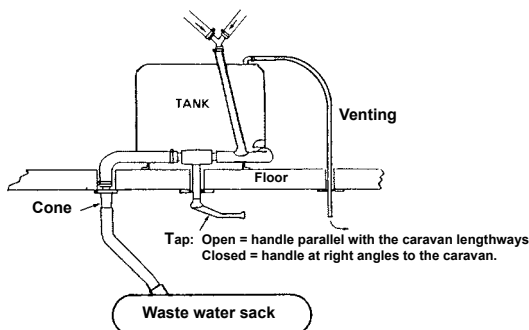

14. If the caravan has to stand on a road, you should light the hazard lights. The switch is located on the 12 V control panel.

△ Never pitch the caravan on a road without putting out the warning triangle.

Pitching for an extended period

- When you are not going to use the caravan for an extended period, you should place it in a protected, lockable location if possible. The caravan should ideally be on a level surface so that there is no need to use the parking brake. Place blocks in front of the wheels.
- Remove all food products.
- Clean the refrigerator in accordance with the instructions on page 58.
- Remove the cushions, and store them in a warm, dry place.
- Empty the water system in accordance with the instructions on page 53.
- Empty and clean the drainage system in accordance with the instructions on pages 61 and 62.
- Empty and clean the toilet in accordance with the instructions on pages 65 and 66.
- Trickle charge the battery and store it in a cool location.
- Remove the relief valve from the LPG bottle.
- Place the LPG bottles in a protected, fire-proof location. Remember that only two LPG bottles may be stored indoors in the same location. This means e.g. that when two caravans are standing in the same storage area, they may only contain two LPG bottles. It is necessary to apply to the fire authorities for a permit to store more than two bottles.
- Leave cupboard and wardrobe doors slightly ajar, the bed cover up and the drawers slightly pulled out. Also leave the refrigerator door ajar after cleaning it, to prevent unpleasant smells.
- Use a moisture absorber (such as "Torrboll") to eliminate moisture in the caravan.
- Lubricate the support legs and wind them down to reduce the load on the wheels. Store the crank for the support legs in a different location - this makes it more difficult to steal the caravan.
- Cover the overrun mechanism with plastic or a drawbar cover.
- Do not place the spare wheel directly on the floor covering inside the caravan. The rubber from the tyre can make marks on the floor covering that cannot be removed. You should therefore lay e.g. a mat on the floor first.
- Never cover the caravan with a tarpaulin or similar, as this prevents ventilation in the caravan.

△ A dry, clean, well-ventilated caravan remains attractive and valuable.

Chassis

The caravans have a chassis of strong structural members made of galvanised steel.


The wheel housings are made of plastic.

The wheel axle has torsion suspension and telescopic shock absorbers.

The chassis and drawbar are designed to be coupled to a private car, with the suspension characteristics it possesses. SoliferPolar AB accepts no responsibility if the caravan is coupled to a vehicle whose suspension is too rigid, such as lorries, buses and some older jeeps. Modern 4-wheel drive vehicles with suspension similar to that used in private cars can be used to tow the caravans, however.

Stabiliser legs

Stabiliser legs are installed at the front and rear of the caravan. The stabiliser legs are wound up and down using the crank located in the LPG compartment.

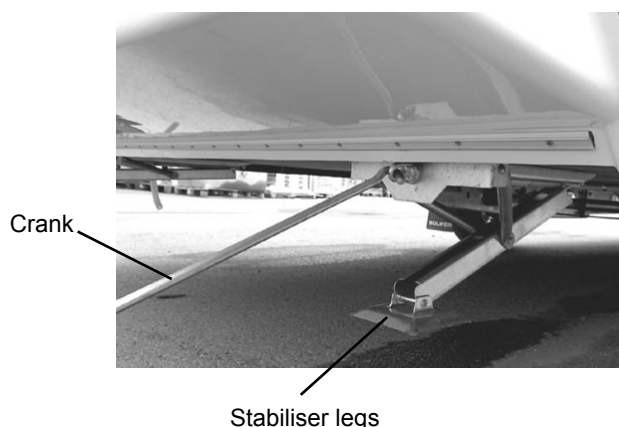

Tyres

Facts and figures

Tyres

Caravan model	Dimensions		Tyre pressure
480	185 R x 14C8	steel radial	max 450 kPa (4.5 kp/cm ²)
520	185 R x 14C8	steel radial	max 450 kPa (4.5 kp/cm ²)
560	185 R x 14C8	“	max 450 kPa (4.5 kp/cm ²)
600	185 R x 14C8	“	max 450 kPa (4.5 kp/cm ²)
630	175/70 R x 13	“	max 270 kPa (2.7 kp/cm ²)

Tightening torque for the wheel nuts 80-100 Nm (8-10 kpm)

△ Check the air pressure in the tyres regularly in order to avoid unnecessary tyre wear and impaired driving characteristics.

SoliferPolar AB accepts no liability for any consequences if other tyre dimensions or tyre designs are used.

Friction tyres on the caravan may be used both on summer and winter surfaces, which is not the case with studded tyres. In order for the friction tyres to be approved for winter road surfaces, they must be marked with M + S, M.S. or M&S. The following tyre combinations are approved:

- If the towing car has studded tyres, the caravan must have studded tyres.
- If the towing car has friction tyres, the caravan must have friction tyres or studded tyres.
- If the towing car has summer tyres, the caravan must have friction tyres or summer tyres.

In the event of a puncture

1. Apply the parking brake.
2. Undo the wheel nuts a little, but do not remove them.



3. Lift the caravan using the jack at the chassis member (see picture). The caravan's support legs must not be used as jacks. Afterwards, secure with axle stands.


△ Always secure the caravan with axle stands before changing a wheel or commencing other work under the caravan.

4. Unscrew the wheel nuts and change the wheel.
5. Tighten the wheel nuts so that the wheel is securely mounted, lower the jack and then post-tighten the wheel nuts crosswise.


△ Always use wheel nuts that are intended for the type of rim being used.

Lubrication

1. Clean and lubricate the moving parts on the ball joint and in the coupling housing approximately once a month.

 Poorly cleaned and poorly lubricated couplings can impair the locking of the ball joint, resulting in the loss of the caravan in the worst case scenario.

2. Lubricate the support wheel and the support wheel leg with oil approximately once a month or after driving around 2,000 km. Remove the support wheel and lubricate the screw threads with grease approximately once a year.
3. Lubricate the overrun mechanism with chassis grease 3-4 times/year. (2 x grease nipples)
4. Lubricate the parking brake lever's moving parts with oil approximately once a month or after driving around 2,000 km.
5. Lubricate the four stabiliser legs approximately once a month or after driving around 2,000 km. Clean the stabiliser legs of gravel and old grease and lubricate the threaded screw with thin oil approximately once a year.

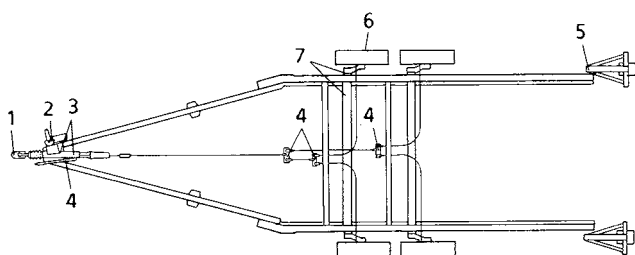


6. The wheel bearings are pre-lubricated and adjusted in the factory. Brake drums may only be dismantled at an authorised workshop.
7. Lubricate the axles with chassis grease at least twice a year depending on the distance driven. (8 x grease nipples)

Brakes

The brake system is mechanical and principally comprises an overrun mechanism, brake rod with sleeve tensioning screw, brake cable and wheel brakes. The system has three functions: driving brake, parking brake and safety brake.

The driving brake is an overrun brake with automatic reverse. When you brake with the car, the overrun brake is compressed by the weight of the caravan, and the caravan is simultaneously braked.

The parking brake is used when parking and pitching the caravan.

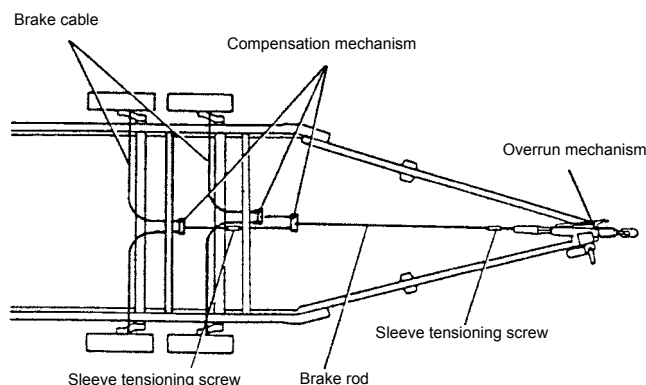

The safety brake is deployed by the cable that is secured to the car's tow hitch. In the event of the caravan becoming detached from the car's tow hitch, the caravan will brake.


Adjusting the brakes

If the braking effect is unsatisfactory and the hand brake or overrun mechanism has too much play, the brakes must be adjusted. Under no circumstances may adjustment of the brake rod's adjustment component eliminate the play. The adjustment of the brakes requires accuracy and should be performed at an authorised workshop.



Adjuster nut

The wheels should be hanging free when adjusting the brakes. Check that the handbrake is in the bottom position and that the overrun mechanism is pulled out fully. Using the sleeve tensioning screw, disconnect the brake rod so that it is hanging loose.

 The adjustment of the brakes requires accuracy and expertise, and should ideally be performed by an authorised workshop.


First adjust the brake shoes. Both brake shoes are adjusted using the adjuster nut. Adjust until the wheels can only be turned by hand with difficulty. Then adjust the shoes back until the wheel runs freely again.

NOTE! During the adjustment process, the wheel must always be pointing straight ahead.



Check that all lock nuts are tightened after adjustment.

The brake rod and cable are now tensioned again using the sleeve tensioning screw, although not so tight that a braking effect is generated (check that the wheels run freely).

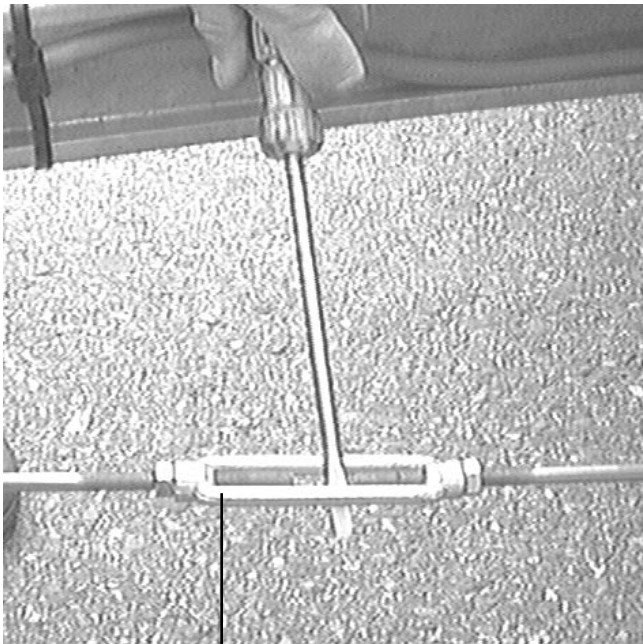

Tensioning sleeve

After adjusting the brake rod, apply the handbrake a couple of times to eliminate any remaining play. Rotate the wheels during the test and perform subsequent adjustment via the tensioning sleeve.

Check that there are 2-5 mm of play at the lever's upper mating surface facing the push rod in the overrun mechanism.

Body

The body is manufactured using a 'sandwich' construction. Walls and gables are made of 0.5 mm aluminium plate, 37 mm insulation (foam rubber) and wallpapered plywood on the inside. The ceiling is built up of equivalent insulation and plywood, but has 0.6 mm aluminium plate. This is bonded together in a vacuum-press to create a sandwich element.


The floor is made up of 5 mm unspliced plywood on the top, 44 mm insulation (foam rubber) and 5 mm unspliced plywood on the underside. The floor is bonded in the same way as the walls, roof and gables. The caravan is fitted with awning mouldings on the gables, and it is also supplied with mouldings for a tent and caravan hoods.

At the front of the body there is a LPG compartment, in which the LPG bottle and other items are stored. A footstep that is hooked into place in the holder below the outer door is included as standard on all models.

Door

The lockable outer door is stopped in the outermost position by a doorstep. The doorstep can also function as a door holder, holding the door in place in the open position.

Lubricate the outer door's hinges to prevent the door seizing.

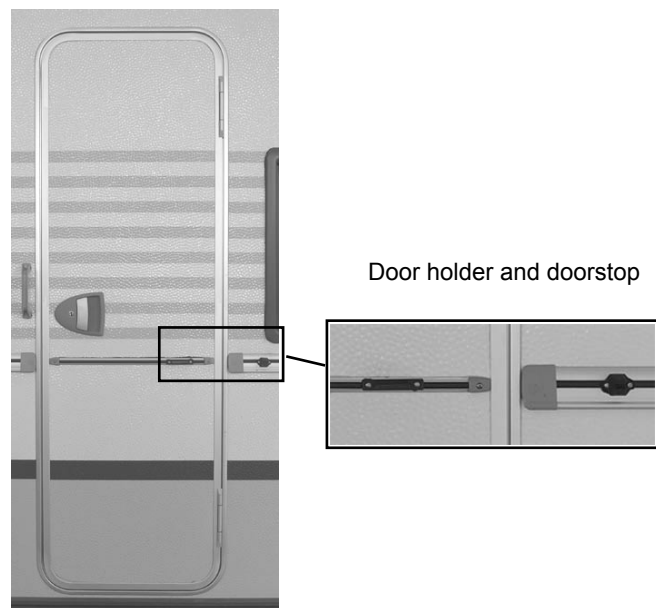


Windows

The number of windows in the caravan varies depending on the model. Most of the windows can be opened. The windows are double-glazed and made of acrylic plastic.

Ventilation

Ventilation is an effective way of combating condensation on the inside of the windows. The air humidity is affected by the ventilation. If cold air is heated up, it is able to absorb the free water (mist).


Condensation comes and goes depending on temperature and air humidity, and it can only be affected within certain limits. The only factor we can control is the indoor temperature. Everything else we have to put up with. In other words, the presence of condensation between the panes of glass does not indicate a fault in your caravan window. However, you may have to wait some time for the condensation to disappear.

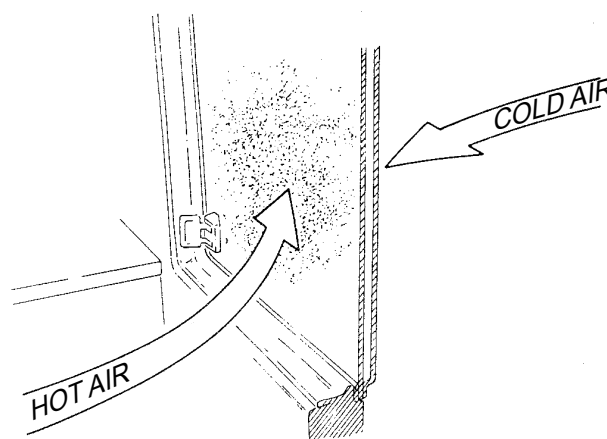

Opening the window

To open the window, all the handles must be opened. To open the handle, press in the lock button on the handle and then turn the handle 90°. It is now possible to fold up the window to the desired position, where it is automatically locked in place with a catch.

To close the window, release the catch by first folding up the window to the maximum opening angle before closing it slowly. The window is then locked with the handle.

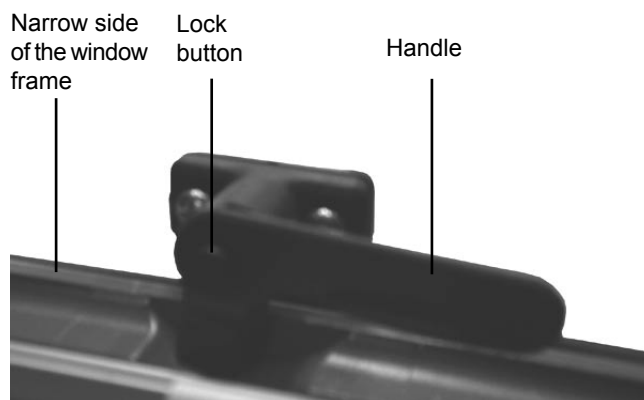

Ventilation position

If you want, the window can be placed in the ventilation position. To place the window in this position, close the handle so that the grip is secured around the narrow side of the window frame.

Washing

Never use degreasing agent when washing/cleaning the caravan, as this can damage the seals around windows, roof hatches, etc. The weather strips must be coated with Vaseline once a year to retain their softness and so provide a proper seal.

NOTE! Do not flush water through the ventilation grilles when washing the caravan. Use the winter hatches.

△ The lacquer should not be waxed until at least 6 months after delivery.

Cleaning the windows

Window

1. Rinse off the windows with plenty of water to remove dust and other loose dirt.
2. Wash using a clean sponge and warm water, with a mild dishwashing detergent. Never use dirty cloths or sponges.
3. Then rinse with clean water and wipe dry using e.g. a chamois leather.

If the windows are still dirty or slightly scratched, see also *“Polishing windows”*.

Asphalt spots and paint spots

Spots of asphalt or similar can be removed using a soft cloth moistened with white spirit. Then repeat the above washing procedure. Spots of paint are removed most easily with steel wool, after which the window must be polished.

△ Never wipe a dirty window with a dry cloth, as the dirt can then easily scratch the glass. Never use solvents or corrosive fluids such as trichloroethylene, thinner or acetone.

△ Never wash the window frames with fluids containing alcohol, e.g. denatured alcohol.

Frame

The window frame offers good resistance to mechanical stresses, but is sensitive to fluids containing alcohol.

This means that the frame must not be washed using e.g. denatured alcohol. Alkaline detergents such as Globex, Fordonstvätt and Autosafe also contain alcohol. It is important for these agents to be mixed in the correct concentration and for the agent to be rinsed off within 10 minutes.

If an alkaline detergent is allowed to act for more than 15 minutes, this softens the lacquer on the frame. In this event, rinse the frame off carefully. The lacquer will then harden again after a few hours.

High-pressure washing is not allowed.

Polishing windows

Small scratches or other surface defects can be removed with manual polishing. Rubbing can be used for polishing. For very fine scratches, a normal car polish is often sufficient. Polymer-type polishes are recommended.

In the event of deeper scratches, the window must be machine-polished. An expert must be hired to perform this work.

Ventilation system

An LPG system requires good ventilation. The ventilation system in the caravan is designed in such a way that there is sufficient access to air even if the door, windows and roof hatches are closed.


The location of the ventilation openings can be seen from the “Ventilation openings” diagram in the document folder that is supplied with the caravan.

△ Fresh air intakes and vents may not be blocked under any circumstances.

△ Do not perform any modifications or actions in the ventilation system.

△ It is dangerous to remain in the caravan when there are naked flames without having sufficient ventilation.

△ When you have pitched the caravan, make sure that the fresh air intakes are completely free of snow and anything else that could obstruct circulation.

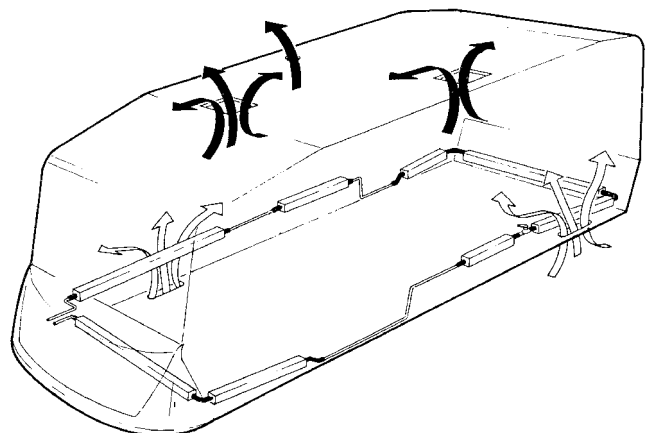

△ Clean dirt and dust from the air inlets under the floor and the ventilators on the roof at least once a year.

The air enters through openings in the floor by the radiators. The used air passes out through the ventilators and the hatches in the roof, ensuring good ventilation even when the roof hatches are closed.

Combustion gases from the refrigerator are routed out through a special vent.


The ventilation system has been designed in accordance with the Swedish National Inspectorate of Explosives and Flammables' instruction regarding combustion apparatus and ventilation systems in caravans.

Consider the following with regard to ventilation:

- Roof hatches and ventilators are designed so that ventilation increases with greater headwinds. This means that it can be difficult to maintain the set temperature in the caravan when driving with the caravan.
- When the caravan is used, dirt and dust collect in the ventilation openings. These must therefore be cleaned at least once a year in order for the ventilation to function properly.

Roof hatches, skylights and ventilators

Roof hatches and watertight ventilators are included in the ventilation system and are intended to release air. All roof hatches can be opened and are fitted with mosquito nets. The roof hatch in the middle of the caravan is also fitted with a blackout curtain.

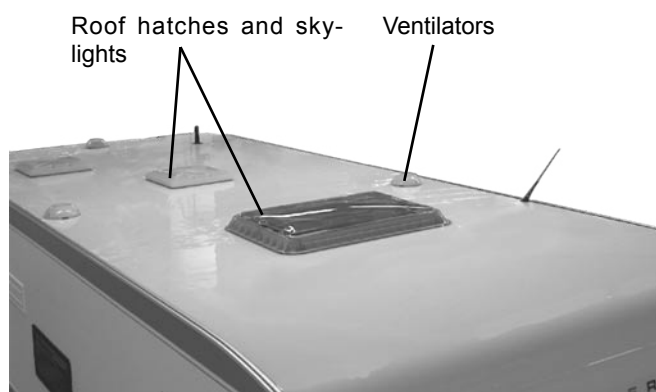

In some caravans, the roof hatch in the middle of the caravan has been replaced with a skylight. The skylight can be opened and is fitted with a mosquito net and a roller-blind, just like the roof hatch. See also the section **“Roller-blind in roof hatch and skylight”** on page 26.

In unfavourable weather conditions in the winter, there is a risk of snow penetrating through the roof hatch's ventilation. You must therefore remember to protect the caravan's fixtures and fittings and its upholstery, particularly when the caravan is due to be pitched for an extended period.


Ventilation hatches

The caravans are equipped with ventilation hatches for extra ventilation. The number of hatches varies depending on the model.

Ventilation grilles can be found on the outside of the caravan. Do not flush water through these grilles when washing the caravan.

The ventilation hatch is opened with the knob located in the middle of the hatch.

Knob, ventilation hatch

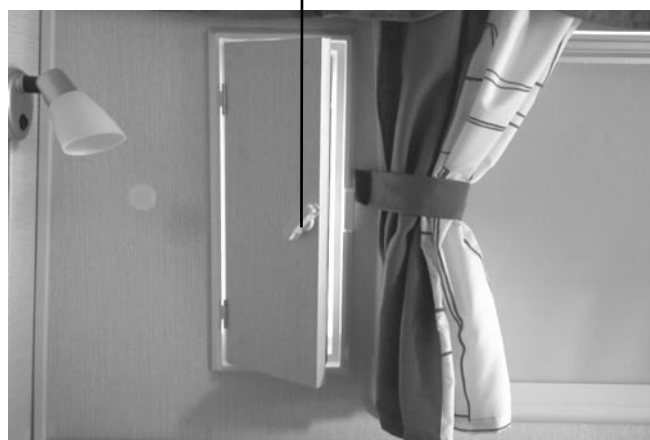

Ventilation grille



Do not flush water through the ventilation grilles when washing the caravan.

LPG compartment

The LPG compartment is equipped with a lockable lid. The LPG bottle is placed inside the LPG compartment. To keep the lid in the open position, a holder is installed in the compartment.

Open the compartment lid as follows:

1. Unlock the compartment lid's lock, so that the handle springs out.

Compartment lid unlocked



2. Open the compartment lid by turning the handle half a turn anti-clockwise.
3. Lift the lid until the holder hooks into the slot in the hinge, as shown in the picture.

Holder for compartment lid Compartment lid in open position



Close the compartment lid as follows:

1. Lift the lid a little so that there is no weight on the holder.
2. Press down the holder, and hold it down while lowering the lid.
3. When the lid has been lowered sufficiently that the slot in the hinge has passed the holder, the holder can be released and the lid closed fully.
4. Close the lid and press it in while turning the lock's handle clockwise. Lock the LPG compartment.




Do not attempt to close the compartment lid with force. The lid holder must always be released from the slot in the hinge before closing the lid.

Spare wheel holder

Some caravans may be equipped with a spare wheel holder in the LPG compartment, to hold a spare wheel for the caravan. The wheel is screwed into place in the holder using the washer and wing nut located on the bolt



Wing nut and washer

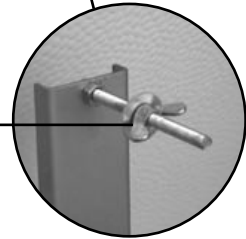

Cargo compartment

Some models are equipped with an extra cargo compartment at the rear of the caravan. This compartment can be used to store e.g. skis.

The compartment is accessed from outside through a lockable loading hatch.

Cargo compartment

Loading hatch



Fixtures and fittings

Facts and figures					
<u>Fabric</u>	<u>Material</u>	<u>Washing instructions</u>	<u>Fabric</u>	<u>Material</u>	<u>Washing instructions</u>
Cushions			Padding, cushions	100% Polyester	Hand-wash 30°
Frodo (Red)	50% Polyester 33% Polyacrylic 17% Viscose	Dry-clean	Covers	80% Cotton	Machine-wash 40°
Andres (Beige)	44% Polyester 42% Polyacrylic 14% Viscose	Dry-clean	Bed mattresses	20% Polyester	
Montana (Green)	48% Polyacrylic 36% Polyester 16% Viscose	Dry-clean	Upper bed cushions	80% Cotton 20% Polyester	Machine-wash 40°
Zappa (Blue)	51% Acrylic 37% Polyester 12% Cotton	Dry-clean	Curtains		
Bedsread			Red	75% Polyester 25% Cotton	Delicate wash 40°
Frodo (Red)	see cushion fabric	see cushion fabric	Red (T1 520)	100% Linen	Delicate wash 30°
Andres (Beige) (Estilo)	42% Polyester 44% Acrylic 14% Cotton	Dry-clean	Beige	100% Polyester	Delicate wash 40°
Montana (Green)	see cushion fabric	see cushion fabric	Green	75% Polyester 25% Cotton	Delicate wash 40°
Zappa (Blue)	see cushion fabric	see cushion fabric	Blue	50% Polyester 50% Cotton	Delicate wash 40°
Air gaps			Red/black (T1 520)	70% Viscose 30% Polyester	Delicate wash 40°
Frodo (Red)	43% Polyester	Dry-clean	Tulle curtains		
Montana (Green) (Linara)	37% Polyacrylic 20% Viscose		Red, Green, Blue	75% Polyester 25% Cotton	Delicate wash 40°
Andres (Beige) (Estilo)	42% Polyester 44% Acrylic 14% Cotton	Dry-clean	White	100% Polyester	Delicate wash 30°
Zappa (Blue) (Biaritz)	see cushion fabric	see cushion fabric	Curtain / Cushions		
			Red, Beige, Blue	100% Polyester	Delicate wash 30°
			Beige	55% Polyester 45% Cotton	Delicate wash 40°
			Red/black (T1 520)	70% Viscose 30% Polyester	Delicate wash 40°

All models have at least one seating area that can be converted into a bed. These seating areas are converted into beds with the aid of the table.

The seating area at the front has a bed box that can be folded up to make cleaning easier.

All caravans with long bed or double bed versions have fixed beds with slatted bases. In caravans with a seating area at the rear there is also a fixed bed with a slatted base.

Some caravans have air gaps covered with fabric. The fabric is secured with Velcro to the gap, and can easily be removed if you want to wash or replace the fabric.

NOTE! In order to remove the fabric on caravans with the long bed version, the screws on the pedestal between the beds must be undone.

Some models are equipped with upper beds or upper bed cupboards at the rear of the caravan.

The caravan's middle section comprises a kitchenette, wardrobes and basket cupboard with wire baskets.

In the kitchen cupboard there is a dish-rack fitted with a drainage tray

All models have a washroom situated in various locations depending on the layout. Wooden fixtures and fittings are covered with a durable, scratch resistant film.

The inside of caravan's outer walls is covered with PVC wallpaper. The floor covering also has a PVC wear surface.

The padding in the seat cushions is made of highly elastic cold cure foam. The padding in the backrest cushions is made of polyester. Seat and backrest cushions are covered with flame-proof fibrefill. The cushions have been tested and satisfy the demands stipulated by the furniture industry as regards wear, colour fastness and fire requirements.

The cushion covers are made of various materials depending on their colour (see fact box above).

The bed cushions at the rear have covers made of cotton and polyester.



Stickers may not be affixed to the plywood on the fixtures and fittings.

Cleaning

- Walls and fixtures and fittings are best cleaned using a soap solution.
- Wood oil should be applied to the mouldings around tables and benches once a year.
- For the textiles included, see “*Washing instructions*” on page 22.

Cushions and bedspread

When stains from wine, beer, grass, fruit juice, chocolate, ballpoint pens, etc., are made on cushions or bedspreads, first draw up all the liquid with a clean cloth, sponge or paper. Then moisten a cloth with mild detergent and clean. Then rinse with clean water.

If the above treatment fails to remove the stains, use textile shampoo that can be purchased from e.g. petrol stations.

If the stains are still not removed, the cushion/bedspread must be dry-cleaned.

Converting the seating area into a bed

Round seating area

1. Lower the table by pressing down the latch handle on the table frame and pulling a little so that the legs begin to ‘bend’. Release the handle and press down the table top until the latch locks the table in the bed position. The table top does not need to rest on the supporting mouldings on the bed boxes, but is sufficiently stable to convert into a bed with only the table frame for support.

Latch handle, table frame



2. Pull the two seat cushions at the sides in towards the middle of the table and turn the cushions over. In wide caravans, an extra bed cushion must be inserted to fill the entire width (see picture below).




Extra bed cushion (wide caravans)

Cushions in bed position

3. Turn the backrest cushions over and place them between the seat cushions and the outer wall. If more space is required, remove the corner cushions and the backrest cushion at the gable.

Seating area

1. Lift up the front edge of the table.
2. Hold in the push button and fold the lower part of the leg in towards the table top.

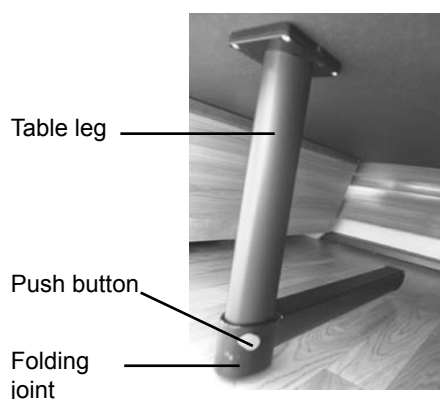

3. Unhook the table from the wall rail, and lay the table down against the bed boxes’ support mouldings. Alternatively hook the table into the lower wall rail.
4. Pull the two seat cushions in towards the middle of the table and turn the cushions over.
5. Turn the backrest cushions over and place them between the seat cushions and the outer wall.

Folding bed box


The seating area at the front has a bed box that can be folded up to make cleaning easier. In order to fold up the bed box, the cushions must first be removed. Any heavy items in the bed box should be removed before folding it up.

1. Remove the cushions.
2. Fold up the bed box.



Dish rack in kitchen cupboard


In the kitchen cupboard there is a dish rack fitted with a pull-out drainage tray. Remember to check and empty the tray so that it does not overflow.

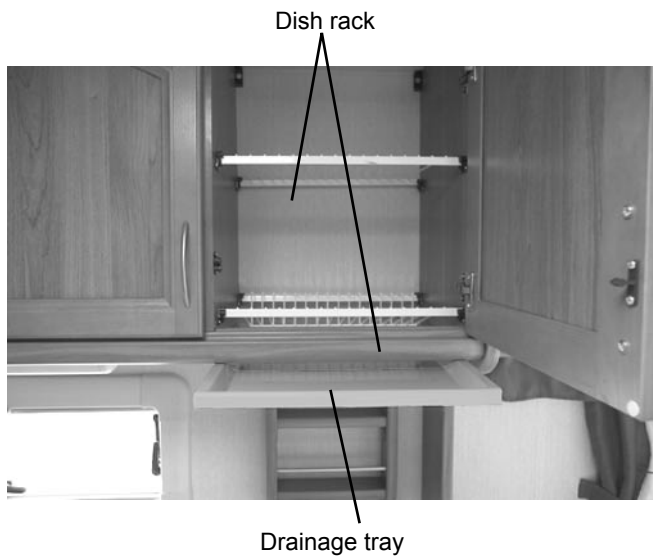

Holder for bed base

In caravans fitted with beds, there is a holder for the bed base. The holder is automatically locked in place when the bed base is lifted up. When closing, lift the bed base up a little (to release the catch in the holder) and then lower the bed base again.

In all caravans with a double bed, a spring-loaded hinge holds the bed base in the open position. When closing, press the bed base down by hand.

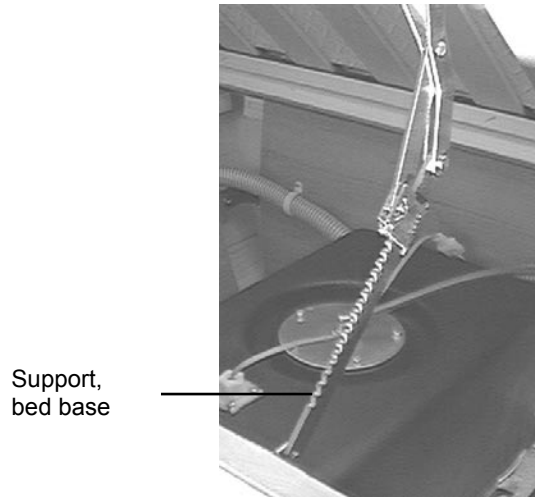

Upper bed cupboard

Some caravans are equipped with an upper bed cupboard. This cupboard can easily be fitted out for use as an upper bed. It is possible to purchase cushions and a ladder if required.

The upper bed cupboard can take a maximum weight of 60 kg.

Folding down upper bed cupboard to make upper bed:

1. Disconnect the folding bearing rail's (only included in certain models) transit safety catch and fold out the bearing rail so that it rests on the blocks installed on the interior wall.
2. Disconnect the transit safety catch inside the cupboard.



The upper bed and upper bed cupboard can take a maximum weight of 60 kg.

3. Grip the handle and lift straight up.
4. Then pull the upper part towards you, while counter-holding with your other hand.




5. Lay the bed down and fold out the plywood cover over the doors.
6. Fold up the protection bars.

Blacking out Curtain or folding door

The caravan is equipped with a curtain or folding door that can be used to screen off the sleeping section, either to prevent people looking in or to block out daylight.

Using the folding door

1. Unbutton the strap that functions as a transit safety catch for the folding door.

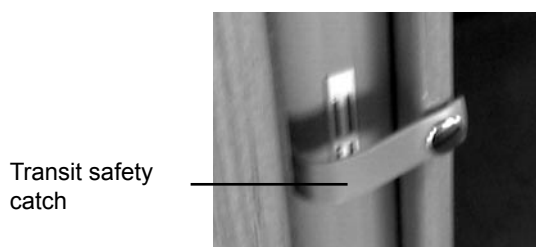

2. Open the folding door to the opposite wall, and secure with the magnetic lock.

Always lock the folding door using the transit safety catch before driving with the caravan.


Roller-blind/mosquito net

The caravans are equipped with combined roller-blinds and mosquito nets at all windows.

Using roller-blinds:

1. Squeeze the two latches on the roller-blind's handle together with your fingers, and pull up the blind.

2. Release the latches when the roller-blind is in the desired position, and the blind will be locked in the locking holes situated in the guide rail. When you want to open the blind, squeeze the latches together and lower the roller-blind by hand. Do not release the roller-blind until it is all the way down.

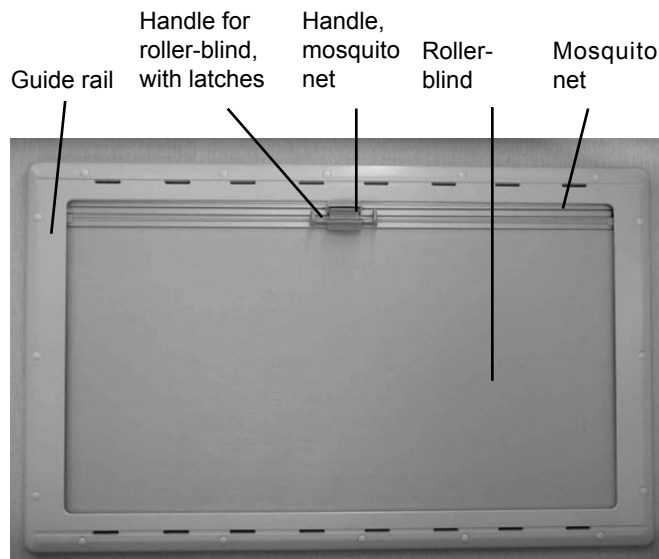

Using mosquito nets:


The caravan can have two different mountings for the mosquito net.

Alt. 1 (see picture above):

1. Pull the mosquito net down using the handle.
2. Hook the mosquito net's handle into the roller-blind's handle.

Alt. 2 (see picture below):

1. Pull the roller-blind down using the cord, the end of which is located in the middle of the flower shelf.

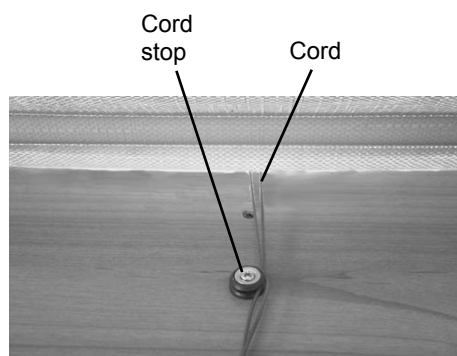


2. Wind the roller-blind's cord around the cord stop that is installed on the flower shelf.

Roller-blinds in roof hatches and skylights

Roof hatch

The roof hatch that is situated above the centre aisle in the caravan is fitted with a roller-blind, which can be used as a blackout in the caravan on light summer nights.

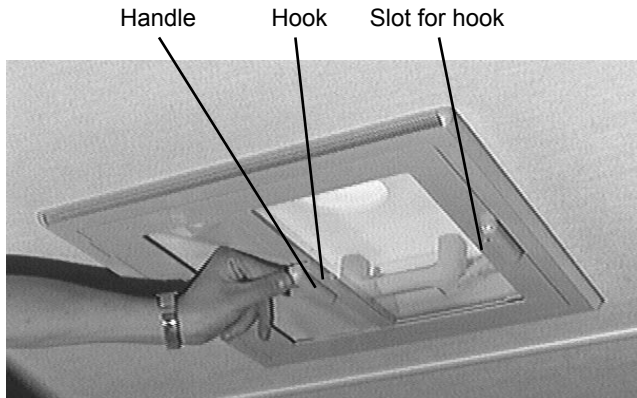

Using roller-blinds

1. Close the roller-blind using its handle.
2. Secure the hook in the slot in the centre on the opposite side.
3. To open the roller-blind, lift the handle up to release the hook from the slot.


Skylight

Some caravans are equipped with a skylight instead of a roof hatch. This skylight can be opened to three different positions, depending on how much ventilation you want. Like the roof hatch, the skylight is fitted with both a mosquito net and a roller-blind.

NOTE! In strong sunlight, the roller-blind may only be closed 2/3 of the way, and the window must be put in the ventilation position.

Using roller-blind/mosquito net

1. Close the roller-blind using its handle.

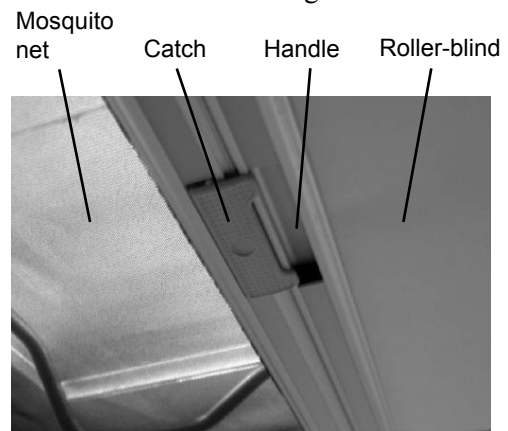

2. Bring the roller-blind and the mosquito net together on the opposite side of the skylight. The catch then locks the roller-blind and the mosquito net together. The roller-blind can now be adjusted to any position by pulling the handle backwards and forwards.
3. To open the roller-blind again, press the catch to release the mosquito net from the roller-blind.

Electrical system

Electrical system 230 V

The caravans' 230 V system is designed in accordance with ELSÄK-FS 1999:5. The maximum power that can be connected is 3 kW (3150 W).

The caravans have a 230 V central electrical unit equipped with a 25 A earth leakage circuit breaker, which provides protection against any earth faults and which also works as a master switch for the 230 V installation. The earth leakage circuit breaker also has a button for testing the circuit breaker's function. There are also two 16 A and two 10 A miniature circuit breakers that are tripped in the event of an overload or a short-circuit. If the earth leakage circuit breaker or the miniature circuit breakers have tripped, the fault must first be located. In all cases apart from an overload, the fault must be repaired by an authorised engineer before returning the reset button to the original position.


The central electrical unit is located on the reverse of the mains input in one of the caravan's wardrobes.

The mains input for the caravan is supplied with a lockable cover. When connecting the caravan to 230 V, first connect the cable to the caravan's input and then to the pitch's output.

When the caravan is no longer to be connected to 230 V, the connector in the caravan's mains input must always be disconnected.

To avoid damage and faults arising in the 230 V system, the system must be inspected regularly.

Central electrical unit 230 V with earth leakage circuit breaker

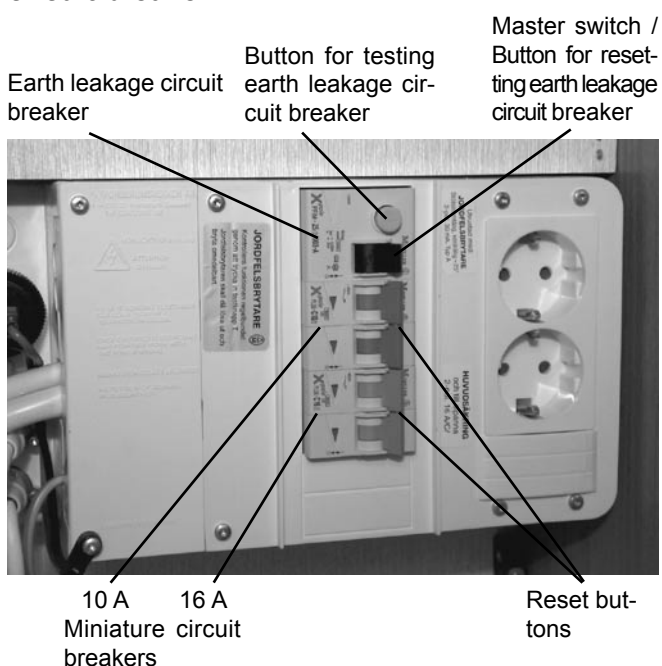

Bearing in mind the cooling of the connecting cable, the cable must not be rolled up on a drum when it is connected to the mains. The caravan must be positioned as close to the mains connection as possible in order to reduce the length of the lead. If you feel there is a risk of the lead being damaged due to mechanical causes, it should be suitably protected.


The arrangement between the pitch's mains output and the caravan must comprise the following components:

- A plug with a protective conductor connector and in a version intended for industrial use.
- A type A07BB or H07RN-F connecting cable or similar cable of the following version:
Minimum area: 2.5 mm²
Protective conductor: Green/yellow
Neutral conductor: Light blue


⚠ The connecting cable must not be rolled up on e.g. a drum when the caravan is connected to the mains.

⚠ Always disconnect the connector from the 230 V input when the caravan is not to be connected to 230 V.

⚠ Repairs, conversions or additions to electrical systems must be carried out by an authorised expert, due to the considerable risk of personal injury or material damage in the event of incorrect installation.

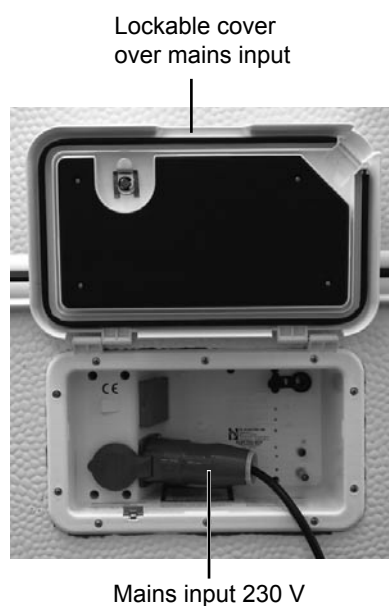

Wiring diagram 230 V

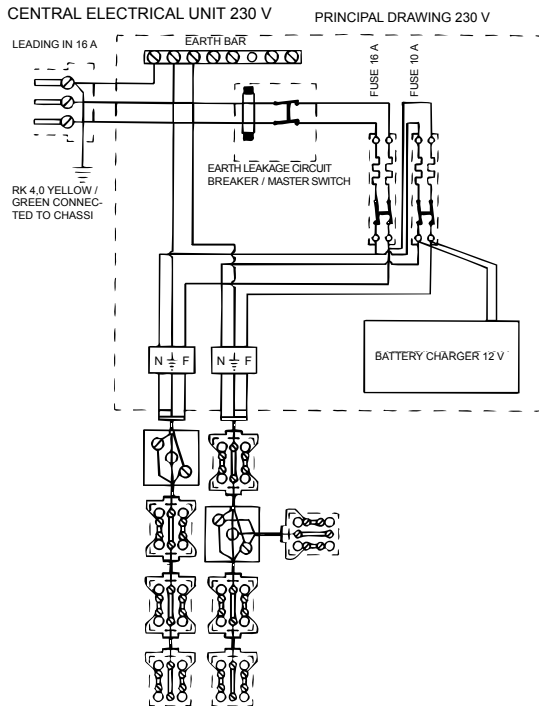

If the earth leakage circuit breaker or the miniature circuit breakers have tripped, the fault must first be located. In all cases apart from an overload, the fault must be repaired by an authorised engineer before returning the reset button to the original position. Test the function of the earth leakage circuit breaker at regular intervals using the test button (see picture on page 27).

Settings, electrical system

Below are descriptions of various common uses of the caravan's electrical system.

Normal operation:

Master switch 230 V	“ON”
Battery switch on central battery unit	“ON”
Battery switch on control panel, 12 V	“ON”

Caravan pitched and not going to be used:

Master switch 230 V	“OFF”
Battery switch on central battery unit	“OFF”
Battery switch on control panel, 12 V	“OFF”

Caravan pitched with maintenance heating via electric heater:

Master switch 230 V	“ON”
Battery switch on central battery unit	“OFF”
Battery switch on control panel, 12 V	“OFF”

Electrical system 12 V

The caravans have a 12 V battery for operating the heating boiler, circulation pump, interior lighting, water pump, kitchen fan, etc. One of the wardrobes houses a central battery unit with a battery switch, which must be switched on in order for the 12 V system to work in the event of battery operation, as well as a fuse holder containing two 20 A fuses and two 10 A fuses.

The battery is charged with a 20 A battery charger (access to 230 V required), or from the car's alternator (the connection in the car must be in accordance with the wiring diagram below).

Due to the relatively large load on the battery when the caravan is in use, the battery must be charged every 3-5 days. There is good reason to be sparing with the power output if there is no potential for continuous charging of the caravan battery.

NOTE! When the caravan is not in use, the battery switch in the wardrobe must be switched off.

Central battery unit

Battery switch in “ON” position Central battery unit Fuses



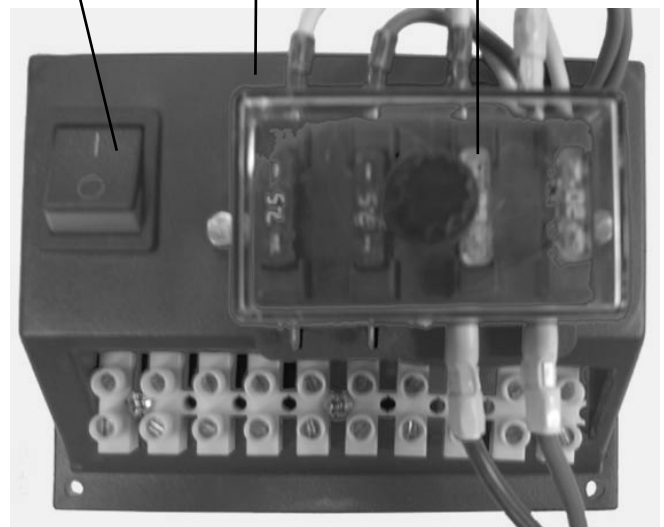


Diagram showing how the connection in the car should be arranged in order for the caravan's battery to be charged, and in order for 12 V operation of the refrigerator from the car's alternator to take place.

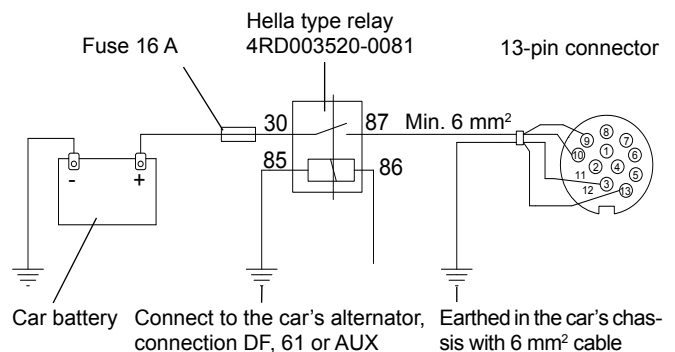

Control panel 12 V

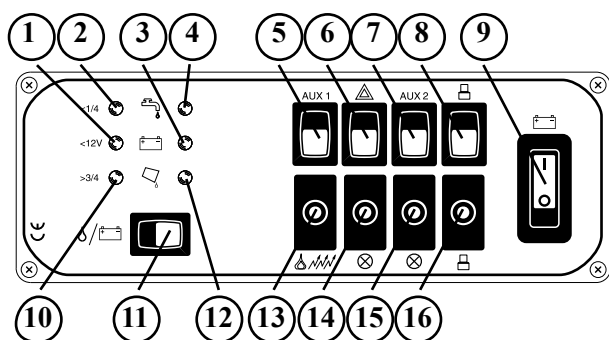

1. LED that lights when the battery voltage is too low.
2. LED that lights when the level in water tank is low.
3. LED that lights when the battery has the correct voltage.
4. LED that lights when there is fresh water in the tank.
5. Switch, extra equipment
6. Switch, warning light
7. Switch, extra equipment
8. Switch, water pump
9. Switch, battery
10. LED that lights when the level in drainage tank is high.
11. Button for lighting indicator LEDs.
12. LED that lights when the drainage tank is not full
13. Miniature circuit breaker 10 A, boiler, electric heater, warning light
14. Miniature circuit breaker 10 A, level sensor, radio (if installed)
15. Miniature circuit breaker 10 A, interior lighting, TV output
16. Miniature circuit breaker 10 A, water pump

All switches are in the “ON” position when they are pressed towards the relevant symbol on the control panel (upwards). The switches are in the “OFF” position when they are pressed away from the relevant symbol on the control panel.


In order to light the indicator LEDs on the left side of the panel, the button below the LEDs must be depressed (11). When the button is released, all the LEDs go out.

If one of the miniature circuit breakers has tripped, the fault must first be located. In all cases apart from an overload, the fault must be repaired by an authorised engineer before resetting the miniature circuit breaker.

List of positions for wiring diagram 12 V (page 30)

1. Battery
2. Fuse 20A
3. Refrigerator
5. Fresh water pump
6. Water level sensor, fresh water
7. Earthed in chassis
8. Dimmer
9. Position lights
10. Switch, pillar
11. Terminal block behind toilet
12. Connector, 13-pin
13. LPG boiler
14. Fuse 10A
17. 9-pin connector housing behind rear light assembly
18. Side marker, left side
19. Side marker, right side
20. Rear lights, right
b = parking / brake lights
a = turn signal lamps
c = fog lights
21. Number plate lighting
22. Rear lights, left
b = parking / brake lights
e = turn signal lamps
d = reversing light
23. 9-pin connector housing behind central electrical unit
24. Width indication lights
25. 2-pin connector housing behind central electrical unit
26. Control panel, heating
29. Switch, tap, sink
30. Switch, tap, washroom
31. Spark electrode and lighting, refrigerator
32. Relay, connects 12 V to refrigerator when the warning light in the car is lit
34. Electric heater, 12 V, refrigerator
35. Terminal block, refrigerator
36. Terminal block, 6-pin in central battery unit
37. Central battery unit
38. Battery switch
39. Water level sensor, drainage tank
40. Supply to radio
43. Terminal block behind central electrical unit
44. 2-pin connector
46. Battery charger
47. Circulation pump 12 V

Wiring diagram 12 V (List of positions, page 29)

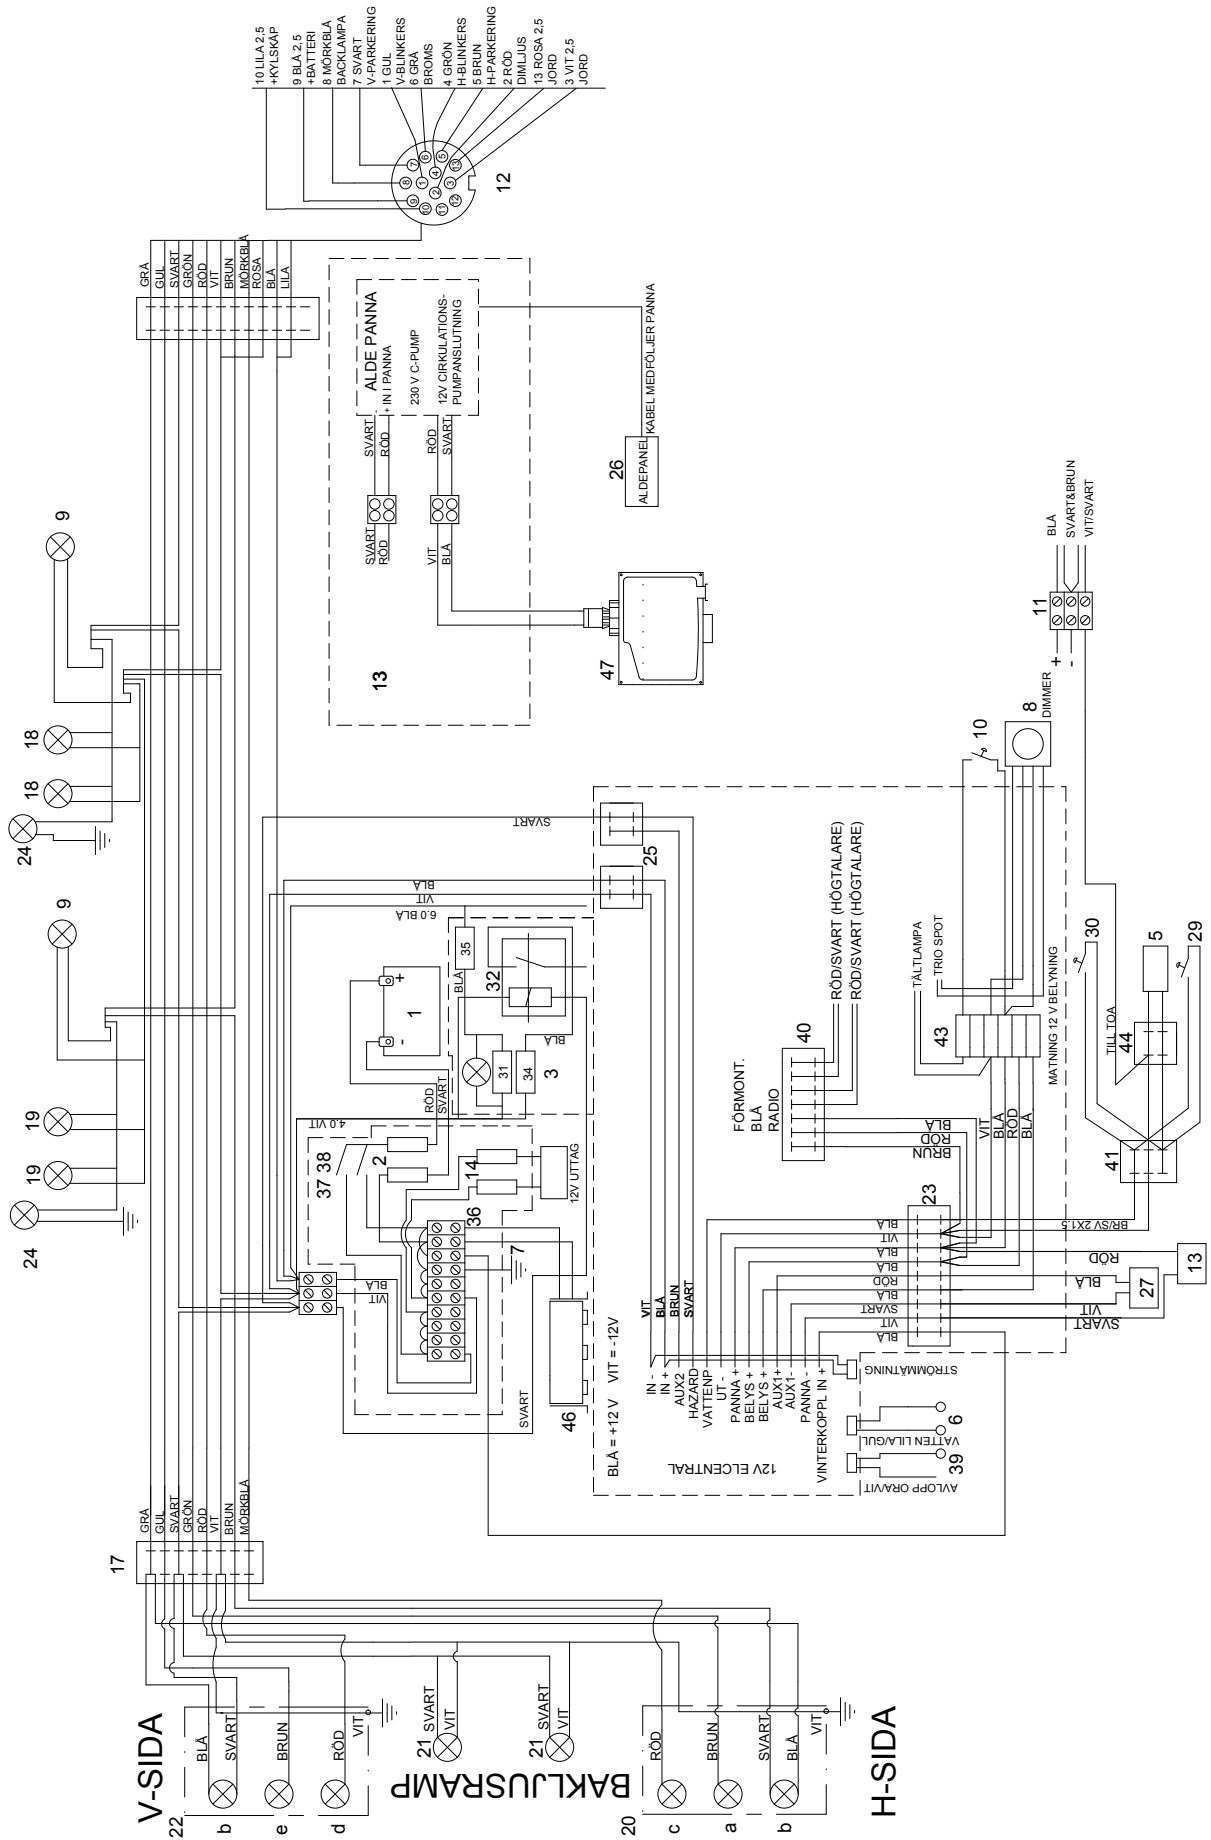

Battery


Facts and figures

Voltage	12 V
Capacity	75 Ah

All caravans have a 12 V battery. The battery is located in a battery casing with a locking belt in one of the caravan's wardrobes, except for certain caravans where the battery may be located in a bed box.

A ventilation hose runs from the battery and out through the floor. The hose removes the gases that are formed in the battery, in particular during charging.

In cold conditions, the battery's ability to produce current is reduced. However, its capacity is not lost. It regains full capacity when warmed up.

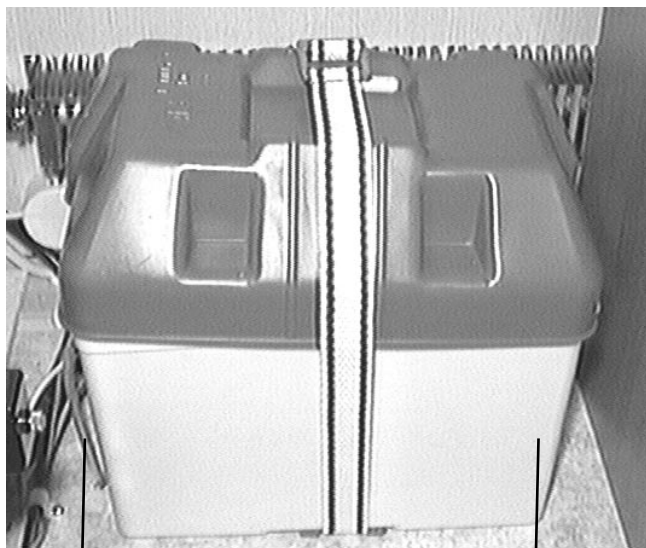

Ventilation hose

Battery casing with battery

⚠ The ventilation hose from the battery must be routed out through the floor. Only batteries with a ventilation hose may be used.

⚠ Protective goggles must be worn whenever working on the battery.

⚠ If the battery is removed from the caravan, the battery's cable terminals must be positioned so that they cannot come into contact with each other.

Maintaining the battery

By following the advice given below, you can extend the life of your battery:

- Keep the battery dry and clean. Dirt, oil and petrol reduce the output and can damage the battery.
 - Apply a little grease or Vaseline on the battery's terminal clamps. This prevents oxidation and hence poor contact.
 - Do not over-exert the battery - this reduces its service life.
 - Do not short the battery - e.g. with tools - as the battery can easily be ruined.
- NOTE!** There is a risk of sparks, e.g. when removing/installing the battery, when jump starting and when charging.
Connect the ground lead last when installing the battery, and disconnect the ground lead first when removing the battery.
- Check the acid level from time to time, at least every 2 months. The level should be approximately 10 mm above the lead plates. If necessary, top up with distilled water. Never use anything other than distilled water.
 - Check the battery's charge status from time to time using an acid meter or test instrument. If the acid weight (the density) is below 1.22 g/cm³ and the battery voltage is lower than 12.4 V, the battery must be charged.
 - The battery can be charged quickly or slowly. The latter method should be used if the battery is in poor condition or if it has not been used for a long time. The acid density of a fully charged battery at +20°C = 1.28 g/cm³.
 - If the acid weight in the cells differs by more than five division lines on the acid meter, the battery is dead.
 - Batteries that are not going to be used should be fully charged when placed in storage.
 - If the battery is to be stored for an extended period, store it in a cool place.

⚠ The battery contains corrosive acid that can cause serious corrosive injuries and damage. If the acid comes into contact with eyes, skin, clothes, etc., rinse with copious amounts of water. In the event of acid splashing into the eyes, rinse with copious amounts of water and contact a doctor.
If the battery acid escapes into the caravan, it is most easily neutralised with a mixture of 1 dl bicarbonate to 10 l water.

⚠ When charging the battery, explosive gas is generated. Avoid flames and sparks close to the battery.

Battery charger

Facts and figures

Battery charger	Mascot 2044 12 V / 20 A
Connection voltage	230 V, 50-60 HZ
Charge voltage	Max. 14.7 V
Charge current	20 A


All caravans are equipped with an automatic 20 A battery charger, located in a wardrobe along with the caravan's battery. The fact that the charger is automatic means that charging is discontinued when the battery is fully charged. This means that there is no risk of the battery being boiled dry.

The charger is also used during winter connection if the instructions in the section "*Winter connection function*" on page 43 are followed.

The caravan's battery can also be charged from the car's alternator, but in this case the connection between the car and caravan must be executed in accordance with the instructions on page 28.

The charger is protected with a 25 A fuse. Charging takes place automatically in 3 stages, which are displayed with an indicator lamp as follows:

- Red = The charger is producing maximum charging current.
- Yellow = The battery normally has 80-95% voltage when this lamp is lit. It normally takes approximately 3.5-4.5 hours to charge the battery in this position.
- Green = The battery is fully charged.

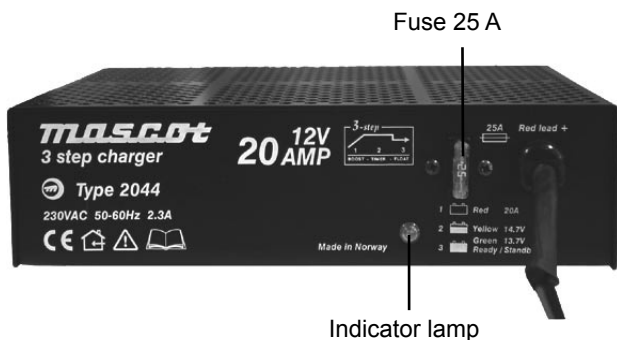

When charging the battery, explosive gas is generated. Avoid sparks or fire in the vicinity of the battery.

Kitchen fan

Facts and figures

Make	Electrolux CK 50	Electrolux CK 155
Voltage	12 V	12 V
Output	30 W	30 W
Capacity	105 m ³ /h	105 m ³ /h

All caravans are equipped with an Electrolux kitchen fan. Cooking odours are removed through a fan hose to a vent on the roof. The fan is started with a switch located in the fan cover.


Electrolux CK 50



Lighting, light assembly:
On / Off
Fan motor:
On / Off

Electrolux CK 155

The fan's filter needs to be cleaned from time to time. Remove the filter and clean it with warm water and a synthetic detergent.

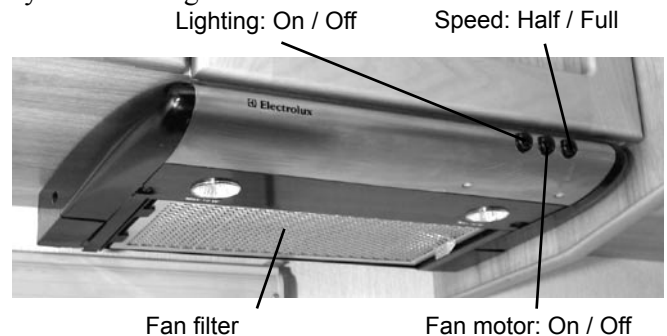

Lighting: On / Off Speed: Half / Full

Fan filter


Fan motor: On / Off

Tent service output

All caravans are equipped with a tent service output on the exterior of the caravan. The output is supplied with a lockable cover and comprises a 230 V output, a 12 V output, a TV aerial output and cable TV input.

Output 230 V

Output 12 V

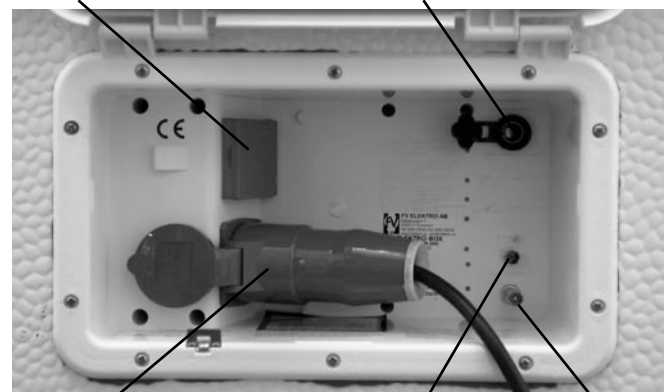

Mains input
230 V

Input,
cable TV

Output,
TV aerial

Lighting

Facts and figures		
Interior lighting	Bulb	Our no.
Ceiling lamp spotlight	GU5,3 12 V/ 10 W	504412
Ceiling lamp, ceiling fixture	Halogen G4 12 V/ 10 W	503701
Reading lamp	GU5,3 12 V/ 10 W	504412
Spotlight, inset	Halogen G4 12 V/ 5 W	503700
Lighting, kitchen	Halogen G4 12 V/ 10 W	503701
Refrigerator RM 7291	12 V / 2 W	401286
Refrigerator RM 7401	12 V / 2 W	401286
Refrigerator RM 7601	12 V / 2 W	401286
Kitchen fan, Electrolux CK 155	GU4 12 V/ 10 W	504141
LPG oven	14 V / 10 W	504416
Exterior lighting	Bulb	Our no.
Tent lamp	Halogen G4 matt 12 V / 10 W	504413
Width indication light	Glow lamp SV 8.5 12 V / 5 W	500158
Tail lights:		
Turn signal lamps	BA15S 12 V/ 21 W	504535
Tail / Brake light	BA15S 12 V/ 21/5 W	503154
Fog light	BA15S 12 V/ 21 W	500147
Reversing light	BA15S 12 V/ 21 W	500147
Number plate lighting	Glow lamp SV 8.5 12 V / 5 W	500158

External lighting

Apart from the tent lamp, the external lighting is powered from the car's 12 V system.

The external lighting consists of:

- Tail lights left and right, with turn signal lamps, brake lights, tail lights and fog lights.
- Number plate lighting
- Two position lights, front
- Three side marker lights on each side
- High-level brake light
- A width indication light on either side

It is also possible to light parking lights on the caravan if it has to be left temporarily in the dark.

The warning light switch on the central electrical unit lights the tail and position lights, the side marker lights and the number plate lighting.

In order for this lighting to work, both the battery switch on the central battery unit and the battery switch on the 12 V control panel must be switched on.

Interior lighting

All interior lighting and the tent lamp by the door are powered with the caravan's 12 V battery.

In order for this lighting to work, both the battery switch on the central battery unit and the battery switch on the 12 V control panel must be switched on.

The front ceiling lamp and the tent lamp are directly connected, however, which means that they can be turned on and off even when the battery switch on the 12 V control panel is switched off. The battery switch on the central battery unit must therefore be switched on.

The tent lamp is lit with the switch on the pillar by the outer door, and the ceiling lamp is lit and controlled with a dimmer located on the pillar.

If strip lights are installed at the front, these are lit with the button "AUX 1" on the 12 V control panel, see the section "**Control panel 12 V**" on page 29.

Changing bulbs


Ceiling lamp, spotlight

1. Grip the bulb and pull it out of the bulb holder.
2. Align the new bulb with the bulb holder and press into place.



Ceiling lamp, ceiling fixture

1. Insert a thin screwdriver at the edge of the glass and carefully pry out the glass.
2. Grip the bulb and pull it out of the bulb holder.

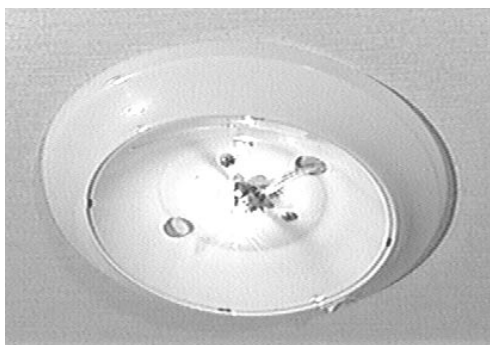

3. Align the new bulb with the bulb holder's small holes and press into place.
4. Refit the glass by aligning the hooks in the slots and pressing into place.

Reading lamp

1. Grip the bulb and pull it out of the bulb holder.



2. Align the new bulb with the bulb holder and press into place.

Spotlight, inset

1. Insert a thin screwdriver as shown and carefully pry out the glass.
2. Grip the bulb and pull it out of the bulb holder.
3. Align the new bulb with the bulb holder's small holes and press into place.
4. Press the glass back into place.



Lighting, kitchen, with Electrolux CK 50


1. Remove one end of the light. Pull out the switch plate a little. Remove the lamp glass.



2. Grip the bulb and pull it out of the bulb holder.
3. Align the new bulb with the bulb holder's small holes and press into place.
4. Refit the glass and the end.

Lighting, kitchen, with Electrolux CK 155

1. Unscrew the lamp glass mounting screw and remove the glass.

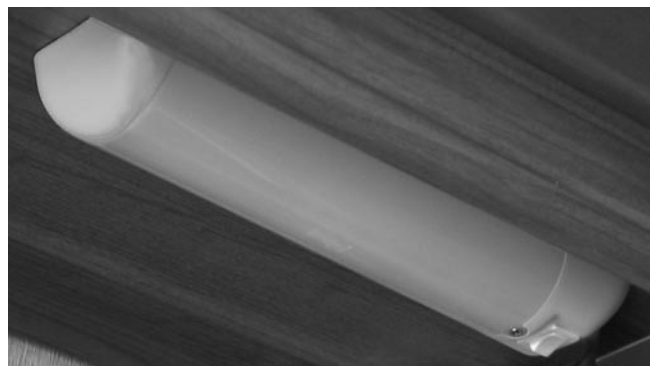

2. Grip the bulb and pull it out of the bulb holder.
3. Align the new bulb with the bulb holder's small holes and press into place.
4. Refit and screw the glass into place.

Interior lighting, refrigerator, RM 7291/7401/7601

1. Remove the glass by inserting a thin screwdriver at the rear edge between the glass and the base of the bulb. Carefully pry out the glass.
2. Grip the base of the bulb, turn anti-clockwise 90° and pull out the bulb.
3. Insert the new bulb, turn clockwise 90°.
4. Refit (press in) the glass.



Lighting, fan, Electrolux CK 155

1. Insert a thin screwdriver as shown and carefully pry out the bulb.
2. Align the new bulb with the bulb holder's small holes and press into place.




Interior lighting, LPG oven

1. Unscrew the protective glass from in front of the bulb.
2. Unscrew the bulb and install a new bulb.
3. Screw in the protective glass.



Tent lamp

1. Carefully remove the rubber ring around the lamp, and then remove the lamp glass.
2. Grip the bulb and pull it out of the bulb holder.

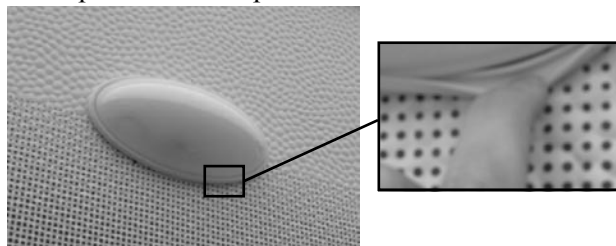

3. Align the new bulb with the bulb holder's small holes and press into place.
4. Refit the rubber ring.

Width indication lights


1. Insert a thin screwdriver in the slot in the glass and carefully pry out the glass.



2. Replace the bulb and refit (press in) the glass.

High-level brake light, side marker lights and position lights


The caravan has a high-level brake light, two position lights and six side marker lights. All of these consist of LEDs, which means that bulbs cannot be replaced.

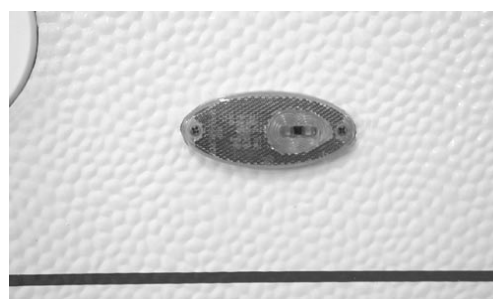

Tail light


1. Unscrew the four mounting screws for the lamp glass.

Reversing light (Fog light left side) Turn signal lamps Brake light/Tail light

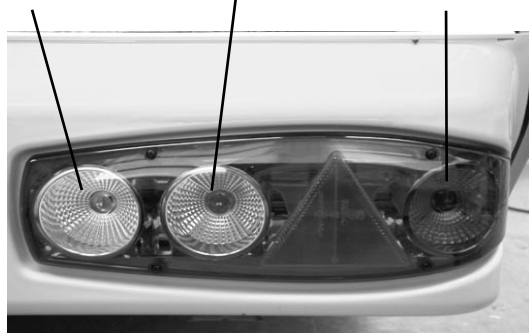

2. Remove the bulb holder from the glass by unscrewing the holder's two mounting screws.
3. Press in the bulb and twist it anti-clockwise.
4. Pull out the bulb.
5. Install a new bulb (press in and twist clockwise).
6. Refit the bulb holder in the glass and screw in the holder.
7. Refit and screw the glass into place.

Bulb holder Mounting screw

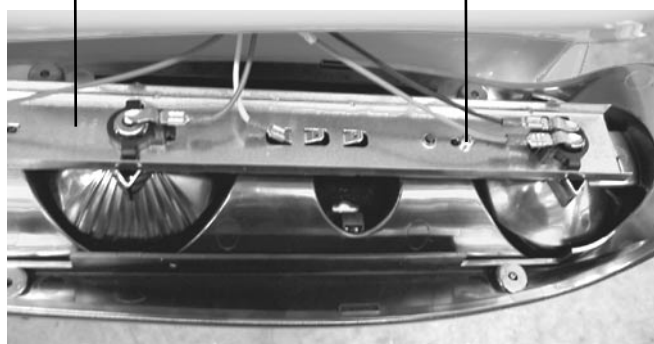

Number plate lighting

1. Unscrew the two mounting screws and remove the light from the number plate holder.
2. Replace the bulb.
3. Install and screw the light into place in the number plate holder.



See page 33 regarding bulbs for the various lights.

Installing radio

The caravans are prepared for you to install your own radio. All the power supply and loudspeaker cables, as well as the aerial cable, are routed to the space intended for the radio. To install a radio you need a spacer frame, and to connect the power supply and loudspeakers you need an adapter cable that is connected to the quick-release connector installed in the wiring.



Installation is performed as follows:

1. Remove the cover panel.
2. Press the installation frame into the hole for the radio, and secure it in the cupboard with two small nails.
3. Connect the adapter cable to the wiring's connector housing.
4. Pull out the aerial cable and adapter cable through the radio hole, and connect to the relevant outputs on the back of the radio.
5. Install the radio in the hole and press into place.

For other information regarding installation and removal, refer to the radio's instruction manual.

Connecting cable TV

In caravans with tent service it is possible to connect the caravan to cable TV via the TV aerial input in the tent service output. See the section *“Tent service output”* on page 32. The cable for the TV outputs in the caravan, which is located at the output on the aerial amplifier (goes down to the distribution box), must then be connected to the cable from the tent service output’s cable TV input (see picture below). This cable is suspended rolled up inside the wardrobe, where the tent service output is located. Cable TV is then available at all TV outputs in the caravan.

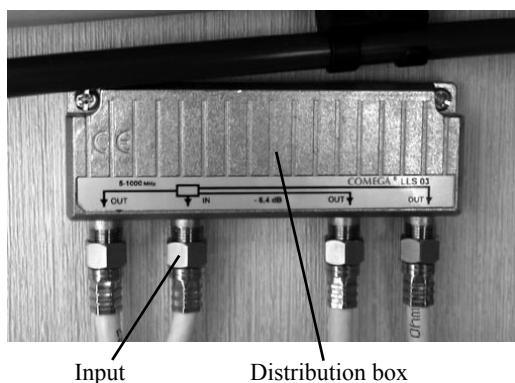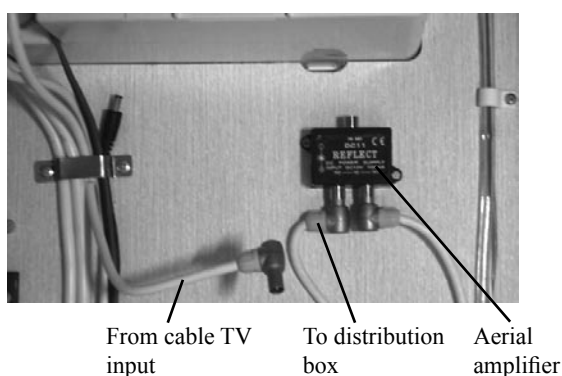

If you want cable TV in the tent instead, the cable for the cable TV must be connected directly to the TV in the tent instead of to the tent service output.

Caravan Control


Some caravans have a Caravan Control installed in the upper cupboard where the 12 V control panel is located.

With Caravan Control, you can control and monitor the caravan’s heating system remotely using SMS via a GSM telephone. It also operates as an alarm in the event of somebody breaking into the caravan. Caravan Control also monitors the voltage level in the battery, and checks that 230 V is connected to the caravan.

To access the button for programming mode and to insert the SIM card, remove the protective cover over the CC unit. Inside this cover are also two in-line fuses for the CC unit, one of 1 A and one of 300 mA.


Installing the SIM card

1. Before inserting the SIM card in the card holder in the CC unit, the request for a PIN code must be removed from the card. This is done by inserting the card in the mobile telephone. Go into the telephone’s menu for security settings under the point “#Pin code request on/off” and select “Off”. The SIM card is now ready to be installed in the CC unit.
2. Open the SIM card holder by carefully pressing the small yellow button (as shown) and removing the holder. Insert the card in the holder with the contact surface facing up. Refit the holder.

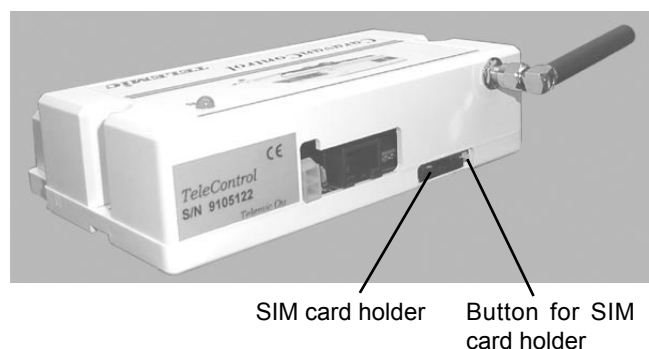

Basic settings for country and telephone number

1. Press the programming button (see picture) and hold it down for approximately 5 seconds. The green lamp flashes at 1 second intervals.

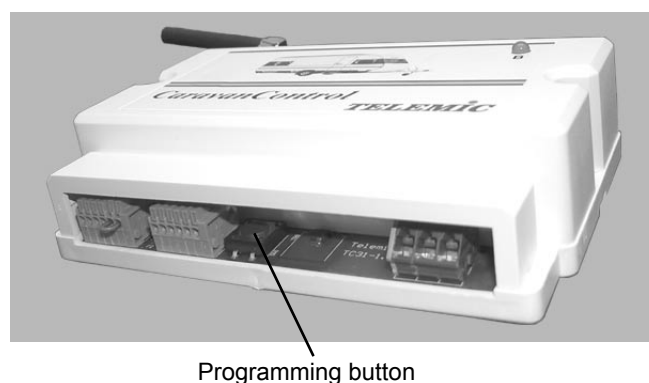

2. Set the language by sending an SMS to the CC unit as follows: #E3 1 (Finnish), #E3 2 (English), E3 3 (Norwegian), #E3 4 (Swedish).
3. Set the number for the message centre by sending an SMS to the CC unit as follows:
#p0 +46705008999 (Telia), #p0 +46707990001 (Comviq), #p0 +46708000708 (Vodafone).
4. Set the number that is to communicate with the CC unit by sending an SMS to the CC unit as follows:
#p1 +46xxxxxxxxx.

Read more about how to use Caravan Control in the section *“External start (Remote connection)”* on page 52, and in the user instructions supplied with the caravan.

Control panel boiler


Control panel function




Control panel resting position

The control panel automatically switches to the resting position after 2 minutes if no buttons are pressed. In the resting position, the activated functions in the boiler are displayed.

1. The control panel in resting position and the boiler switched off.

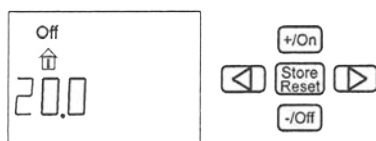

2. The control panel in resting position and the boiler in operation.

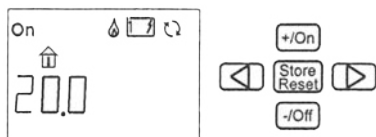


Resetting the system

1. Press and hold the "Store/Reset" button for 10 seconds.




2. The control panel's display is activated. The main current on the panel in the "Off" position. Gas in the on position. Electricity in position 1 kW and 22°C. The pump in the automatic position. Lower menu row extinguished.

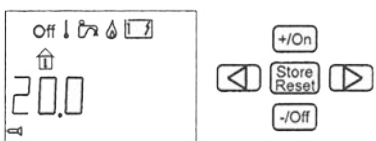


Start the heating

Start the heating with the most recently used settings. If the power is disconnected, the most recent settings will automatically be used.


1. Press the right arrow button. "Off" flashes on the display.

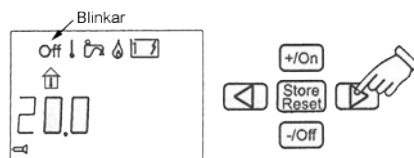

2. Press the +/On button. "On" flashes on the display.

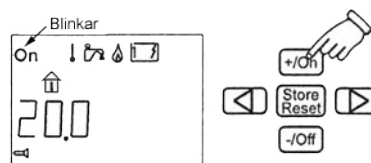


3. Press the left arrow button to complete the settings. "On" is shown on the display.

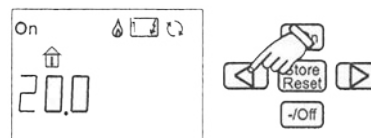


Switch off the heating


1. Press the right arrow button. "On" flashes on the display.

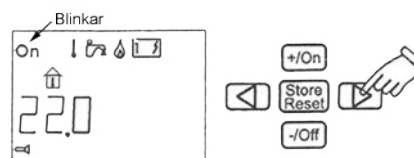

2. Press the -/Off button. "Off" flashes on the display.

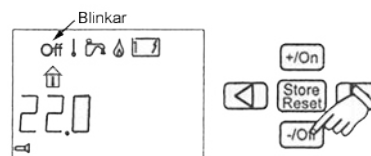


3. Press the left arrow button to complete the settings. "Off" is shown on the display.

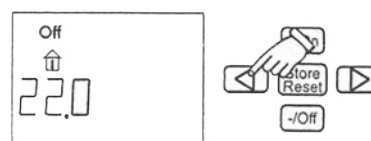


Temperature setting ↓

The caravan's temperature can be set from +5°C to +30°C in intervals of 0.5°C.


1. Press the right arrow button until the temperature symbol flashes. The temperature that is displayed is the current temperature (in this case 22°C).

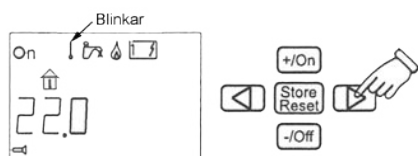

2. The temperature is raised by pressing the +/On button. The temperature is lowered by pressing the -/Off button. The temperature in the picture is now set to 25°C.

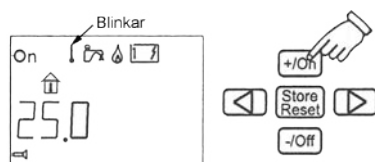


3. Press the left arrow button twice. The control panel reverts to the resting position.

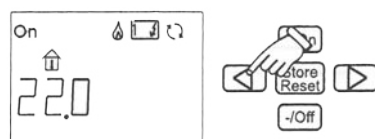


Extra hot water 🔥

If more hot water is required, the amount can be increased temporarily for 30 minutes by raising the water temperature from 50°C to 65°C. After 30 minutes the water temperature returns to 50°C and the symbol is extinguished. The circulation pump stops when extra hot water has been selected.

1. Press the right arrow button until the extra hot water symbol flashes. "OFF" appears beside the temperature on the display.

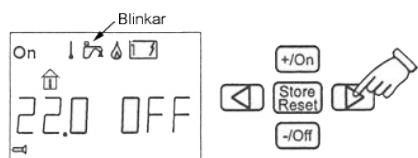


2. The temperature is raised by pressing the +/On button. "ON" appears beside the temperature on the display.

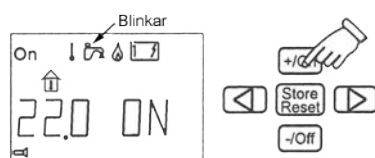

3. Press the left arrow button until the control panel


reverts to the resting position. The symbol for extra hot water is displayed.

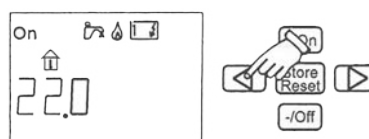


Switching off extra hot water

The extra hot water can be switched off before 30 minutes have passed.

1. Press the right arrow button until the extra hot water symbol flashes. "ON" appears beside the temperature on the display.

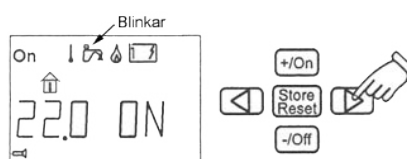

2. Switch off the extra hot water by pressing the -/Off button. "OFF" appears beside the temperature on the display.

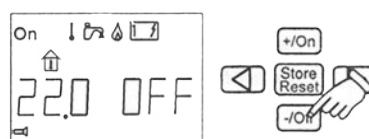


3. Press the left arrow button until the control panel reverts to the resting position. The symbol for extra hot water is extinguished.




Starting the LPG boiler 🔥


1. Press the right arrow button until the LPG heating symbol flashes. "OFF" appears beside the temperature on the display.

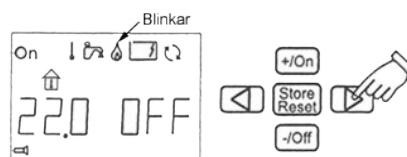

2. Start LPG heating by pressing the +/On button. "ON" appears beside the temperature on the display.

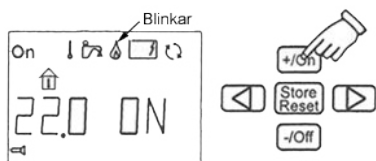


3. Press the left arrow button until the control panel reverts to the resting position. The symbol for LPG heating is displayed.

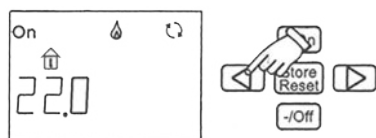


Switching off the LPG boiler


1. Press the right arrow button until the LPG heating symbol flashes. "ON" appears beside the temperature on the display.

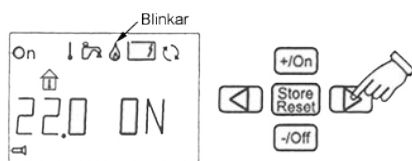

2. Switch off LPG heating by pressing the -/Off button. "OFF" appears beside the temperature on the display.

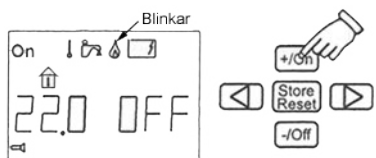


3. Press the left arrow button until the control panel reverts to the resting position. The symbol for LPG heating is extinguished.

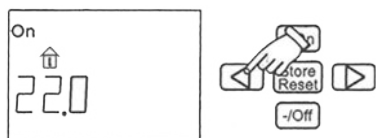


Starting the electric heater 123


1. Press the right arrow button until the electric heating symbol flashes.

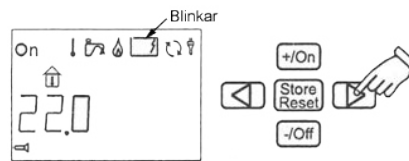

2. Select power output (1 kW, 2 kW or 3 kW) by pressing the +/On button or the -/Off button. In the picture below, 3 kW is selected.

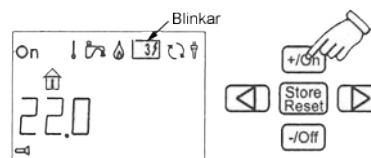


3. Press the left arrow button until the control panel reverts to the resting position. The symbol for electric heating is displayed.

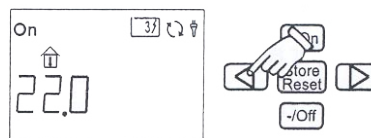


Switching off the electric heater

1. Press the +/On button until the electric heating symbol flashes.

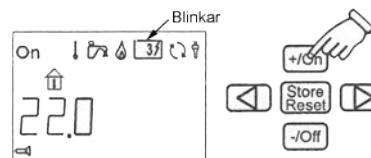

2. Switch off electric heating by pressing the -/Off button until all the power output stages are extinguished.

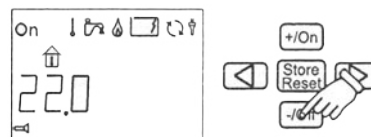


3. Press the left arrow button until the control panel reverts to the resting position. The symbol for electric heating is extinguished.




Circulation pump

When this symbol is lit, the 12 V or 230 V circulation pump is in operation.

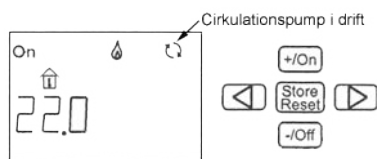


230 V connection

When this symbol is lit, 230 V is connected to the caravan.

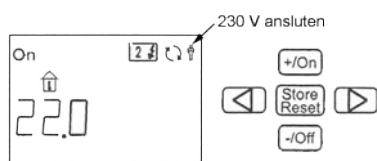

Temperature, inside and outside


The symbol for inside temperature shows the temperature in intervals of 0.5°C. The symbol for outside temperature shows the temperature in intervals of 1°C.

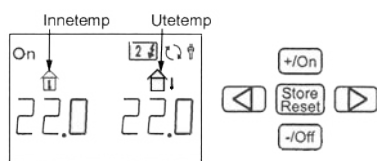


Settings, lower menu row

The lower menu row is used when setting e.g. the clock, remote connection, night-time temperature and auto-start of the boiler. The lower menu row is activated as follows:


1. Press the right arrow button until the lower menu row symbol flashes.

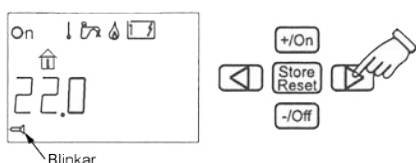

2. Press the +/On button to light the lower row of symbols.

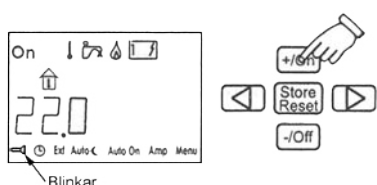

3. Extinguish the lower menu row by pressing the -/Off button when the symbol is flashing. Note that it is not possible to extinguish the menu row if a function is activated.

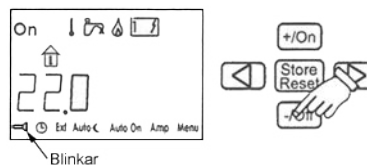


Clock


To set the clock, the lower menu row must first be lit (see “**Settings, lower menu row**”).

If the power to the panel is interrupted, the clock must be reset.


1. Press the right arrow button until the clock symbol flashes.

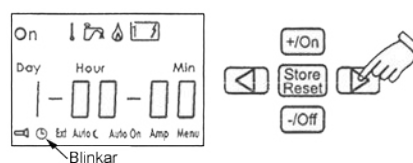


2. Press the +/On button so that “Day” flashes. Set the day of the week with the +/On button or the -/Off button. **Day: 0-7 (1 = Monday, 7 = Sunday, 0 = entire week)**

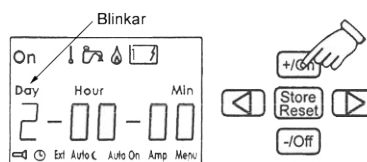


3. Advance to the hour indication with the +/On button so that “Hour” flashes. Set the hour with the +/On button or the -/Off button. **Hours: 0-23**

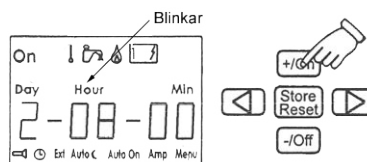

4. Then advance to the minute indication with the +/On button so that “Min” flashes. Set the minutes with the +/On button or the -/Off button. **Minutes: 0-59**

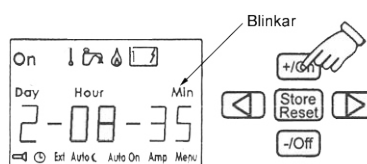


- In order to store the settings, press “Store”. The example below shows Tuesday at 08.35.

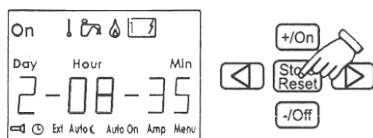


External start (Remote connection) Ext

This function is used to start the heating externally. This function only works if external start (e.g. Caravan Control, see page 37) is installed in the caravan. To set external start, the lower menu row must first be lit (see “*Settings, lower menu row*” on page 41).


- Press the right arrow button until the “Ext” symbol flashes. “OFF” appears beside the temperature on the display.

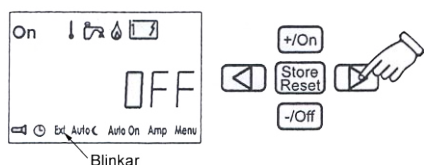


- Press the +/On button so that “ON” appears on the display.

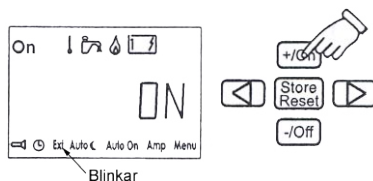

- Press the left arrow button until the “On” symbol flashes. Press the -/Off button.

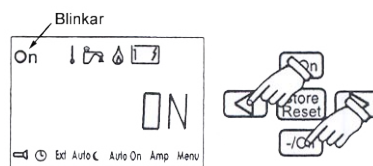

- Press the left arrow button until you come to the resting position. External start is activated.

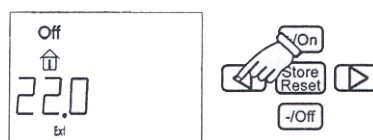


When external start has been activated, the boiler will start with the most recently used settings. To switch of external start, go to the “Ext” symbol in the settings mode and press the -/Off button.


Night-time temperature, manual setting ☾

To set the night-time temperature, the lower menu row must first be lit (see “*Settings, lower menu row*”).


- Press the right arrow button until the night-time temperature symbol flashes. “OFF” appears beside the temperature on the display.

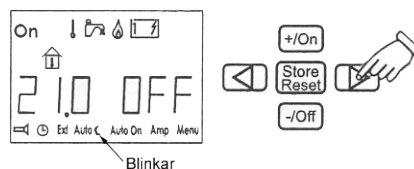

- First press the +/On button. Then adjust the temperature by pressing the +/On button or the -/Off button.

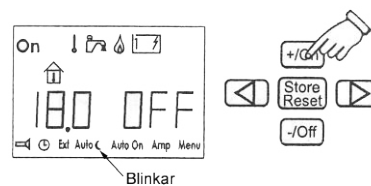

- When the night-time temperature has been selected, press the “Store” button. The night-time temperature symbol flashes and “ON” appears beside the temperature on the display.

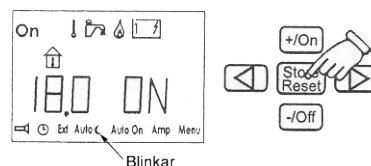

Night-time temperature, automatic Auto ☾


To set automatic night-time temperature, the lower menu row must first be lit (see “*Settings, lower menu row*” on page 41). Start by setting the temperature in accordance with “*Night-time temperature, manual setting*”.

Then select “OFF” by pressing the -/Off button.


- Press the left arrow button until the automatic night-time temperature symbol flashes. Press the +/On button so that the start time is displayed.



- Adjust the start time in accordance with the “*Clock*” section and press “Store”. Adjust the stop time and press “Store” again. “OFF” now appears on the display. If a constant automatic night-time temperature is desired, select day 0, which is equivalent to all the days of the week.

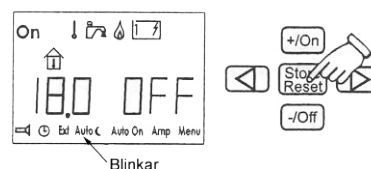


- Press the +/On button to activate the function. "ON" appears on the display.

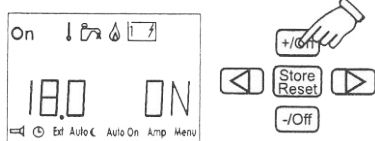


Automatic boiler start AutoOn

This function is used when you want to start the boiler automatically. The boiler will then operate for 24 hours before stopping. The boiler will start automatically the following week. To set automatic start, the lower menu row must first be lit (see "Settings, lower menu row" on page 41).


- Press the right arrow button until the "AutoOn" symbol flashes. "OFF" appears on the display.

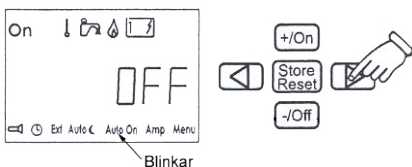

- Press the +/On button. The start time will be displayed. Set the day and time (see "Clock" points 2-5, page 41) and press "Store". "OFF" appears on the display.

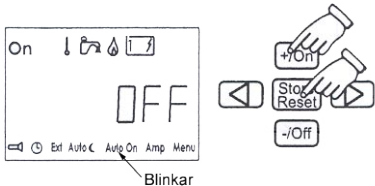


- Press the +/On button to activate the function. Switch off the boiler. AutoOn now appears in the symbol field. The settings are saved even if the power is interrupted.

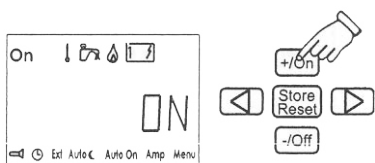

Menu Menu

In the "Menu" position, a number of other functions can be activated. To activate these, the lower menu row must first be lit (see "Settings, lower menu row" on page 41).

Press the right arrow button until the "Menu" symbol flashes. Press the +/On button so that "OF." flashes.

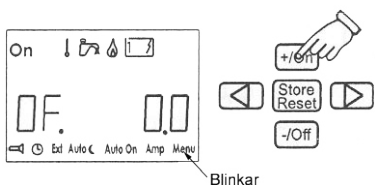


Advance to the various functions using the arrow keys.


OFFSET (Temperature adjustment)

This function is used to calibrate the temperature if you notice that the room temperature does not correspond to the temperature displayed on the panel.

- Press the +/On button when "OF" is displayed. Adjust the temperature displacement with the +/On or -/Off button (+/-5°C in intervals of 0.5°C).

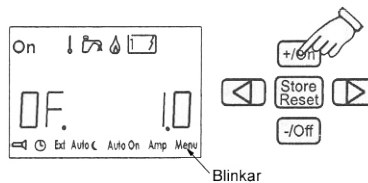


- Press "Store" to exit the OFFSET function.

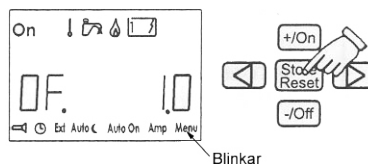


PUMP 12/PUMP AUT.

This function is used to select which circulation pump is to be used. In position PU 12 V, the 12 V pump is used even if 230 V is connected. In position PU AU, the 230 V pump is used. When the boiler is reset, PU AU is activated.

- Use the right arrow key to advance to "PU AU". Press the +/On button and "PU 12" will be displayed.

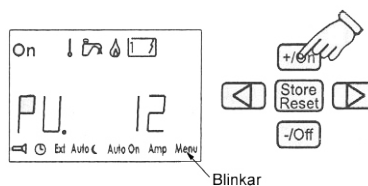


- If you press -/Off, "PU AU" will be displayed. Then press "Store" to exit the selected pump function.

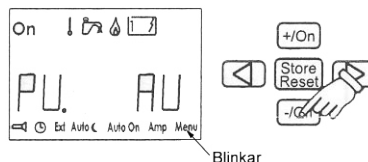


Button sound

This function is used to switch the button sound for the buttons on or off. The button sound is disengaged with the factory settings.

1. Use the right arrow key to advance to “Sn OFF”.

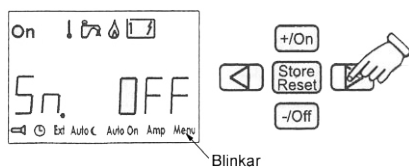


2. Engage button sound by pressing the +/On button, and “Sn ON” will be displayed. If you press -/Off, the button sound will be disengaged again (“Sn OFF”). Then press “Store” to exit the selected button sound function.

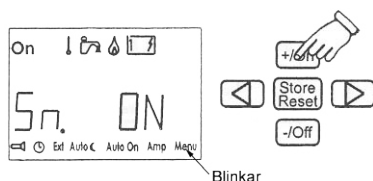


Constant pump operation

With this function, the selected pump is in constant operation.

1. Use the right arrow key to advance to “PE OFF”.

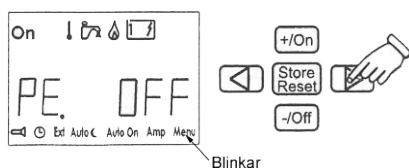

2. Engage constant pump operation by pressing the +/On button, and “PE ON” will be displayed. If you press -/Off, the constant pump operation will be disengaged again (“PE OFF”). Then press “Store” to exit the selected pump operation function.

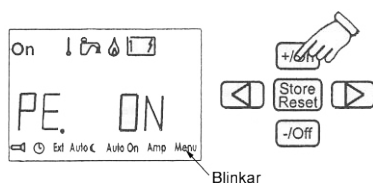


Service


With this function, certain values from the boiler can be presented on the display. The values are updated every second. The values displayed under “Service” are:

- FA (rpm):** The fan’s speed divided by 2.
- RH (temp.):** Temperature in the caravan.
- SH (temp.):** Hot water temperature.
- AH (temp.):** Air temperature, in to the heater (if installed).
- HE (temp.):** Operating temperature.
- OH** : Whether overheating protection is triggered, On or Off.
- HS (X)** : Software version in the heater.
- PS (X)** : Software version on the panel
- I** : Amp.
- WI** : Window switch on/off
- ES** : External start on/off.
- 10-RS** : Heater information, only for ALDE.

1. Use the right arrow key to advance to “SE”.

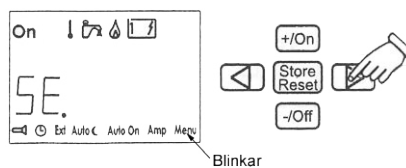

2. Press the +/On button. Then advance using the +/On button or the -/Off button to view the various values. Then press “Store” to exit the “Service” function.

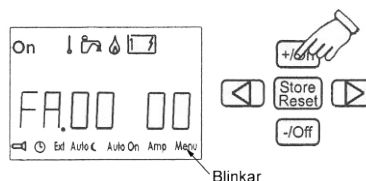

Error messages

If faults occur in the system, the cause is presented in the display. The error messages that are displayed are:

- BATT** : If the vehicle’s battery voltage is below 11 V, the heater stops working. The heater is reset automatically when the voltage reaches 11 V.
- BATT IN** : Low battery voltage in the panel.
- FA** : Incorrect fan speed. Automatic reset after 5 minutes.
- GAS OUT** : No gas left. Reset by switching off and restarting the boiler in accordance with point 1.
- OHEAT 1** : The overheating protection has been triggered. To reset, switch off and then start again.
- OHEAT 2** : The thermostat has been triggered. To reset, disconnect and disconnect the master switch.
- SENSOR** : Fault in the temperature sensors. Disconnect and connect 12 V to the boiler with the master switch.
- WINDO** : Window open, boiler stops for LPG. LPG operation in the boiler starts when the window is closed. Electrical operation functioning. Check in the vehicle instructions whether this function is installed.
- SERIAL** : There is a connection fault between the boiler and the panel. This is normally a mechanical fault in the connection between the heater and the panel. To reset, switch off the main current and then start again.

LPG system

The LPG system is designed in accordance with the Swedish National Inspectorate of Explosives and Flam-

What is LPG

LPG is a fuel made from petroleum. LPG is stored in liquid form in LPG bottles. At atmospheric pressure, LPG is a gas comprising propane or butane, two gases that are simple compounds of carbon and hydrogen. LPG is colourless and odourless. An odorant has been added to the LPG used in caravans in order that leaks can be traced. LPG is heavier than air and therefore collects close to the floor in the event of a leak. It has a high thermal value and burns with a very hot flame. The gas consumes large amounts of oxygen when it burns. It is therefore important to ensure a rich air supply when an LPG flame is lit. For this reason, never block holes and vents in the floor and walls.

LPG consumption


Unit		Grams/hour
Cooker	per/burner	125 g
Boiler, Alde		max. 405 g
Refrigerator, Dometic RM 7291		11.3 g
Refrigerator, Dometic RM 7401		11.3 g
Refrigerator, Dometic RM 7601		15.8 g



You are not allowed to drive into petrol stations with the LPG apparatus lit.

LPG compartment

The LPG compartment is equipped with a lockable lid. The LPG bottle and leak indicator are placed inside the LPG compartment. To keep the lid in the open position, a holder is installed in the compartment (see page 21).

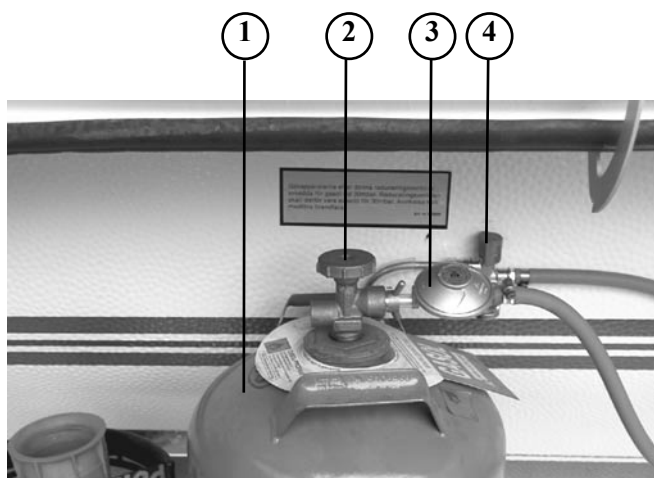

1. LPG bottle
2. Main valve
3. Relief valve, 3 kPa
4. Leak indicator



LPG leaks must be repaired by an expert.



Holes and vents in the floor and walls must never be blocked.

Suspected LPG leak

- Extinguish cigarettes, candles, etc., immediately.
- Switch off all LPG flames.
- Close the shut-off valves for the LPG apparatus.
- Close the main valve on the LPG bottle.
- Ventilate thoroughly. Ensure that there is a draught through the caravan.
- Test the airtightness of the LPG system with the leak indicator (see page 46).
- If the test indicates a leak, contact an expert for remedial action.

Actions in the event of fire

To extinguish small fires in the caravan, you are recommended to have at least a 3 kg powder extinguisher in the caravan. The use of water alone for extinguishing is not recommended.

In the event of a small fire inside the caravan:

Close the shut-off valves inside the caravan and the main valve on the LPG bottle in the LPG compartment.

In the event of a small fire outside the caravan:

If possible, close the main valve on the LPG bottle in the LPG compartment.


LPG bottles

LPG bottles must be kept upright during transport, storage and use. If a bottle is lying down, there is a risk of the bottle's safety valve being disabled. Liquid LPG can also escape in the LPG line and up to the burners, where it can produce flames that flare up in spurts.

- An LPG bottle must not be exposed to abnormal heating. However, it may be stored e.g. in sunlight without problem.
- According to the Swedish Work Environment Authority, all bottles must bear a label showing how the bottle must be handled, who filled it and what has been filled in the bottle.
- All LPG bottles must be carefully checked both before and after filling at the filling station. Any that are not satisfactory must be replaced with new ones.
- All LPG bottles must be inspected periodically in accordance with official provisions.
- A caravan may be equipped with a maximum of two 11 kg LPG bottles located in a compartment outside the caravan.

Leak indicator

The caravan is equipped with a leak indicator that shows if there are any leaks in the LPG system. Every time you use the caravan, you should check if there are any leaks using the leak indicator. This does not replace pressure testing the system, which must be performed at an authorised workshop.

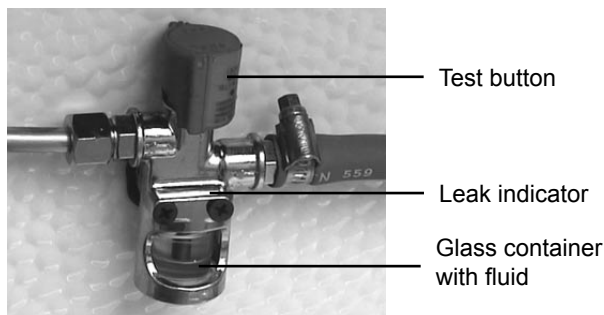

The leak indicator is connected to the LPG line and is located in the LPG compartment.


△ Test the LPG system with the leak indicator every time the system is to be used and whenever you change the bottle.

LPG leak test

1. Check that the leak indicator's container is half-filled with fluid.
If not, top up with fluid as follows:
 - Close the main valve on the bottle if it is open.
 - Unscrew the container and fill with fluid (our part no. 500693) to the upper level indicator.
 - Screw on the container again and check that the gasket is correctly seated.
2. Open the main valve on the bottle. The bottle must not be empty.
3. Turn the knobs for all users to the open position, which will allow the airtightness of the safety devices to be tested as well.
4. If an LPG oven is installed in the caravan, it must be switched off and the thermostat knob set to position 6.
5. All the shut-off valves for the LPG apparatus must be open.

△ Do not use the LPG system if a leak has occurred.

This type of leak test is very sensitive to every pressure change, and therefore indicates the smallest imaginable leak within 10 seconds. If testing is carried out over an extended period, bubbles may start to appear due to pressure variations in the relief valve. If the system has not

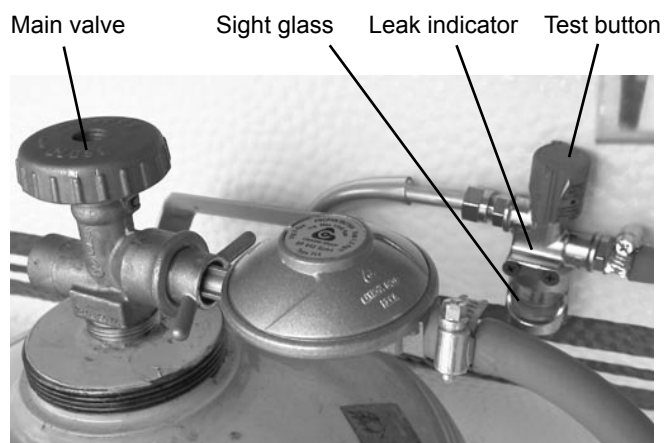


been used for an extended period, bubbles can occur due to the LPG hoses absorbing some of the LPG. In such cases, the test should be repeated a few times.

Once you have ascertained that there is a leak in the system, contact an expert.

Shut-off valve

The caravans are equipped with one or more shut-off valves for the LPG apparatus. The shut-off valve is usually located under the refrigerator or in the lower sink cupboard.

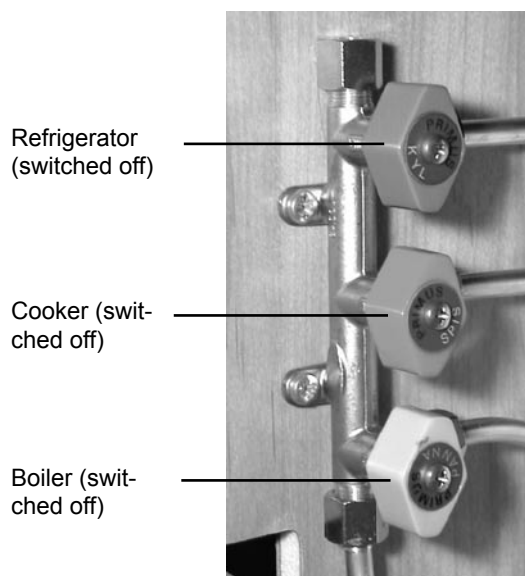


Checking leak indicator

After filling with fluid, the airtightness of the leak indicator should always be checked. The leak indicator is self-testing, i.e. if a leak has occurred in the leak indicator, bubbles will appear in the container when the test button is pressed. Don't forget to open the main valve on the LPG bottle before performing the check.

Also check the function of the leak indicator from time to time. This is done by switching on e.g. the refrigerator and then pressing the red test button. If there are no bubbles, the tester may be clogged with dirt. This must be rectified by an expert.

Checking LPG system

- An authorised workshop should carry out an "LPG test" at least once a year. This test includes pressure testing.
- All LPG hoses must also be checked in conjunction with the annual "LPG test". Replace worn and split hoses. LPG hoses are located in the LPG compartment and by the LPG oven, if one is installed in the caravan.
- Perform routine airtightness tests on the LPG system yourself with the leak indicator (see page 46).
- Check the airtightness between the wing coupling on the relief valve and the main valve on the LPG bottle every time you change the bottle. Use leak spray, our part no. 500423. If bubbles appear, there is a leak. Tighten the wing coupling further. If there are still bubbles, the relief valve must be replaced.

 Remedial measures on the LPG system must be performed by an expert.


New/newly filled LPG bottles

Condensation and unusable LPG can be found at the top of a new or newly filled LPG bottle. The bottle should be blown clean before being connected in the system. Proceed as follows:

1. Unscrew the protective cap over the main valve, then unscrew the threaded protective screw cap (red plastic) located where the wing coupling is to be connected.


2. Open the main valve on the LPG bottle briefly (approximately 2 seconds). Do this in an open space outdoors, i.e. not close to the caravan or the car.

The bottle is now ready to be connected.

 Blow clean the LPG bottle with great care, and never in the vicinity of the caravan, naked flames, cigarettes, etc.

Replacing LPG bottle

1. Ensure that all LPG apparatus in the caravan is switched off.
2. Close the main valve on the LPG bottle and undo the straps.
3. Unscrew the relief valve from the bottle by turning the wing coupling clockwise (left-hand thread).
4. Prepare the new bottle in accordance with the instruction "*New/newly filled LPG bottles*".
5. Replace the LPG bottle and screw on the relief valve again.
6. Secure the bottle once more with the straps.
7. Open the main valve.
8. Check that the connection and the bottle's main valve are sealed with the aid of leak spray or soapy water.
9. If any of the LPG apparatus was switched on while the bottle was being replaced, it must be restarted.

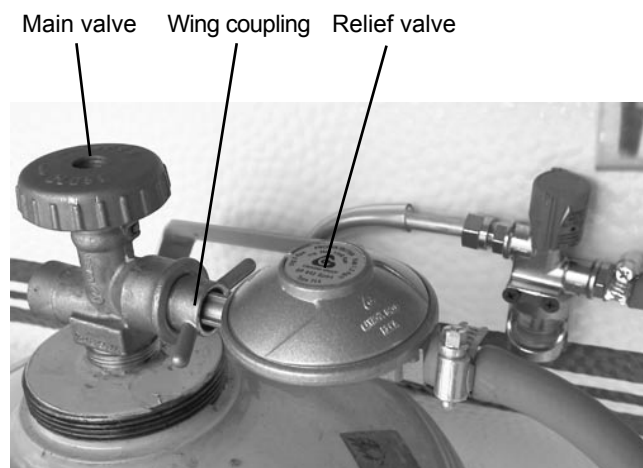

Cooker

The cooker has three burners with an adjustable flame. Each burner has a safety device that prevents LPG leaking out into the caravan in the event of the flame going out. The cooker is equipped with a folding lid. In some caravans, there is also a flame guard on the wall by the cooker. The shut-off valve for the LPG to the cooker is located in accordance with the description in the section “*Shut-off valve*” on page 46.

⚠ Under no circumstances may the cooker be used to heat up the caravan.

⚠ The lid over the hob must be folded up fully before lighting the cooker (see picture).




Lighting the cooker

1. Fold up the lid covering the hob, and ensure that there are no flammable objects close to the burners.
2. Open the main valve on the LPG bottle and the shut-off valve for the cooker.
3. Light a match or a lighter, and hold it close to the burner.
4. Turn the LPG knob for the relevant burner to max and push in the knob.
5. When the LPG flame is lit, hold the LPG knob pressed for a further 10-15 seconds.

The burner is switched off by turning the LPG knob so that the filled circle is at the top nearest the burners. Then close the shut-off valve by the sink.

⚠ Ensure that there are no flammable objects close to the burners.

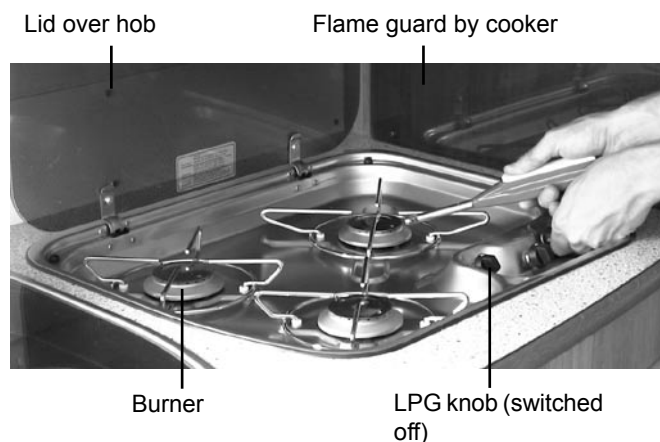

Oven

LPG oven

Some caravans may be equipped with a Cramer LPG oven. The oven is thermostat-controlled and has electric ignition and a grill function.

The door is fitted with a catch that must be engaged when driving with the caravan. The catch must also be engaged if there are any children in the caravan.


The ventilation grille becomes warm when the oven is in use.

Facts and figures

Oven type	Cramer CBCG
Fuel	LPG
LPG consumption, standard	85 g/h
LPG consumption, grill	115 g/h

Starting the LPG oven

The first time the oven is used, it must be heated at full power for around 30 minutes. Ensure good ventilation. Wire shelves, baking trays and grill pans should be washed with a mild dishwashing detergent before use.

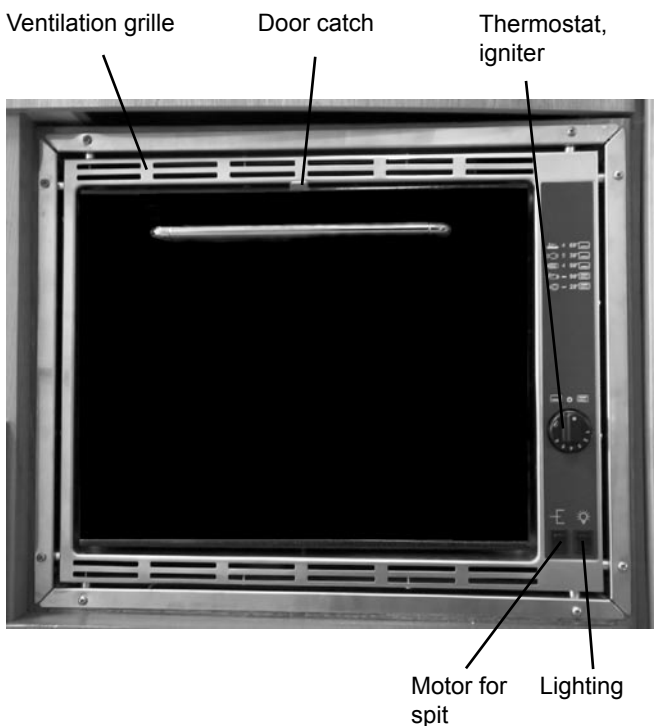

1. Open the main valve on the LPG bottle and the shut-off valve at the sink.
2. Open the oven door.
3. Press in the thermostat knob and twist to the ignition position (1). Hold the knob depressed for 5-10 seconds. The ignition spark is produced automatically by the spark plug in this position.

4. When the flame has lit, release the knob and turn it to the desired position.
5. The oven is ready for use after having been lit for 10-15 minutes.

There are 6 different positions on the thermostat knob, corresponding to the following temperatures in °C:

No.:	1	2	3	4	5	6
Temp.:	140	170	190	210	230	250

When the thermostat knob is turned to OFF, the oven goes out. After use, close the shut-off valve at the sink.

⚠ When driving with the caravan, the oven's door catch must be engaged.

⚠ The ventilation grille becomes warm when the oven is in use. Keep children away from the oven!

⚠ If the burner's flame goes out unintentionally, close the valve for the burner and wait for at least 1 minute before reigniting.

Instructions for using the oven's grill function can be found in the instruction manual supplied with the oven.

Microwave oven

Some caravans may be equipped with a microwave oven. The microwave is powered with 230 V alternating current.

Instructions for the use and maintenance of the microwave oven can be found in the instruction manual supplied with the oven.

Heating system


Facts and figures

Fluid in the system	Water/glycol mixture 46% glycol (Consumption: see page 53)
Circulation pump 12 V capacity	3-6 litres/minute
Circulation pump 12 V output requirement	2 W

The system mainly comprises an LPG boiler, radiator loop with convectors, waterborne underfloor heating, circulation pump and expansion tank.

The boiler is located in the front left-hand bed box. The boiler is equipped with a 3 kW electric heater, a water heater and a 230 V circulation pump.

230 V circulation pump

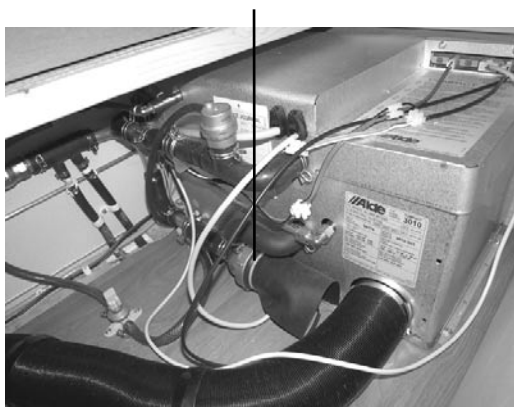

In order to use the electric heater at full power, a 16 A fuse is required in the electric post.

The caravan is also equipped with a 12 V circulation pump, which is installed in the lid of the expansion tank. In most models, the expansion tank is located in the wardrobe in which the caravan's battery is installed. In some models it is located in the adjacent wardrobe.

Expansion tank Circulation pump





The convectors (radiators) comprise tubes with fins for emitting heat.

LPG boiler

Facts and figures

Alde Compact 3010	
Fuel	LPG (propane)
Output, stage 1	3.3 kW
Output, stage 2	5.5 kW
Gas consumption, stage 1	245 g/hour
Gas consumption, stage 2	405 g/hour
Gas pressure	28-30/37 mbar
Output 230 V	1050+2100 W
Power consumption 12 V	1 A (max)
Fuse	2 A
System temperature	80°C
Water heater	8.4 litres

 Remedial measures on the LPG system must be performed by an expert.

 You are not allowed to drive into petrol stations with the LPG apparatus lit.

Starting the LPG boiler

1. Open the main valve on the LPG bottle, if this has not already been done.
2. Open the shut-off valve for the boiler (see page 46).
3. Set the battery switch in the central battery unit (see page 28) to the "ON" position if this has not already been done.
4. Set the desired temperature in accordance with "*Temperature setting*" on page 39.
5. Start the LPG boiler in accordance with "*Starting the LPG boiler*" on pages 39 and 40.

If the power is interrupted, the boiler can be started automatically with the most recent settings, see "*Starting the heating*" on page 38.

Switching off the LPG boiler

1. Switch off the LPG boiler in accordance with "*Switching off the LPG boiler*" on page 40.
2. Close the shut-off valve for the boiler (see page 46).

Electric heater

Facts and figures

Mains voltage	230 V, 50 Hz	
Output, position 1	1050 W	6 A fuse
Output, position 2	2100 W	10 A fuse
Output, position 3	3150 W	16 A fuse

The electric heater is built into the heating boiler. This heater is not sufficient to heat up the caravan when it is

really cold outside. If more heat is required, the electric heater must be run together with the LPG boiler.

It has a maximum output of 3150 W. In order to use full power, a 16 A fuse is required in the electric post.

Instructions for using the electric heater can be found in section **“Starting the electric heater”** below and on page 40.

Starting the electric heater

The electric heater in the Alde 3010 has a maximum output of 3150 W. In order to use full power, the electric post must therefore have a 16 A fuse.

1. Connect 230 V to the caravan.
2. Set the master switch for 230 V to the “ON” position.
3. Set the battery switch in the central battery unit (see page 28) to the “ON” position if this has not already been done.
4. Set the desired temperature in accordance with **“Temperature setting”** on page 39.
5. Start the electric heater in accordance with **“Starting the electric heater”** on page 40.

If the power is interrupted, the boiler can be started automatically with the most recent settings, see **“Start the heating”** on page 38.

Switch off the electric heater

1. Switch off the electric heater in accordance with **“Switching off the electric heater”** on page 40.

Heating with the electric heater and boiler working together

In extremely cold conditions, the electric heater’s output may not be sufficient to heat up the caravan. In this situation, the electric heater can be run together with the LPG boiler. This method produces maximum output from the heating system. The electric heater is given priority in the first instance, and the LPG boiler starts up automatically if required.

Start the electric heater and the LPG boiler at the same time in accordance with the instructions **“Starting the LPG boiler”** on page 50 and **“Starting the electric heater”** on page 51.

Using the water heater

The boiler contains a built-in water heater. The water heater has a volume of approximately 8.5 litres of fresh water. When fully utilised, the water heater can produce around 12 litres of water at 40°C per half-hour (at a cold water temperature of 10°C).

If more hot water is required, the amount can be increased temporarily for 30 minutes by raising the water temperature from 50°C to 65°C. To raise the water temperature, see **“Extra hot water”** on page 39.

If the fresh water system has been empty, the water heater should be ventilated before use. This is achieved by opening a hot water tap and leaving it open until water begins to run out the tap.

Always flush through the water heater before use after it has been out of use for an extended period. When used continually, it should be emptied approximately once/month.

When the water heater is to be used, the LPG boiler should be started in advance and allowed to run for a while in order to produce the maximum amount of hot water. It takes longer to heat the water if the electric heater is used instead of gas.

When the caravan is not in use, the water heater must be emptied to avoid damage to the heater when there is a risk of frost.




The fresh water in the water heater must always be drained out when the caravan is not going to be used.

For information regarding emptying the water heater, see **“Emptying the fresh water”** on page 60.

Controlling the heat

In caravans with waterborne underfloor heating, the heating can be partially switched off in the rear sleeping section of the caravan. This is achieved by closing the shunt valve installed in the caravan’s heating loop.

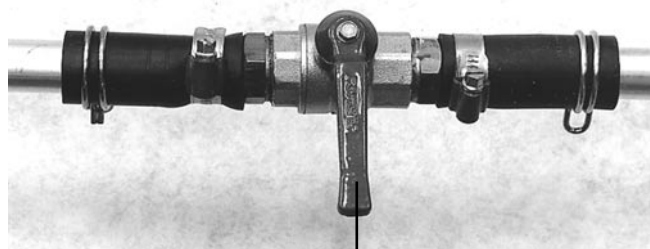

Shunt valve closed

The location of the shunt valve can be seen from the table below.

Shunt valve location

Caravan	Location
Artic 480 MHP T1 520 MHC	Wardrobe, left rear Bed, left rear
Artic/Finl. 560 MHC Artic/Finl. 560 MH	TV bench, left rear Bed, left rear
Artic/Finl. 560 NS Finlandia 560 LK	Front bed box, left rear Bed, left rear
Other	Left bed box, front

Winter connection function (Mountain connection)


If you want to leave the caravan for a while, and want somebody else to start up the heating by connecting the caravan to 230 V, the built-in “winter connection function” can be used..

Settings for winter connection function:

If no settings are made on the control panel for the boiler, the boiler will start up with the most recently used settings when 230 V is connected to the caravan. This means that if the heating was most recently run using LPG, the settings will be changed to 230 V operation.

(If no changes to the settings are required, skip point 1 below.)

1. Set the desired power output and operating method (see “*Starting the electric heater*”) and the temperature (see “*Temperature setting*”) on the control panel for the boiler. The picture below shows an example of settings.

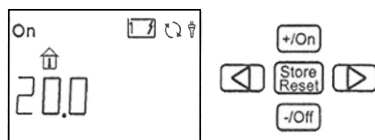

2. Check that the master switch and the miniature circuit breakers on the 230 V central electrical unit are in the “ON” position.
3. Switch off the battery switch on the control panel.
4. Set the battery switch on the central battery unit to the “OFF” position..

The heating now starts when 230 V is connected to the caravan.

External start (Remote connection)

In caravans that have Caravan Control installed, it is possible to control and monitor the caravan’s heating system remotely using SMS via a mobile telephone.

The caravan’s heating system can be started with either electric or LPG heat. However, heating with LPG heat is only recommended in special circumstances. This means that if the heating was most recently run using LPG, the settings will be changed to 230 V operation.

The heating is started and stopped by sending the SMS command **#heating on** or **#heating off** to the caravan. If no settings are made on the control panel for the boiler, the boiler will start up with the most recently used settings when an SMS is sent to the caravan.

(If no changes to the settings are required, skip points 1 and 2 below.)

Settings for external start of electric heater:

1. Set the desired power output and operating method on the control panel for the boiler (see “*Starting the electric heater*” on page 40).

2. Set the desired temperature (see “*Temperature setting*” on page 39).
3. Activate the remote connection on the control panel in accordance with “*External start (Remote connection)*” on page 42.
4. Check that the master switch and the miniature circuit breakers on the 230 V central electrical unit are in the “ON” position.
5. Switch off the battery switch on the control panel.
6. Set the battery switch on the central battery unit in the “OFF” position.
7. Check that the heating is switched on by sending the message **#heating on** to the caravan. The CC unit should respond with **01:1 Heating on**. Then switch off the heating with **#heating off**. The unit should respond with **01:0 Heating off**.

The heating now starts when an SMS is sent to the caravan.

Read more about how to use Caravan Control in the user instructions supplied the caravan.

Underfloor heating

All caravans are equipped with waterborne underfloor heating.



Do not insert nails or screws, make holes or perform other mechanical actions in the vicinity of the hoses for the underfloor heating. See section “*Dimensions and weight*” on page 6.

Fan in washroom

Some caravans (except caravans with a corner toilet) may be equipped with a fan in the washroom. The fan is located under a convector behind the convector guard. Switching on this fan makes the drying of clothes, towels, etc., more efficient.

The fan is started up with a switch located in the cupboard under the wash unit.


Filling with fluid

Use at least a 45% glycol mixture. However, the glycol mixture may not exceed 50%. Use glycol that does not corrode aluminium.

If the fluid level in the expansion tank falls due to a reason other than simple evaporation, check all joints, drainage plugs and air nipples for leaks.

⚠ Check the glycol content at least once a year.

Add fluid in the expansion tank, which in most models is to be found in the wardrobe where the caravan's battery is located. In order to access the tank, the cover panel in front must be removed first. The panel is secured with Velcro. The expansion tank must be 1/3 filled (in cold system). After operating the heating system for a while, it may be necessary to add extra fluid, as the system has been bled.

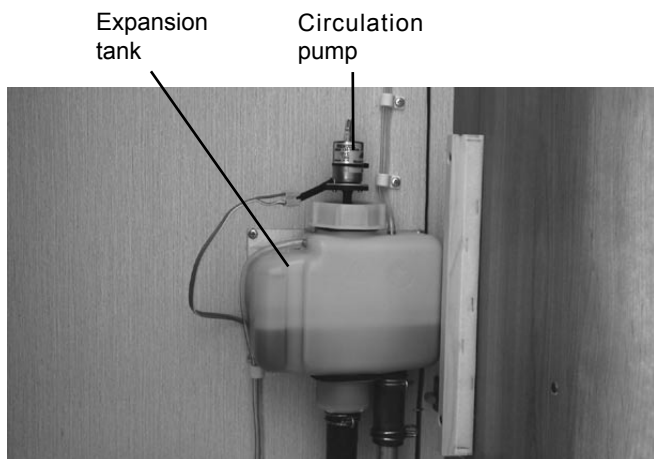

Replacing fluid


The fluid in the heating system must be replaced at least every other year. The system must always be filled (at least 1/3 of the expansion tank) as there is then less risk of corrosion. The system is emptied by unscrewing the drainage plugs under the floor by the outer door as well as under the boiler. A 6 mm Allen key is required for this.

Consumption, fluid in the system

480	approx. 10.1 litres
520	approx. 10.6 litres
560	approx. 11.1 litres
600	approx. 11.4 litres
630	approx. 11.8 litres

⚠ Never allow the heating system to be empty of fluid.

Drainage plug by outer door/under boiler

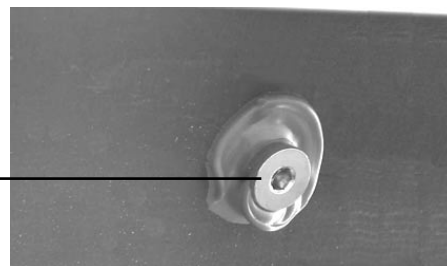

⚠ Check the fluid level in the system regularly.


Bleeding the heating system

When the system has been emptied of all fluid, it must be bled after being filled again.

If the heat only goes a metre or so into the pipes from the boiler, this is a good sign that there is air in the system. Bleeding takes place through the automatic bleeder on the boiler and the air nipples in the caravan.

⚠ Never bleed the heating system when the circulation pump is running.

Automatic bleeder, boiler

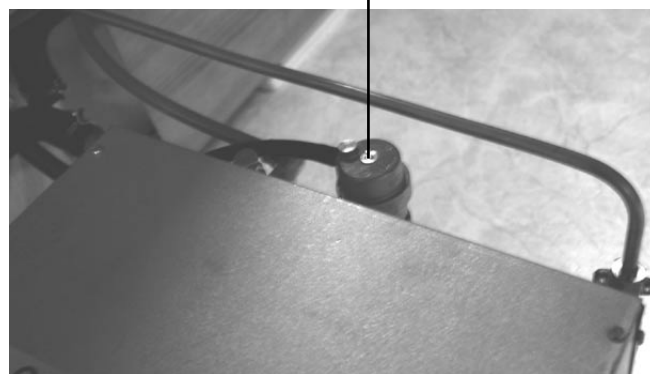


Bleeding the heating system

1. Start the boiler. The circulation pump must be switched off.
2. Open the air nipples (see "*Location of the air nipples*" on page 54) and leave them open until fluid exits from the system.
3. Start the circulation pump and allow it to run for a while.
4. Check whether pipes and convectors become warm around the caravan.
5. If there is still air in the system, repeat points 1-4.

Luftnippelnas placering

Caravan	Location
Artic 480 MHP	Right bed box, front + Washroom under wash unit
T1 520 MHC	Right bed box, front
Artic 520 TBR	Right bed box, front + Cupboard under sink
Artic/Finl. 560 MH Finlandia 560 LK	Right bed box, front + Washroom under wash unit
Artic/Finl. 560 MHC Artic/Finl. 560 NS	Right bed box, front + Washroom under wash unit
Finlandia 560 TBR	Right bed box, front + Cupboard under sink
Finlandia 600 MH Finlandia 600 LK	Right bed box, front + Washroom under wash unit
Finlandia 600 MHC Finlandia 600 NS	Right bed box, front + Washroom under wash unit
Finlandia 600 TBR	Right bed box, front + Wardrobe, left rear
Finlandia 630 MH Finlandia 630 LK	Right bed box, front + Washroom under wash unit
Finlandia 630 MHC Finlandia 630 NS	Right bed box, front + Washroom under wash unit
Finlandia 630 TBX	Right bed box, front + Rear bed box, central seating area

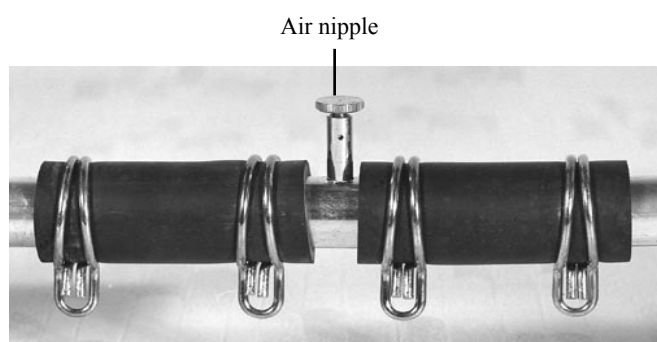


If air pockets continue to form, these can be removed by tilting the caravan alternately forwards and backwards as far as possible. First stop the circulation pump. Tilt the caravan forwards and allow it to remain in this position for a few minutes so that the air has time to move up in the system. Then open the air nipple at the highest point and leave it open until all the air has escaped. Then tilt the caravan backwards and repeat the procedure in this position. Then place the caravan horizontal and start the circulation pump. Check whether pipes and convectors become warm around the caravan.

Fault-tracing

The boiler will not start

- If the procedure for starting the boiler has been carried out in accordance with the instruction on page 50, but the boiler does not start, check that there is LPG in the bottle or, if it is new, perform the procedure in accordance with instruction on page 47.
- In cold conditions, there is a risk that the relief valve on the LPG bottle may have frozen. Bring the valve in and thaw it out or, if possible, try a different valve.
- Check that the battery has not discharged.
- Check that the fuses (2 A) on the boiler are intact (see picture below), and that power is being supplied to the boiler (> 11 V).
- Check that the electric connections on the boiler are securely connected.
- Check whether an error message is presented on the control panel display, see **“Error messages”** on page 44.
If the overheating protection has been triggered, check that the boiler is properly bled in accordance with the instructions on pages 53 and 54 before it is started again.

If the boiler does not start despite the above measures being carried out, contact the service workshop.

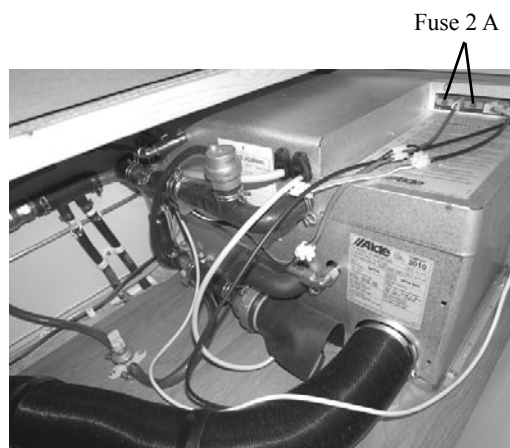

Electric heater not working

- If the procedure for starting the electric heater has been carried out in accordance with the instructions on page 51 and the electric heater does not work, check that:
 - 230 V is connected to the caravan.
 - the fuses in the 230 V central electrical unit have not blown.
 - the earth leakage circuit breaker in the central electrical unit has not been tripped.
 - the fuse in the pitch's output has not blown or is not defective.
 - the relays in the boiler switch on (a soft click should be heard).

- Check whether an error message is presented on the control panel display, see **“Error messages”** on page 44.

If the overheating protection has been triggered, check that the boiler is properly bled in accordance with the instructions on pages 53 and 54 before it is started again.

If the electric heater does not work despite the above measures being carried out, contact the service workshop.



All electrical work in the electric heater must be carried out by an authorised person.

12 V circulation pump does not start

If the circulation pump does not start, check that:

- the battery switch in the central battery unit is switched on.
- the fuses in the central battery unit are intact.
- the cables for the circulation pump are securely connected.
- the operation method on the control panel is correctly set in accordance with **“Menu, Pump 12/Pump out”** on page 43, and that the temperature is higher on the thermostat than in the caravan.

If the circulation pump does not start despite the above measures being carried out, contact the service workshop.

230 V circulation pump does not start

If the circulation pump does not start, check that:

- 230 V is connected to the caravan.
- the fuses in the 230 V central electrical unit have not blown.
- the earth leakage circuit breaker in the central electrical unit has not been tripped.
- the fuse in the pitch’s output has not blown or is not defective.
- the operation method on the control panel is correctly set in accordance with **“Menu, Pump 12/Pump out”** on page 43, and that the temperature is higher on the thermostat than in the caravan.

If the circulation pump does not start despite the above measures being carried out, contact the service workshop.

Refrigerator

The caravans may be equipped with different refrigerators, either an 86 litre (RM7291), a 97 litre (RM 7401) or a 142 litre (RM 7601) refrigerator made by Dometic. All refrigerators are equipped with a freezer compartment. The RM 7601 is equipped with frame heating around the freezer compartment to prevent condensation forming during the hottest months of the year. This heating is engaged with a switch on the refrigerator's control panel.

The refrigerator door is equipped with a transit safety catch, in order to lock the door before driving with the caravan.

The refrigerator can be operated in three different ways: 230 V, 12 V or LPG. The refrigerator works best if the caravan is horizontal.

The refrigerator's 12 V operation should only be used when the car's engine is running. (The electrical connection between car and caravan should be executed in accordance with the instructions on page 28.)



Check that the connection for 12 V from the car is properly executed and working. If this connection does not work, there is a risk of the caravan's battery being de-energised.



Don't forget to lock the refrigerator door with the transit safety catch before driving with the caravan.



You are not allowed to drive into petrol stations with the LPG apparatus lit.

Ventilation

In order for the refrigerator to work satisfactorily, the heat that it generates must be removed through ventilation. The space behind the refrigerator is completely separated from the caravan space and is ventilated through two grilles behind the refrigerator. These grilles must not be covered or blocked.

Caravans equipped with the RM 7601 refrigerator have only one ventilation grille, but there is also a vent for refrigerator ventilation installed in the roof. It is important to check this vent to ensure it is not blocked by snow, leaves, etc.



The external ventilation grilles and vents for the refrigerator may not be blocked or covered under any circumstances, except for with the covers supplied.

Covers

All caravans, except for caravans equipped with the RM 7601 refrigerator, are fitted with two covers. Caravans with the RM 7601 refrigerator are fitted with one cover.


These covers should be used when the external temperature is below -10°C. These covers should also be used when washing the caravan.

Installing cover

1. Hook the edge of the cover into the bottom hole in the ventilation grille.
2. Fold up the cover and press it into place.

Hole in ventilation grille

Ventilation grille

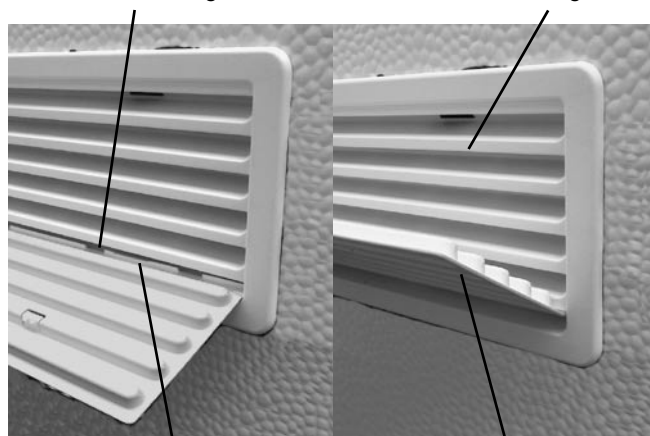

Edge of cover

Cover

Removing cover

1. Press down the catches on the cover one at a time using a screwdriver.
2. At the same time, grip the upper edge of the cover and carefully pry off the cover.



Catch, protective cover

Facts and figures

Dometic	RM	RM	RM
Volume	7291	7401	7601
Gross	86 L	97 L	142 L
Net	78 L		138 L
of which freezer compartment	10.5 L	10.5 L	25 L
Weight	27 kg	29 kg	42 kg
Electrical data			
Output 230 V	135 W	135 W	200 W
Output 12 V	120 W	130 W	170 W
Energy consumption / day	2,6 kWh	2,6 kWh	3,2 kWh
Refrigerant	Ammonia	Ammonia	Ammonia
Technical gas data			
LPG consumption / day	270 g	270 g	380 g

Refrigerator


RM 7291/7401




RM 7601



RM 7291/7401

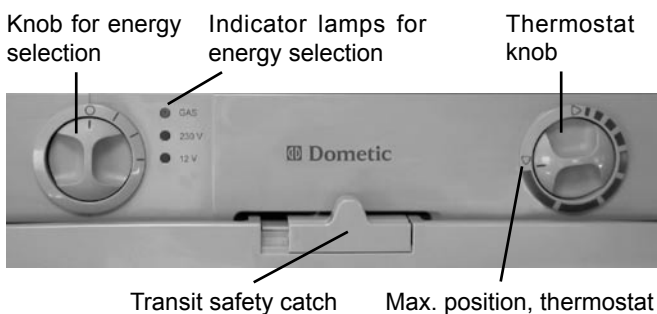

RM 7601

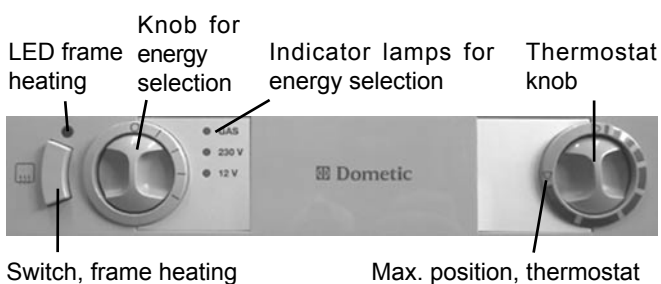

Using the refrigerator

RM 7291, RM 7401 and RM 7601

The refrigerator can be powered with 230 V, 12 V (only from the car) or LPG. The refrigerator is supplied with a safety device that automatically switches off the LPG supply if the flame goes out.

As it takes several hours for the refrigerator to reach normal operating temperature, it is advisable to start it in good time before being used. Allow the refrigerator to run at the maximum setting on LPG or 230 V for a few hours before your departure. When the refrigerator has become cold, turn the thermostat knob to the desired position for normal operation.

NOTE! The efficiency of the refrigerator can be affected by the surrounding temperature. For optimum cooling at temperatures of between +15°C and +25°C, select the intermediate position on the temperature knob.

Don't forget to lock the doors with the transit safety catch before departure.

Starting the refrigerator with LPG operation

1. Check that the battery switch on the central battery unit is in the "ON" position.
2. Open the main valve on the LPG bottle and the shut-off valve for the refrigerator.
3. Turn the thermostat knob to the max. position for

optimum cooling of the refrigerator.

4. Set the knob for energy selection to the "GAS" position. Ignition now takes place automatically. A ticking sound should be audible.
5. When the LPG has lit, the flashing and ticking will cease and the yellow indicator lamp "GAS" will be lit.

If the indicator lamp starts to flash again, turn the energy selection knob to the "OFF"/"O" position. Then repeat the procedure for starting the refrigerator in accordance with points 4-5.

If the flame goes out, it will be lit again automatically. If the flame is not lit within approximately 30 seconds, the safety device shuts off the LPG supply. It is then necessary to turn the energy selection knob to the "OFF"/"O" position. Then repeat the procedure for starting the refrigerator in accordance with points 4-7 in order to light the flame again.

NOTE! If there is air in the lines, it may take several minutes before LPG reaches the burner and lights the flame.



When driving with the caravan, the refrigerator should be powered with 12 V. You are not allowed to drive into petrol stations with the refrigerator running on LPG.

Starting the refrigerator with 12 V operation

When driving with the caravan, the refrigerator should be powered with 12 V. However, the refrigerator's 12 V operation should only be used when the car's engine is running. The electrical connection between car and caravan should be executed in accordance with the instructions on page 28. If this connection has not been made, there is a risk of the caravan's battery being de-energised.

Remember that 12 V operation is only sufficient for keeping an already chilled refrigerator cold. You should therefore allow the refrigerator to run on LPG or 230 V for a few hours before your departure.

1. Set the knob for energy selection to the "12 V" position. The green indicator lamp for 12 V should light when the refrigerator is in operation.
2. Turn the thermostat knob to the desired temperature position for normal operation.



Check that the connection for 12 V from the car is properly executed and working. The 12 V operation will not work otherwise.



Remember that 12 V operation is only sufficient for keeping an already chilled refrigerator cold. You should therefore allow the refrigerator to run on LPG or 230 V for a few hours before your departure.

Starting the refrigerator with 230 V operation

1. Set the knob for energy selection to the "230 V" position. The green indicator lamp for 230 V should light when the refrigerator is in operation.
2. Turn the thermostat knob to the "MAX" position for optimum cooling of the refrigerator.

Switching off the refrigerator

1. Turn the knob for energy selection to the “OFF”/”O” position.
2. Turn the thermostat knob to the min. position.
3. Close the shut-off valve for the LPG supply to the refrigerator.
4. Empty and defrost the refrigerator in accordance with the instructions in the section “Defrosting”.
5. Clean the refrigerator in accordance with the section “Cleaning”.
6. Leave the doors ajar.

△ When the refrigerator has been switched off and the door placed in the ventilation position, check that the refrigerator’s interior lighting is not lit.

Defrosting

Frost forms on the refrigerator surfaces over time. For this reason, the cooling element should be checked regularly every week. If the frost is 3 mm or thicker, the refrigerator must be defrosted. When defrosting, the refrigerator is switched off. After this, all its contents are removed and the door is left ajar. Defrosting must not be speeded up in any way through the use of any type of heat source or by using sharp objects to scrape away the ice. The melt water runs down into a bowl and evaporates (only RM 7291, RM 7401 and RM 7601).


The freezer compartment only needs to be defrosted at longer intervals, and to do this the refrigerator has to be switched off completely. This meltwater has to be dried up with a cloth or towel.

Cleaning

When cleaning, use a solution comprising two teaspoons of bicarbonate per litre of water or a mild, unperfumed soap solution. Detergents and steel wool must not be used. If the refrigerator is not going to be used, it should be cleaned and the door left ajar.

The cooling apparatus on the rear of the refrigerator should be cleaned from time to time. It is possible to vacuum clean through the external ventilation grilles. The refrigerator must be disconnected from 230 V.

△ When cleaning the cooling apparatus, the refrigerator must be disconnected from 230 V by pulling the plug out of the wall socket.

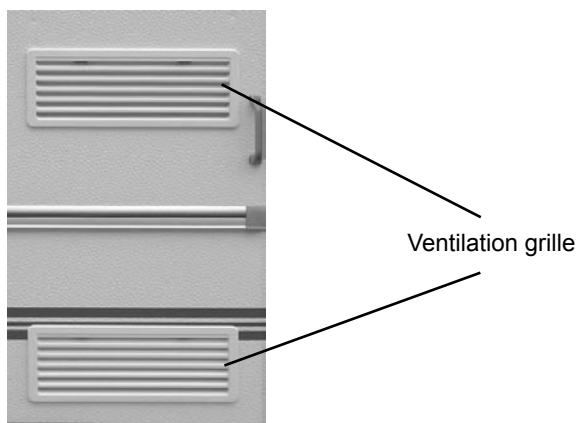

Service

When the lower ventilation grille has been removed, it is possible to perform most inspection and service measures on burners, electric heaters and piezo ignition.

△ Remedial measures on the LPG system must be performed by an expert.

Fault-tracing

Check the following before contacting an expert:

- That the INSTRUCTIONS in this manual have been followed.
- That the refrigerator is not tilting too much in any direction.
- Whether the refrigerator works using any of the operating methods.

Fault-tracing the refrigerator

- If the refrigerator does not work with LPG operation, check that:
 - the battery switch in the central battery unit is switched on.
 - the fuses adjacent to the battery switch are intact.
 - the knob for energy selection is in the “GAS” position.
 - the LPG bottle is not empty.
 - the main valve on the LPG bottle and the shut-off valve for the refrigerator are open.
- If the refrigerator does not work with 12 V operation, check that:
 - the knob for energy selection is in the “DC” or “12 V” position.
 - the fuses for the parking lights on the car are intact.
 - the connection in the car has been executed in accordance with the instructions on page 28, and that there is current from the car.
 - the voltage is not too low.
- If the refrigerator does not work with 230 V operation, check that:
 - 230 V is connected to the caravan.
 - the fuses in the 230 V central electrical unit have not blown.
 - the earth leakage circuit breaker in the central electrical unit has not been tripped.
 - the fuse in the pitch’s output has not blown or is not defective.
 - the knob for energy selection is in the “AC” or “230 V” position.

If the refrigerator still does not work, contact an expert.

Possible reasons for the refrigerator not being sufficiently cold

- The ventilation is blocked in some way, e.g. by dirt or covers.
- The refrigerator should be defrosted.
- The thermostat knob is incorrectly set.
- The door is not properly closed or has been opened unusually often.

△ The refrigerator’s cooling system is closed and must not be opened. The system contains corrosive substances under high pressure.

Water system

The system comprises a water heater, a 40 litre water tank with a submersible pump, which is controlled by valves with microswitches, as well as lines to the taps in the kitchenette and washroom. A 10 litre water tank is also installed in some caravans. This extra tank is connected directly to the sink's cold water tap.

The water pump starts when the tap handle is twisted. The switch for the water pump on the control panel must first be switched on (see *"Control panel 12 V"* on page 29).


The water tank is located in a bed box on the left side at the front of the caravan, and fresh water is filled through the external water filler with a lockable lid (see picture *"Filling with fresh water"*).

If a 10 litre water tank is installed, it is located in the sink unit.



Water tank

The system has an external drainage valve. The valve is located under the floor on the left side of the caravan, at the front adjacent to the water tank. Under the floor by the valve, there is a cone for draining the water tank and a hose for bleeding it. The valve is open when the handle is parallel with the caravan lengthways, and closed when the handle is at right angles to the caravan.

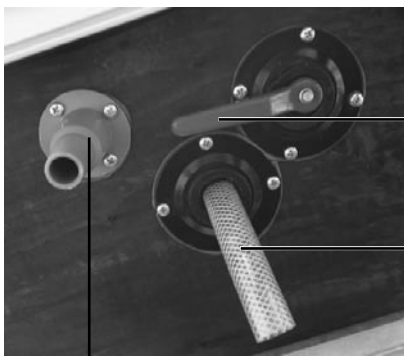

Drainage valve

Ventilation hose

Drainage

At temperatures below -30°C there is a risk of the drainage valve under the floor freezing. In order to thaw out the valve, undo the valve handle and cover the end of the shaft with an insulating material. The valve will then thaw out in a few hours.

Filling with fresh water

The fresh water tank is filled through the external water filler with a lockable lid.

Before filling, close the drainage valve for the water tank, as well as all taps and the drainage valve for the water heater (see pictures *"Emptying the fresh water"* on page 60).

After filling with water, the system may need to be bled. Open a water tap and leave it open until water runs out of it.



Filling with water



Don't forget to close the drainage valve for the fresh water tank before filling.

Also check that all taps and the drainage valve for the water heater are closed, and that the bleed screw for the water heater is closed.

Filling the extra 10 litre water tank

In caravans that are also equipped with the 10 litre water tank, the water is filled by undoing the strap holding the bottle. Then unscrew the lid and take the tank to fill it up.

Remember to secure the bottle with the strap after filling.


Emptying the fresh water

If the caravan is to be left standing for an extended period, or if the temperature while it is pitched will be below 0°C and the caravan is to be left unheated, the water system must be emptied. The caravan's water tank should be cleaned at regular intervals when it has been used.

To empty the water system:

1. Open the drainage valve for the tank, which is generally located under the caravan directly below the water filler.
2. Turn off the switch for the water pump on the control panel, and set the tap on the sink to fully open and hot.
3. Open the water heater's drainage valve (the valve should be pointing straight up) and then the bleed screw. The drainage valve is located on the floor, beside the boiler. The bleed screw is located on the boiler.

Drainage valve, water heater (in closed position)

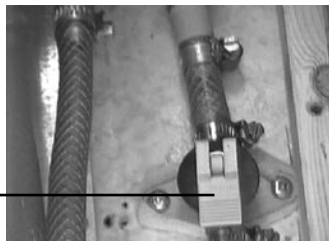

Bleed screw, water heater



4. Wait until the water has run out of the water heater. If it does not start to flow out properly, you can blow gently into the tap at the sink. Place a bucket under the drain to catch the water.
5. Turn on the switch for the water pump on the control panel, and leave the tap on the sink open for approximately 30 seconds in either the hot or cold position, or until all the water has dripped out. Repeat this procedure in the washroom, and don't forget to flush the cassette toilet until only air comes through. If the caravan's battery switch on the control panel is to be turned off, the taps in the washroom and at the sink should be left open.

6. The tap for the water heater is left open. The drainage valve for the water tank should be closed.

If the extra 10 litre water tank is installed, this must also be emptied.

Don't forget to empty the drainage system as well before pitching. See "*Emptying the drainage system*" on page 61.



Remember that when the caravan is left unheated, or is left for any extended period, the water and drainage systems must be emptied.

Cleaning the water tank

After the water system has been used for a period, there may be bacterial and algae growth in the tank. The tank should therefore be cleaned at least a couple of times a year. You should ideally clean the entire water system.

Never clean the tank with a dishwashing brush and dishwashing detergent. This could scratch the tank, providing bacteria and algae with a much better foothold.

It is therefore better to clean the tank chemically, using special chemicals intended for tank cleaning that can be purchased from shops. These chemicals can be purchased in liquid form or as tablets.

Mix with water and pump the mixture through the entire water system, then allow it to stand for a while. Then rinse through carefully with fresh water before filling the tank.



Never clean the tank with a dishwashing brush and dishwashing detergent. This could scratch the tank, providing bacteria and algae with a much better foothold.



Remember to rinse out the water system carefully with fresh water after cleaning, before filling with water.

Drainage system

Most caravans are equipped with a 40-litre internal drainage tank. This means that the system is frost-proof in the winter, and there are no problems with frozen, overfilled buckets. During short stops, you can also take care of your dishwashing etc. without difficulty. Of course, the system can be used as normal by means of the waste water being allowed to run directly down into the waste water sack supplied.

In caravans without drainage tanks, the waste water sack is connected to the external cone and the valve is set in the open position before starting to use the drainage system.

The drainage system is equipped with an external drainage valve. The valve is located under the floor on the left side of the caravan at the rear or on the left side at the front adjacent to the drainage tank. Under the floor by the valve there is a cone for connecting the waste water sack supplied and a hose for bleeding. Read more about emptying in the section “*Emptying the drainage system*”, to the right.

At temperatures below -30°C there is a risk of the drain valve under the floor freezing. In order to thaw out the valve, undo the valve handle and cover the end of the shaft with an insulating material. The valve will then thaw out in a few hours.


Emptying the drainage system

If the caravan is to be left standing for an extended period, or if the temperature while it is pitched will be below 0°C and the caravan is to be left unheated, the drainage system must be emptied. The drainage tank should be cleaned at regular intervals when it has been used. Clean the tank in accordance with “*Cleaning the drainage tank*” on page 62.


The drainage tank holds approximately 40 litres. It is emptied into the waste water sack supplied, or into another sealed container.

The drainage system is always emptied after the water system has been emptied.


1. Connect the waste water sack to the drainage valve's cone. Open the valve and empty the tank. The handle is in the open position when it is parallel with the caravan lengthways.
2. Plug the waste water sack's hose with the cone supplied with the sack, then carry it away and empty it in a specified place.
3. Empty the drainage tank for the cassette toilet (see page 65).

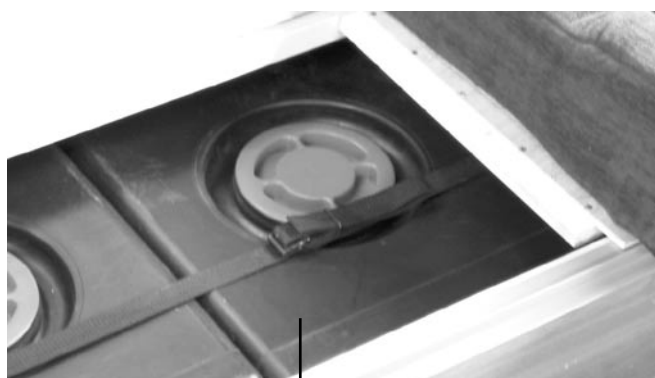

Drainage tank

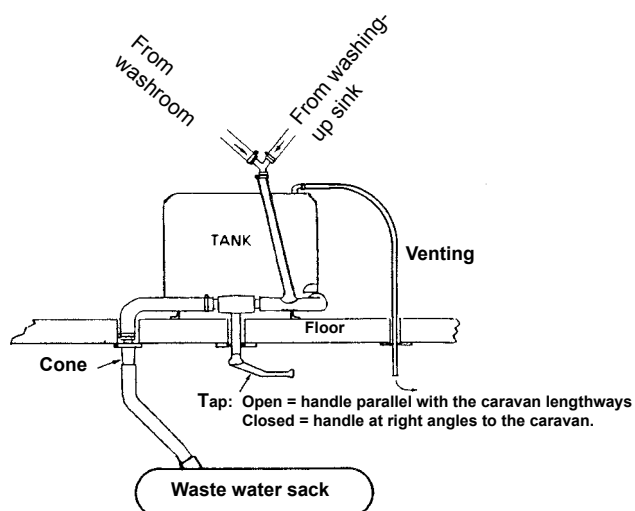

⚠ Remember that when the caravan is left unheated, or is left for any extended period, the water and drainage systems must be emptied. The caravan must not be tilting forwards when emptying the drainage system.

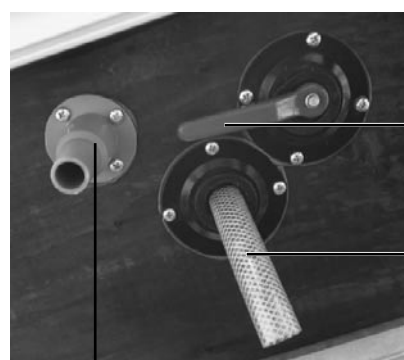

Drainage

Drainage valve

Ventilation hose

Cleaning the drainage tank

After the drainage system has been used for a period, there may be coatings of e.g. food grease and soap in hoses and in the tank. You should therefore clean the system at regular intervals. It is best to do this before pitching the caravan for the winter.

1. Fill the tank with 15 litres of hot water mixed with chlorine, by pouring in half the mixture at the washing-up sink and half the mixture at the wash unit.
2. Drive the caravan for a few kilometres to allow the solution to swish around in the tank.
3. Empty the drainage system and the tank in accordance with “*Emptying the drainage system*” on page 61.

Blockage in the drain

A good way of loosening a blockage in the drainage system is to use the waste water sack to force out the blockage.


1. Connect the waste water sack securely to the cone in the drain.
2. Open the drainage valve and fill the sack just over halfway.
3. Make sure that the drainage valve is open, then fold the sack in half and step on it firmly.
This generates a considerable back pressure, which generally removes the most troublesome blockages.
4. If this does not succeed, open the screw cap on the drainage tank and clean.

Cassette toilet


The caravans are equipped with a cassette toilet.

The toilet consists in principle of two unit: a revolving “toilet seat” and a cassette (waste tank) that is accessed via the hatch on the exterior of the caravan. The toilet is made of high-grade plastic and has a shiny surface, which makes it easy to clean and maintain.

The water for flushing the toilet comes via the fresh water system. For this reason, make sure that there is water in the fresh water tank in order for flushing to work.

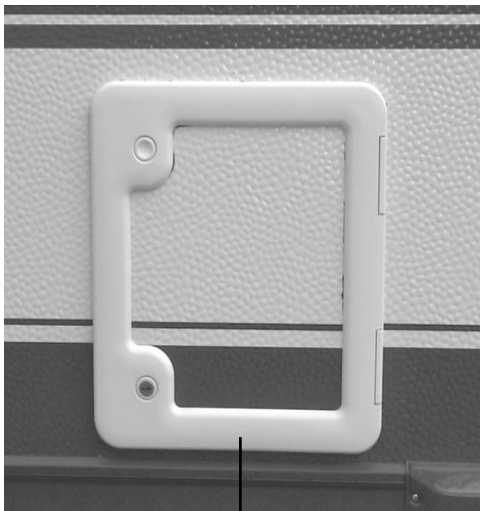

Cover, cassette toilet

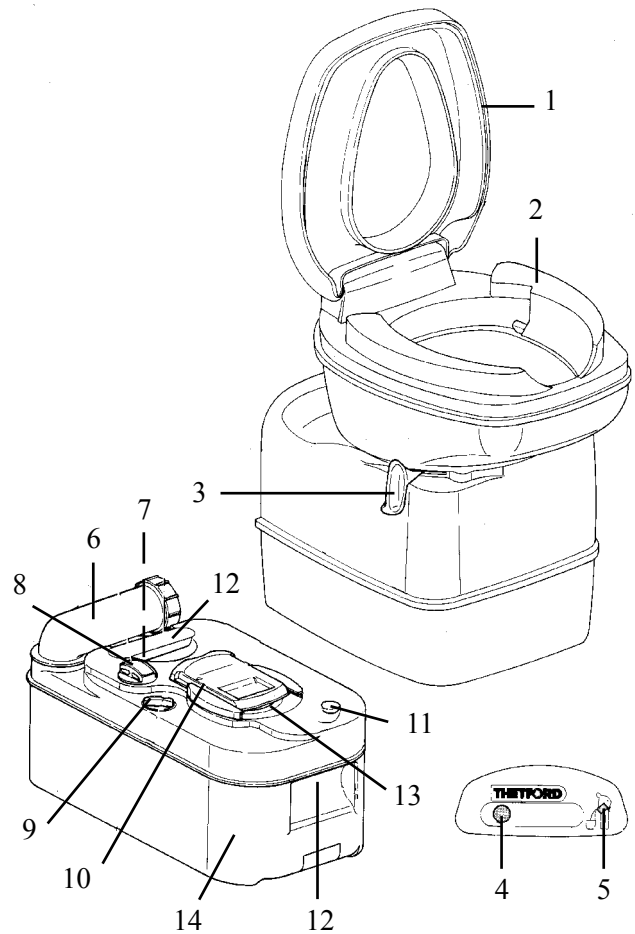

1. Removable seat and lid.
2. Revolving toilet bowl.
3. Handle for manually opening and closing the valve blade.
4. Switch for flushing.
5. Level indicator. The lamp lights when the waste tank needs to be emptied.
6. Revolving emptying tube.
7. Carrying handle.
8. Automatic air valve. Prevents overpressure and negative pressure in the waste tank when this is inserted in the toilet part.
9. Valve blade opener.
10. Cover panel. Slides automatically into place when the waste tank is removed.
11. Bleed button. For effective, splash-free emptying of the drainage tank.
12. Carrying handle.
13. Valve blade.
14. Cassette (the toilet's waste tank)

Preparations prior to use

See the pictures below.


1. Open the hatch on the side of the caravan. Lift the catch for the waste tank.
2. Pull the waste tank straight out until there is resistance. Tilt the tank down slightly, then lift out the tank with both hands.
3. Put the tank down with the emptying tube at the top. Turn the emptying tube upwards.
4. Unscrew the cap on the emptying tube. Fill decontamination fluid through the emptying tube. Then add a few litres of water to ensure that the bottom of the tank is fully covered before being used for the first time. Screw on the cap and rotate the emptying tube back to its original position.
NOTE! In warm weather and when there are long intervals between emptying, it may be necessary to add more decontamination fluid.
5. Return the tank to its position. Never employ unnecessary force when inserting or removing the tank. This could seriously damage the tank.

6. Make sure that the catch for the waste tank locks the tank securely in the inserted position. Close and lock the hatch.

⚠ Never try to remove or insert the waste tank in the toilet with force. This could seriously damage the toilet.

⚠ Never add decontamination fluid directly through the toilet bowl when the valve blade is closed. In e.g. warm weather or at varying altitudes, pressure can arise in the waste tank that can result in the contents being forced out, which can cause splashes when the valve blade is opened. Open and close the valve blade before each use to equalise the pressure. At the same time, make sure that the toilet lid is closed.

⚠ The valve blade must be closed when the waste tank is to be pulled out of or slid into the toilet.

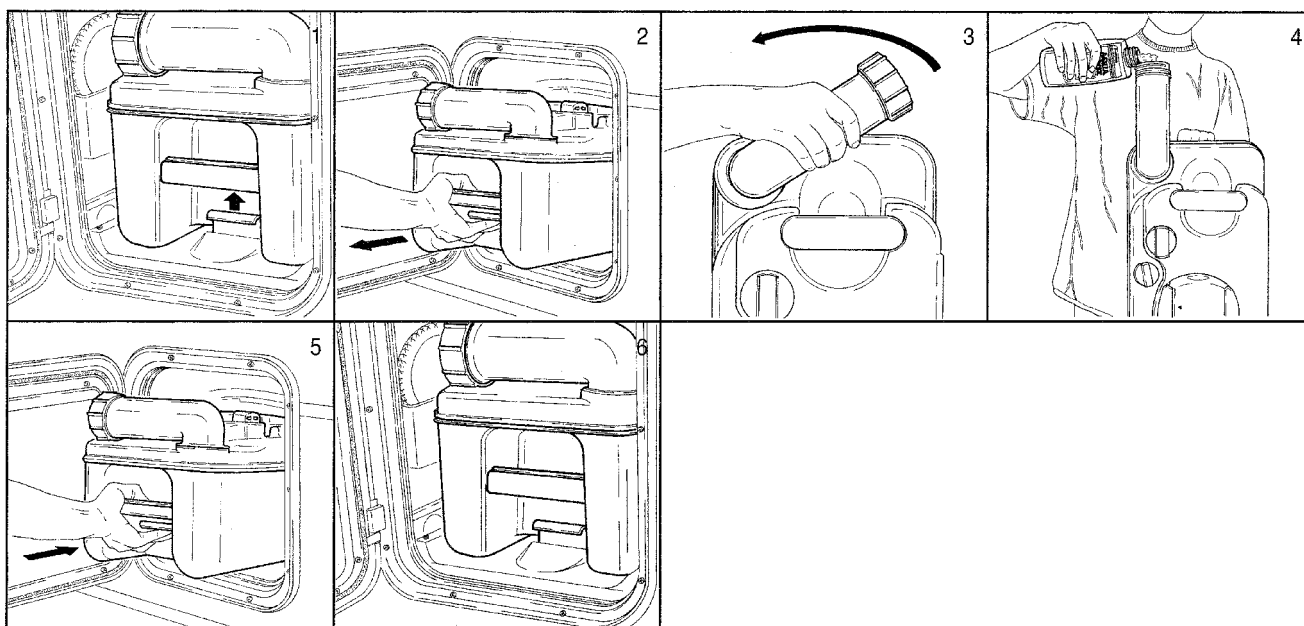

Flushing

7. Rotate the toilet bowl to a suitable position if required.
8. Press the flush button and flush a little water into the toilet bowl. Flushing ceases when the button is released.
9. After use, the toilet bowl is emptied by opening the valve blade. This is done by turning the handle on the underside of the bowl anti-clockwise.
10. Flush the bowl clean by pressing the flush button. Then close the valve blade by turning the handle clockwise.
The toilet can also be used with the valve blade open, which means that the waste can go directly down into the waste tank.
11. Make sure that the valve blade is closed, and open the hatch on the side of the caravan. Lift the catch for the waste tank and pull the tank straight out until there is resistance. Tilt the tank down slightly, then lift it out with both hands.
12. Carry the tank using the handle on the tank's short side, with the emptying tube facing up, to an ordinary toilet or to some other specified emptying point. Put down the tank and rotate the emptying tube forwards.

13. Unscrew the cap on the emptying tube. Grip the waste tank's handle nearest the emptying tube with one hand. Grip the rear handle with your other hand, so that the bleed button can be pressed during emptying. To make sure there are no splashes, you should hold the button pressed throughout the emptying procedure. When the waste tank is empty, rinse the valve blade and the tank clean with ordinary water.


Then prepare the tank for use in accordance with the section "*Preparations prior to use*" on page 64.

△ The valve blade must be closed when the waste tank is to be pulled out of or slid into the toilet.

Emptying the waste tank

The waste tank holds approximately 17 litres. The toilet has a level indicator that lights up at a volume of approximately 15 litres. Empty the tank when the level indicator lights. The reserve capacity is approximately 2 litres. Don't let the waste tank become overfull. If this should occur, see "*Actions in the event of problems*" on page 66.

△ Don't let the waste tank become overfull.

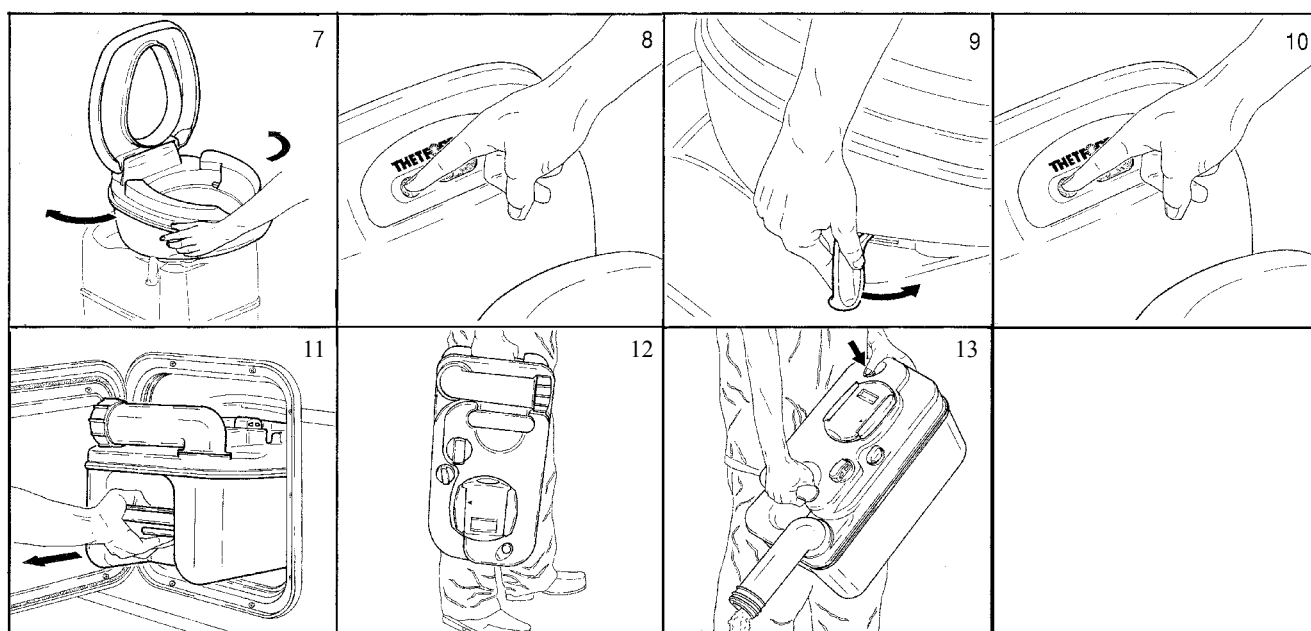

Winter storage

When the toilet is not used during the winter, it is important to prepare it for winter storage. As the toilet's flush water is taken from the caravan's fresh water system, the following must be carried out before winter storage.

1. Press the flush button while emptying the fresh water tank (see "*Emptying the fresh water*" on page 60). This opens the electric solenoid valve, allowing the water in the pipes to run back.
2. Empty the waste tank. Leave the cap for the emptying tube off in order to keep the waste tank dry.

Actions in the event of problems

- **The toilet does not empty when it is flushed.**
Probable cause: The waste tank is overfull.
Do not remove the waste tank. Open the valve blade and leave it open.
Open the outer hatch on the side of the caravan. Turn out the emptying tube. Place a sufficiently large container or bucket under the tube. Open the cap carefully. Allow the contents of the tank to run down into the container or bucket. Replace the cap on the emptying tube and turn the tube back.
DO NOT MOVE THE TANK: Go into the caravan and close the valve blade. Take out the tank as normal for emptying.
- **Unpleasant odour.**
Use the correct amount of decontamination fluid in the waste tank in accordance with the instructions on the bottle. In warm weather and when there are long intervals between emptying, the doses may need to be increased.
- **Soiled toilet bowl after flushing.**
Fill the toilet bowl with water up to the same height as the soiled area. The next flush will rinse away the soiling.
TIPS: Leave the valve open during use.
- **No flush.**
Check that there is sufficient water in the water tank. Check the fuses both on the 12 V control panel and in the toilet (3 A fuse). In order to access the fuse most easily, which is located up to the left in the space for the waste tank, the tank must first be removed.
The toilet can also be flushed by hand by pouring water into the toilet bowl from a separate container.

- **The valve blade cannot be opened.**
Overpressure may occur in the waste tank, causing the valve blade to be pressed against the top of the tank. In this case, the tank must be bled: Open the hatch on the side of the caravan and turn out the emptying tube. Carefully unscrew the cap for the emptying tube. Spray a little silicone on the valve blade and apply a little silicone grease on the underside of the gasket.
- **The waste tank cannot be removed.**
Check that the valve blade is closed.
Check that the catch holding the waste tank in place can move freely.
- **Other faults.**
Contact your dealer.



Never try to remove or insert the waste tank in the toilet with force. This could seriously damage the toilet.

Cleaning and maintenance

The blade valve's gasket in the waste tank is made of rubber, and therefore needs to be cleaned and lubricated regularly.

1. Remove the cover panel over the blade valve by pressing it towards the emptying tube by hand.
2. Open the valve blade by turning the valve blade control anti-clockwise. Clean the blade valve gasket with water. Allow the gasket to dry and then lubricate it with silicone spray or cooking oil (the surface that comes into contact with the valve blade is most important).
3. Clean the waste tank by rinsing it thoroughly with water. For the toilet bowl, lid and seat, and for other parts of the toilet and the waste tank, a mild soap solution or dishwashing detergent is recommended.



Never use detergents that contain chlorine, solvents or similar substances when cleaning the toilet, as they can damage the plastic.

Dealers & service workshops

SWEDEN

ALVESTA

Cajs Husvagnar i Alvesta AB
Fabriksgatan 18
342 21 Alvesta
Tel. 0472-109 85
Fax 0472-474 14
Caj Kjellsson, Håkan Kjellsson
cajshusvagnar@telia.com

BODEN

Husvagnscenter i Boden AB
Björkelundsvägen
961 32 Boden
Tel. 0921-150 00
Fax 0921-109 90
Nonne Henriksson

BORLÄNGE

Loods Fritids AB
Tunavägen 283 (Romme)
781 73 Borlänge
Tel. 0243-155 50, 156 11
Fax 0243-158 18
Stefan Lood
Ronnie Wilhelmsson

BORÅS/ Hyssna

Forsbergs Fritidscenter AB
Solbacken
510 22 Hyssna
Tel. 0320-305 50
Fax 0320-305 55
Christian, Mathias, Arne, Lars, Rune
info@forsbergsfritidscenter.se

DOROTEÅ

Dorotea Husvagnscenter AB
Storgatan 1
917 31 Dorotea
Tel. 0942-103 00
Fax 0942-101 33
Anders Ullén
info@doroteahusvagnscenter.com

ENKÖPING

Henrikssons Husvagnar AB
Sparrsätra / Lådövåg 70
745 95 Enköping
Tel. 0171-44 70 00
Fax 0171-44 70 68
Stig Henriksson
Crister Henriksson

ESKILSTUNA

Mälardalens Caravan Center AB
Böcklinge, Stora blå
640 40 Stora Sundby
Tel. 016-14 72 12
Fax 016-641 81
Roland Möller

FALKENBERG/ Slöinge

Slöinge Fritidscenter AB
Box 44 / Göteborgsvägen
310 50 Slöinge
Tel. 0346-405 50
Fax 0346-405 50
Vigh Johansson
info@slöingefritidscenter.se

FALUN

CJ:s Husvagnsservice
PI 430 Högalund / Centralvägen 7 B
791 46 Falun
Tel. 023-329 96
Fax 023-329 95
Conny Jonsson
Fredrik Jonsson

GÄVLE/ Valbo

Caravan & Marine i Valbo AB
Riavägen 5
818 33 Valbo
Tel. 026-13 30 40
Fax 026-13 41 80
Jan Lewrén

HELSINGBORG

Provia Mobil AB
Sydhamsngatan 25
252 28 Helsingborg
Tel. 042-38 12 50
Fax 042-38 12 55
Kjell Wantzin, Fredrik Hvarfen
info@provia.se

KARLSTAD/ Hammarö

Husvagnspoolen i Värmland AB
Skraggevägen 8
663 41 Hammarö
Tel. 054-52 46 66
Fax 054-52 16 66
Magnus Westerberg
info@husvagnspoolen.se

KONGÅ

Bil & Husvagnsservice i Konga AB
Postlåda 1256
362 94 Tingsryd
Tel. 0477-164 27, 161 71
Fax 0477-163 44
Ove Morin

LAXÅ

Marin & Fritid
Klockartorp
695 32 Laxå
Tel. 0584-122 22
Fax 0584-122 55
Johnny Leinonen

LINKÖPING

Kurts Husvagnar i Linköping AB
Låskolvägen 4
589 41 Linköping
Tel. 013-14 60 10
Fax 013-14 60 11
Jörgen Trygg
jorgen@kurtsusvagnar.se

LÖDDEKÖPING

Holiday Inn
Produktvägen 18
246 43 Löddeköping
Tel. 046-72 72 62
Fax 046-72 72 63
Per Rasmusson

MALMÖ/ Arlööv

Skånes Husvagnscentrum
Testvägen 3
232 37 Arlööv
Tel. 040-43 60 30
Fax 040-43 13 61
Thomas Karlsson, Marianne Karlsson,
Anita Nylander
info@skaneshusvagnscentrum.se

MUNKEDAL

Arctic Fritid AB
Tradevägen Hoby
455 91 Munkedal
Tel. 0524-494 80
Fax 0524-494 81
Joacim Carlzon
info@arcticfritid.se

NORSBORG

Leif Jansson Husvagnar AB
Kumla Gårdsväg 11
145 63 Norsborg
Tel. 08-531 756 88
Fax 08-531 758 66
Leif Jansson

SOLLEBRUNN

Sollenbrunn's Husvagnscenter
Källbacken 5
466 95 SOLLEBRUNN
Tel. 0322-833 10
Fax 0322-833 20
Anders Åberg

STHLM/ Sollentuna

Husvagns-Specialisten i Uppl.-Väsby
Box 2056 / Bergkällavägen 22
194 02 Upplands-Väsby
Tel. 08-594 112 20
Fax 08-594 112 29
Anders Hägg
anders.hagg@swipnet.se

SUNDSVALL

KS Husvagn & Skoter AB
Axvägen 2
853 50 Sundsvall
Tel. 060-15 17 70
Fax 060-17 27 22
Kenneth Sveldander, P-O Brandström

UMEÅ

BW Husvagnar AB
Formvägen 10 A
906 21 Umeå
Tel. 090-18 92 25
Fax 090-18 82 32
Bengt Wännman, Peter Larsson
info@bwhusvagnar.se

VIMMERBY

Specialhantverk i Vimmerby AB
Rävbacksgatan 12
598 35 Vimmerby
Tel. 0492-124 09
Fax 0492-124 09
Christoffer Dahlgren
specialhantverk@telia.com

VISBY

Bilcompaniet AB
Box 1079 / Skarphällsgatan 1
621 21 Visby
Tel. 0498-24 77 55
Fax 0498-24 71 90
Per Möllerfors, Jan Törngren

VÄSTERÅS

AB S & A Perssons Husvagnar
Barkborregatan 6
721 35 Västerås
Tel. 021-13 90 00
Fax 021-12 22 90
Sigge Persson, Mikael Broberg
mm.caravane@quicknet.se

ÖSTERSUND

Conny Wikström Husvagnar AB
Brosslarvägen 9
831 72 Östersund
Tel. 063-800 41
Fax 063-801 04
Conny Wikström

AFFILIATED
COMPANIES IN
SWEDEN

UPPSALA

Husvagns-Specialisten
Stångjärnsgratan 6
753 23 Uppsala
Tel. 018-13 09 20
Fax 018-60 09 69
Thomas Hägg

SERVICE
WORKSHOPS IN
SWEDEN

BANDHAGEN

Svensk Camping & Fritid AB
Selaövägen 1
124 40 Bandhagen
Tel. 08-749 33 88
Fax 08-749 33 84
Björn Nilsson

HÖRNEFORS

TL Husvagnsservice AB
Bangatan 7
910 20 Hörnefors
Tel. 0930-203 50

HÖÖR

Höör's Husvagn & Fritid AB
Box 186 / Frostavallsvägen
243 23 Höör
Tel. 0413-233 30
Fax 0413-225 20
Jan Olov Rosenquist

JÖNKÖPING

Husvagnsservice AB
Oskarshallsgatan 14
553 03 Jönköping
Tel. 036-30 04 30

KUNGSBACKA

Göteborgs Husvagnsservice
Ångsåvägen PI 3222
434 93 Kungsbacka
Tel. 0300-275 16
Fax 0300-284 67
Anders Magnusson

NORRKÖPING

Husvagnsverkstan Dick Wiman
Importgatan 43
602 28 Norrköping
Tel. 011-10 29 90
Dick Wiman

SKELLEFTEÅ

AB Bröderna Lindgrens Bilverkstad
Tjärnvägen 8
931 61 Skellefteå
Tel. 0910-371 44
Fax 0910-77 82 14
Kent Lindgren

STENSTORP

Stenstorps Husvagnsservice AB
Hantverkaregatan 32
520 50 Stenstorp
Tel. 0500-45 06 56
Fax 0500-45 06 57
Styrbjörn

UPPLANDS-VÄSBY

H. Jakobssons Husvagnsservice
Centralv. 2-4
194 82 Upplands-Väsby
Tel. 08-590 760 11
Fax 08-590 750 52
Hasse Jakobsson

ÖRNSKÖLDVİK

Servicegaraget
Krokvägen 6
891 41 Örnsköldsvik
Tel. 0660-540 80
Per-Erik Selin

NORWAY / 0047

ALTA

Alta Autosenter AS
Altaveien 73
N-9511 Alta
Tel. 78-449844
Fax 78-449840
Magne Thomassen
mail@alta-autosenter.no

ARENDALE

Jørgen Jensen
Stoaevien 27
N-4848 Arendal
Tel. 37-022013, 15933
Fax 37-026950
Jørgen Jensen
post@jorgenjensen.no

BARDUFOSS

Lians Caravan & Fritid AS
Andslimoen
N-9325 Bardufoss
Tel. 77-830630
Fax 77-830640
Arild Lian, Jan-Ove Fagerli
post@liancaravan.no

BERGEN / Sotra

Fritid Vest A/S
N-5357 Fjell
Tel. 56-336230
Fax 56-336016

roald.forde@fritidvest.no

BODØ

Caranord A/S
Hunstad
N-8019 Bodø
Tel. 75-563755, 527755
Fax 75-527768
Hårek Jensen, Pål Hjemgaard
butikk@caranord.no

ELEVERUM/ Kongsv.

Tores Caravansenter AS
N-2265 Namnå
Tel. 62-944550
Fax 62-944828
Tore Brattlie
butikken@tores-caravan.no

FREDRIKSTAD

Fredrikstad Caravanservice AS
Stabburveien 8
N-1617 Fredrikstad
Tel. 69-334499
Fax 69-334521
fr.stadcaravan@c2i.net

GJÖVIK

Øyhus Caravan Senter AS
Thomasdalen 1
N-2803 Gjøvik
Tel. 61-140100
Fax 61-140111
trond@øyhus-bil.no

HAMAR/ Brumunddal

Høisveens Caravan A/S
Strandveien 14
N-2380 Brumunddal
Tel. 62-343500
Fax 62-343490
Tor Bekkvold, Per Berntsen
post@hoisveencaravan.no

HAUGESUND

Caravan Senter AS
Ørpetveitsveien 59
N-5533 Haugesund
Tel. 52-716161
Fax 52-716162
rune@caravan-senter.no

KIRKENES

Sandnes Auto AS
Postboks 83
N-9916 Hesseng
Tel. 78-973700
Fax 78-998658
ernst.johansen@kirkenes.toyota.no

FINLAND / 00358**KRISTIANSUND**

Kristiansund Bil og Caravansenter AS
Bedriftsveien 4
N-6517 Kristiansund
Tel. 715-72150
Fax 715-72159
Kjell Löbersli
firmapost@bilogcaravan.no

MOSJÖEN

Fritidscenteret A/S
Leira 8
N-8663 Mosjøen
Tel. 75-188610
Fax 75-188611
snorre@fritidscenteret.no

NAMSOS

Namsos Fritid AS
Narvarvn. 5 B
N-7820 Spillum
Tel. 74-275099
Fax 74-270735
Gaute Wågan
n-fritid@frisurf.no

OPPAKER/VORMSUND

Tekno Maskin AS
Herbergåsen
N-2166 Oppaker
Tel. 63-907603
Fax 63-907417

post@teknomaskin.no

SKYTTA

Nor Fritid AS
Industriveien 1
N-1483 Skytta
Tel. 67-061313, Fax 67-060382
Birgitta Övstegård, Stein Övstegård,
André jr. Övstegård
postmaster@norcamp.no

SORTLAND

Caravan & Bilskadesentret AS
Vesterålsgt. 42
N-8400 Sortland
Tel. 76-120340
Fax 76-120341

cbs@nndata.no

SÖGNE/Kristiansand

Agder Bobil og Fritid A/S
Rosselandsv. 8
N-4647 Brennåsen
Tel. 38-169000
Fax 38-169003
Kjell Jörgensen
kjell-arthur@caravan-fritid.no

TRONDHEIM

Stjørdal Caravan & Fritid AS
Stavsjøveien 1
N-7550 Hommelvik
Tel. 74-827560
Fax 74-821881

epost@stjoerdalcaravan.net

HEAD OFFICE:

Lohja Caravan A/S
Postboks 2, Bryn
N-0611 Oslo
Tel. 22-645044
Fax 22-643295
Arild Olstad, Terje Olsen
Arild Olstad - ariol@soliferpolar.com
Terje Olsen - terol@soliferpolar.com
Rune Finkelsen - rune@soliferpolar.com

FORSSA

Forssan Vankkuri Ky
Murrontie 11
FI-30420 Forssa
Tel. 03-435 6330
Fax 03-422 4330

ismo.airaksinen@forssanvankkuri.inet.fi

HELSINKI/VANTAA

Helsinki Caravan Oy
Mestariintie 2
FI-01730 Vantaa
Tel. 09-276 6560
Fax 09-878 4356
etunimi.sukunimi@helsinkicaravan.fi
atso.muuronen@helsinkicaravan.fi

JALASJÄRVI

Jalasjärven Kalustetalo
Koskitie 14
FI-61600 Jalasjärvi
Tel. 06-456 0669
Fax 06-456 0701

jalasjarven.kalustetalo@saunalahti.fi

JOENSUU

Joen Caravan
Ukkolantie 16
FI-802 30 Joensuu
Tel. 050-527 1803

teemu.jaatinen@joencaravan.fi

JYVÄSKYLÄ

Jyväskärven Caravan Oy
Kuormaajantie 3
FI-40320 Jyväskylä
Tel. 014-449 9690
Fax 014-449 9699
etunimi.sukunimi@jyvascaravan.fi
juha.kayhko@jyvascaravan.fi

JÄRVENPÄÄ

MW-Caravan Oy
Vanha Yhdystie 7
FI-04430 Järvenpää
Tel. 09-4780 0345
Fax 09-4780 0349
ari@mw-caravan.fi
mika@mw.caravan.fi

KEMINMAA

Aulo Caravan Ky
Kisällinkuja 4
FI-94450 Kemimaa
Tel. 016-270 600
Fax 016-270 027

tapani.saonegin@aulacaravan.inet.fi

KOKKOLA

Kokkola-Caravan Oy
Höylämöntie 1
FI-67100 Kokkola
Tel. 06-822 4190
Fax 06-822 4079

info@autiocaravan.fi

KUOPIO

H. S. Pitkänen Oy
Asemakatu 28
FI-70100 Kuopio
Tel. 017-550 5200
Fax 017-550 5225

reijo.kuosmanen@hspitkanen.fi

LAPPEENRANTA

City-Caravan Oy
Eteläkatu 3
FI-53500 Lappeenranta
Tel. 05-416 3005
Fax 05-416 3007

tapio.hirvonen@city-caravan.inet.fi

OULU

JP-Caravan Oy
Tyrväntie 6
FI-90400 Oulu
Tel. 08-562 9041
Fax 08-562 9050

jorma.laukkanen@jp-caravan.inet.fi

ROVANIEMI

Aula-Caravan Oy
Alakorkalontie 12
FI-96300 Rovaniemi
Tel. 016-319 600
Fax 016-319 900

martti.aula@aulacaravan.inet.fi

SALO

Auto-Simelius Oy
Örninkatu 8
FI-24100 Salo
Tel. 02-733 1550
Fax 02-733 1507

autosimelius@kolumbus.fi

TAMPERE

Tampereen Caravan Keskus Oy
Asestajankatu 3, Lakalaiva
FI-33840 Tampere
Tel. 03-279 9450
Fax 03-279 9452
esa@caravankeskus.com
mika@caravankeskus.com

TURKU

Ajox Oy
Teollisuuskatu 42
FI-20520 Turku
Tel. 20-743 5635
Fax 20-743 5636
karri@ajox.fi
ari@ajox.fi

SERVICE WORKSHOPS IN FINLAND**HAMINA**

Hamina Trailer
Teollisuuskatu 20
FI-49400 Hamina
Tel. 05-3448 480
Fax 05-3448 094

IISALMI

Iisalmen vauvu ja Sähköhuolto Oy
Yrittäjänkatu 14
FI-74100 Iisalmi
Tel. 0400-676 558
Fax 017-812 160

KEMINMAA

Merilapin Caravan-Huolto
Sannitie 6
FI-94450 Kemimaa
Tel. 016-270 603
Fax 016-270 603

KOKKOLA

Kokkolan Caravanhuolto
J. Autio Ky
Höylämöntie 1
FI-67100 Kokkola

KUOPIO

Kuopion Vauvahuolto Oy
Vanntiitie 7
FI-70460 Kuopio
Tel. 017-3643 899
Fax 017-2591 899

DENMARK / 0045**HEDEHUSENE**

Neergårds Camping A/S
Hovedgaden 532
DK-2649 Hedehusene
Tel. 46-56 16 98
Fax 46-59 00 10
Poul Neergård

ODENSE SO

Tarup Campingcenter
Agerhatten 31
DK-5220 Odense SO
Tel. 66-16 18 18
Fax 66-16 18 51
Jan Johanssen

CHRISTIANFELD

Christianfeld Camping Center
Hjernerupvej 5
DK-6070 Christianfeld
Tel. 74-56 21 00
Fax 74-56 21 83
Bent Bruun

HERNING

Camping Parken A/S
Tjelevej 10-12
DK-7400 Herning
Tel. 97-26 80 55
Fax 97-26 80 28
Christian Lauridsen
Carsten Kjaer

SCHWEIZ / 0041**FLURLINGEN**

Mobile Freizeit B. Hinder
Höhenstrasse 49
CH-8247 Flurlingen
Tel. 52-659 23 23
Fax 52-659 25 61
Urban och Birgitte Hinder
polar@mobile-freizeit.ch

NETHERLANDS / 0031**BRUMMEN**

Martens Caravanbouw
Voorsterweg 75
NL-6971 KA Brummen (Gld)
Tel. 0575-56 14 86
Fax 0575-56 20 98
Anja Martens

SOLIFER

Instruction book